



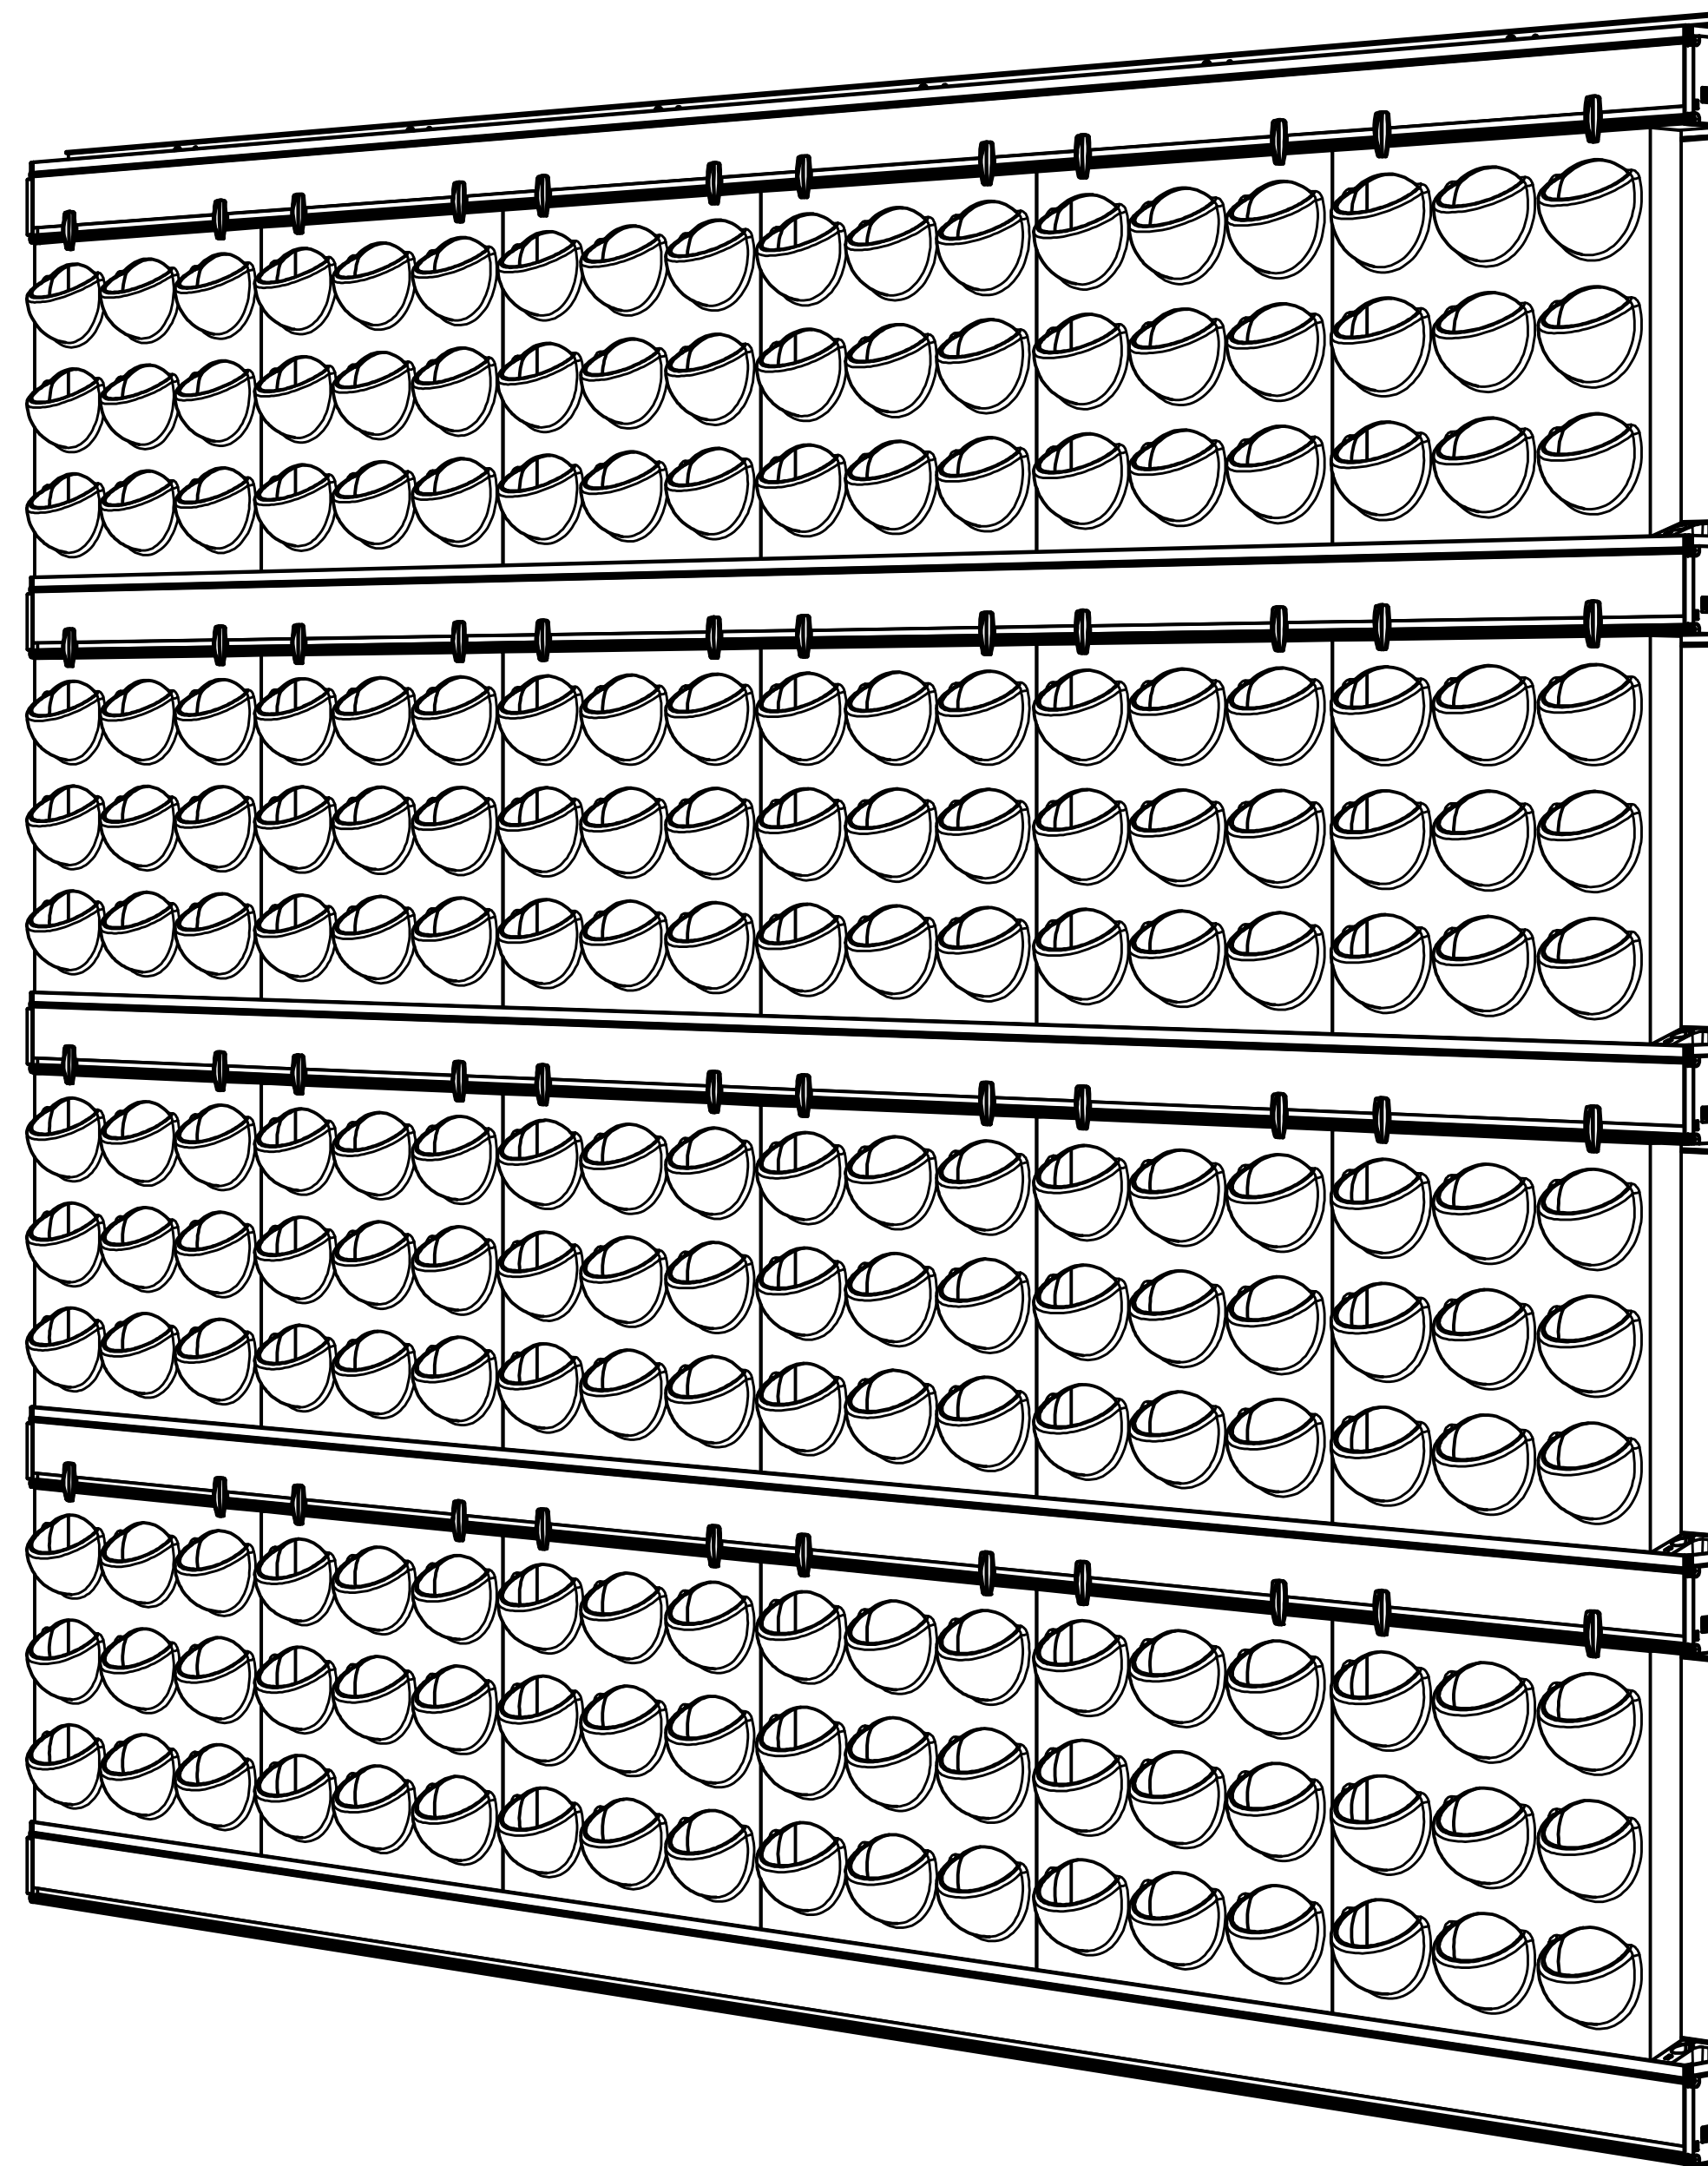


14-0122-99-06
fischer UX 8x50

32x

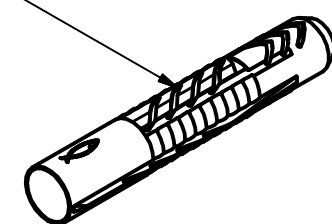


15-0089-00-01
Funnel

1x

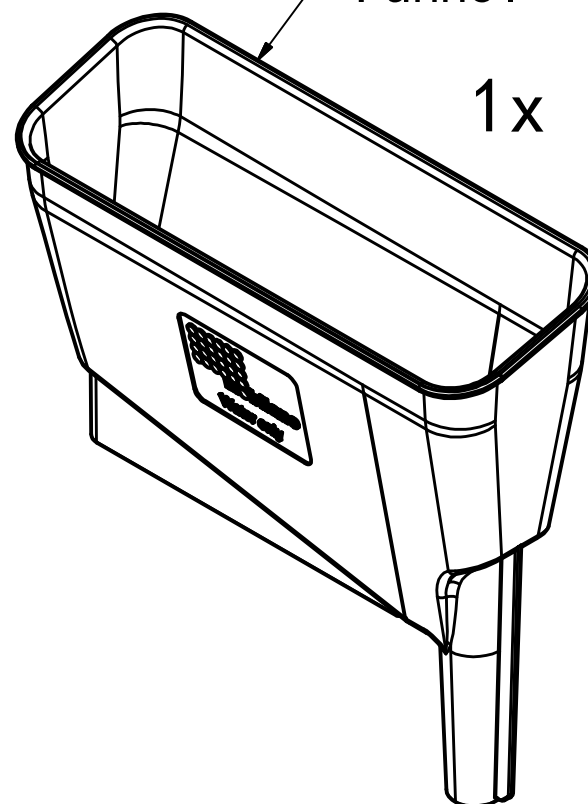


14-0122-99-07
fischer 5,0x60 CK RVS A2

32x

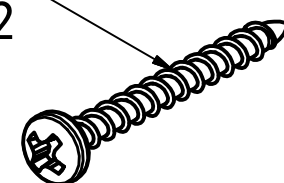


16-0151-01-01
Funnel Block Left

4x

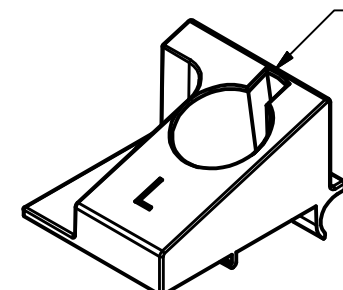

16-0151-01-02
Funnel Block Right

4x

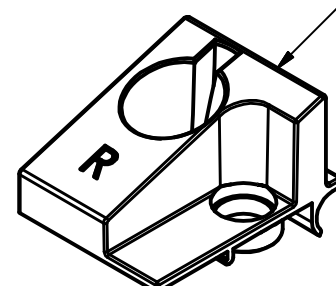


50x



14-0122-00-09
Cassette Clip

14-0179-01-00
Cassette

24x

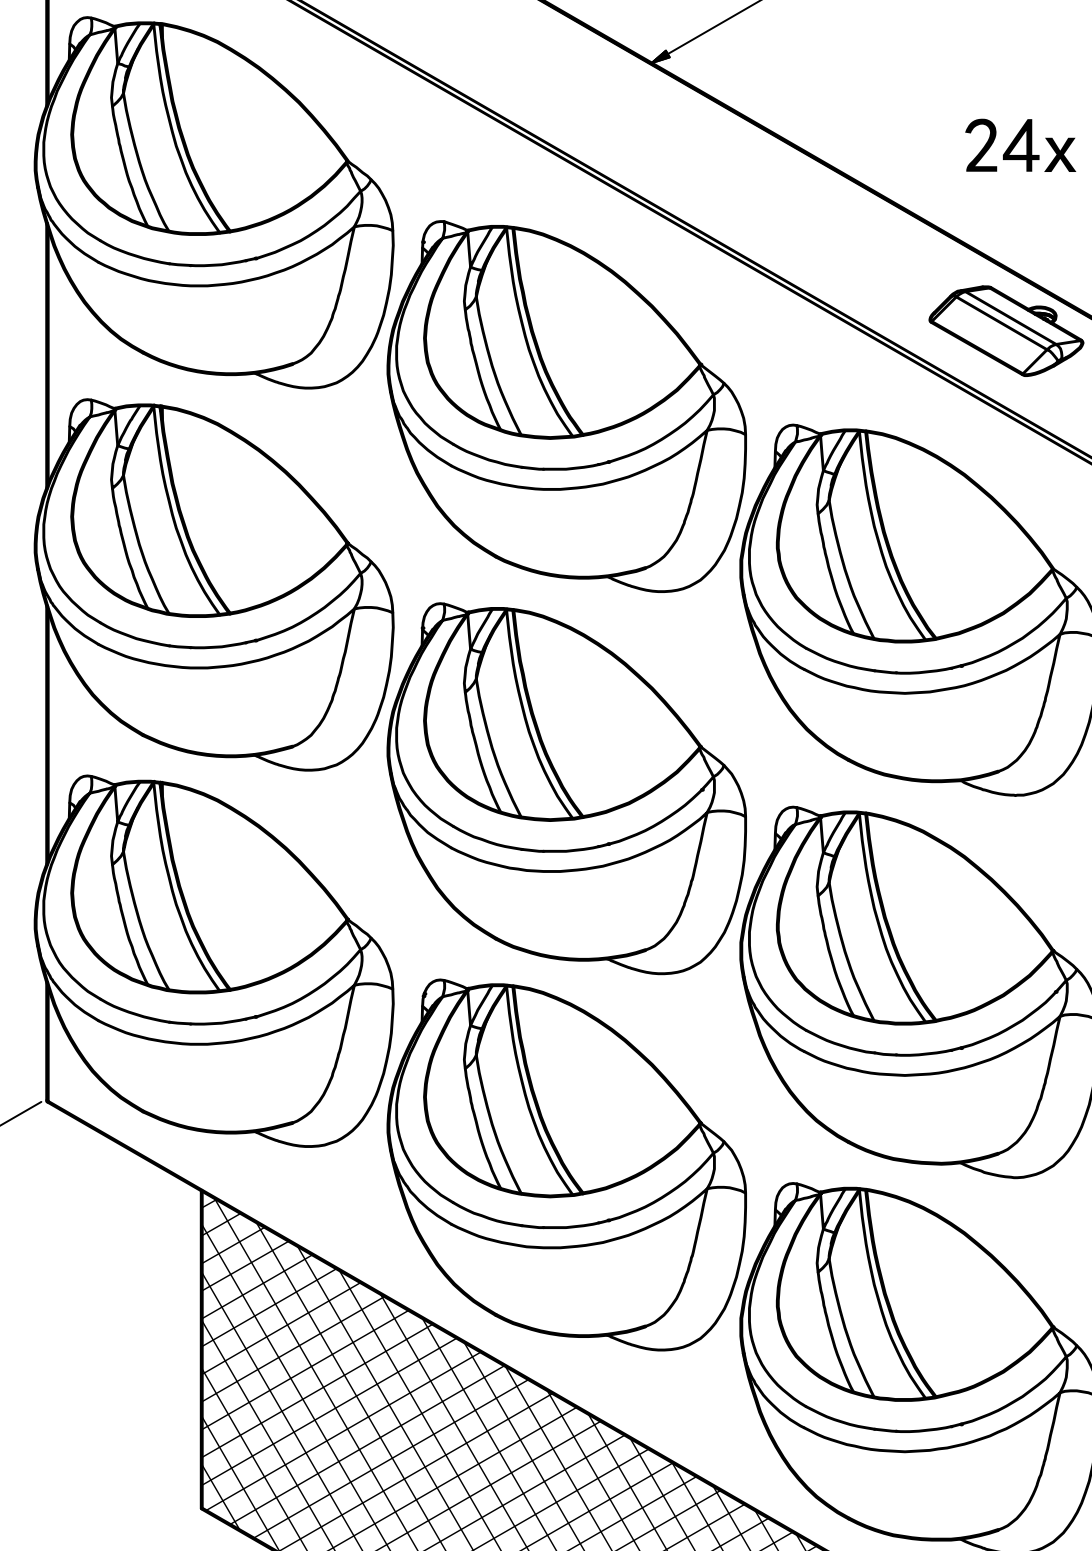


400 mm
[15,75"]

400 mm
[15,75"]

2455 mm
[96,65"]


14-0122-05-00
Profile

5x

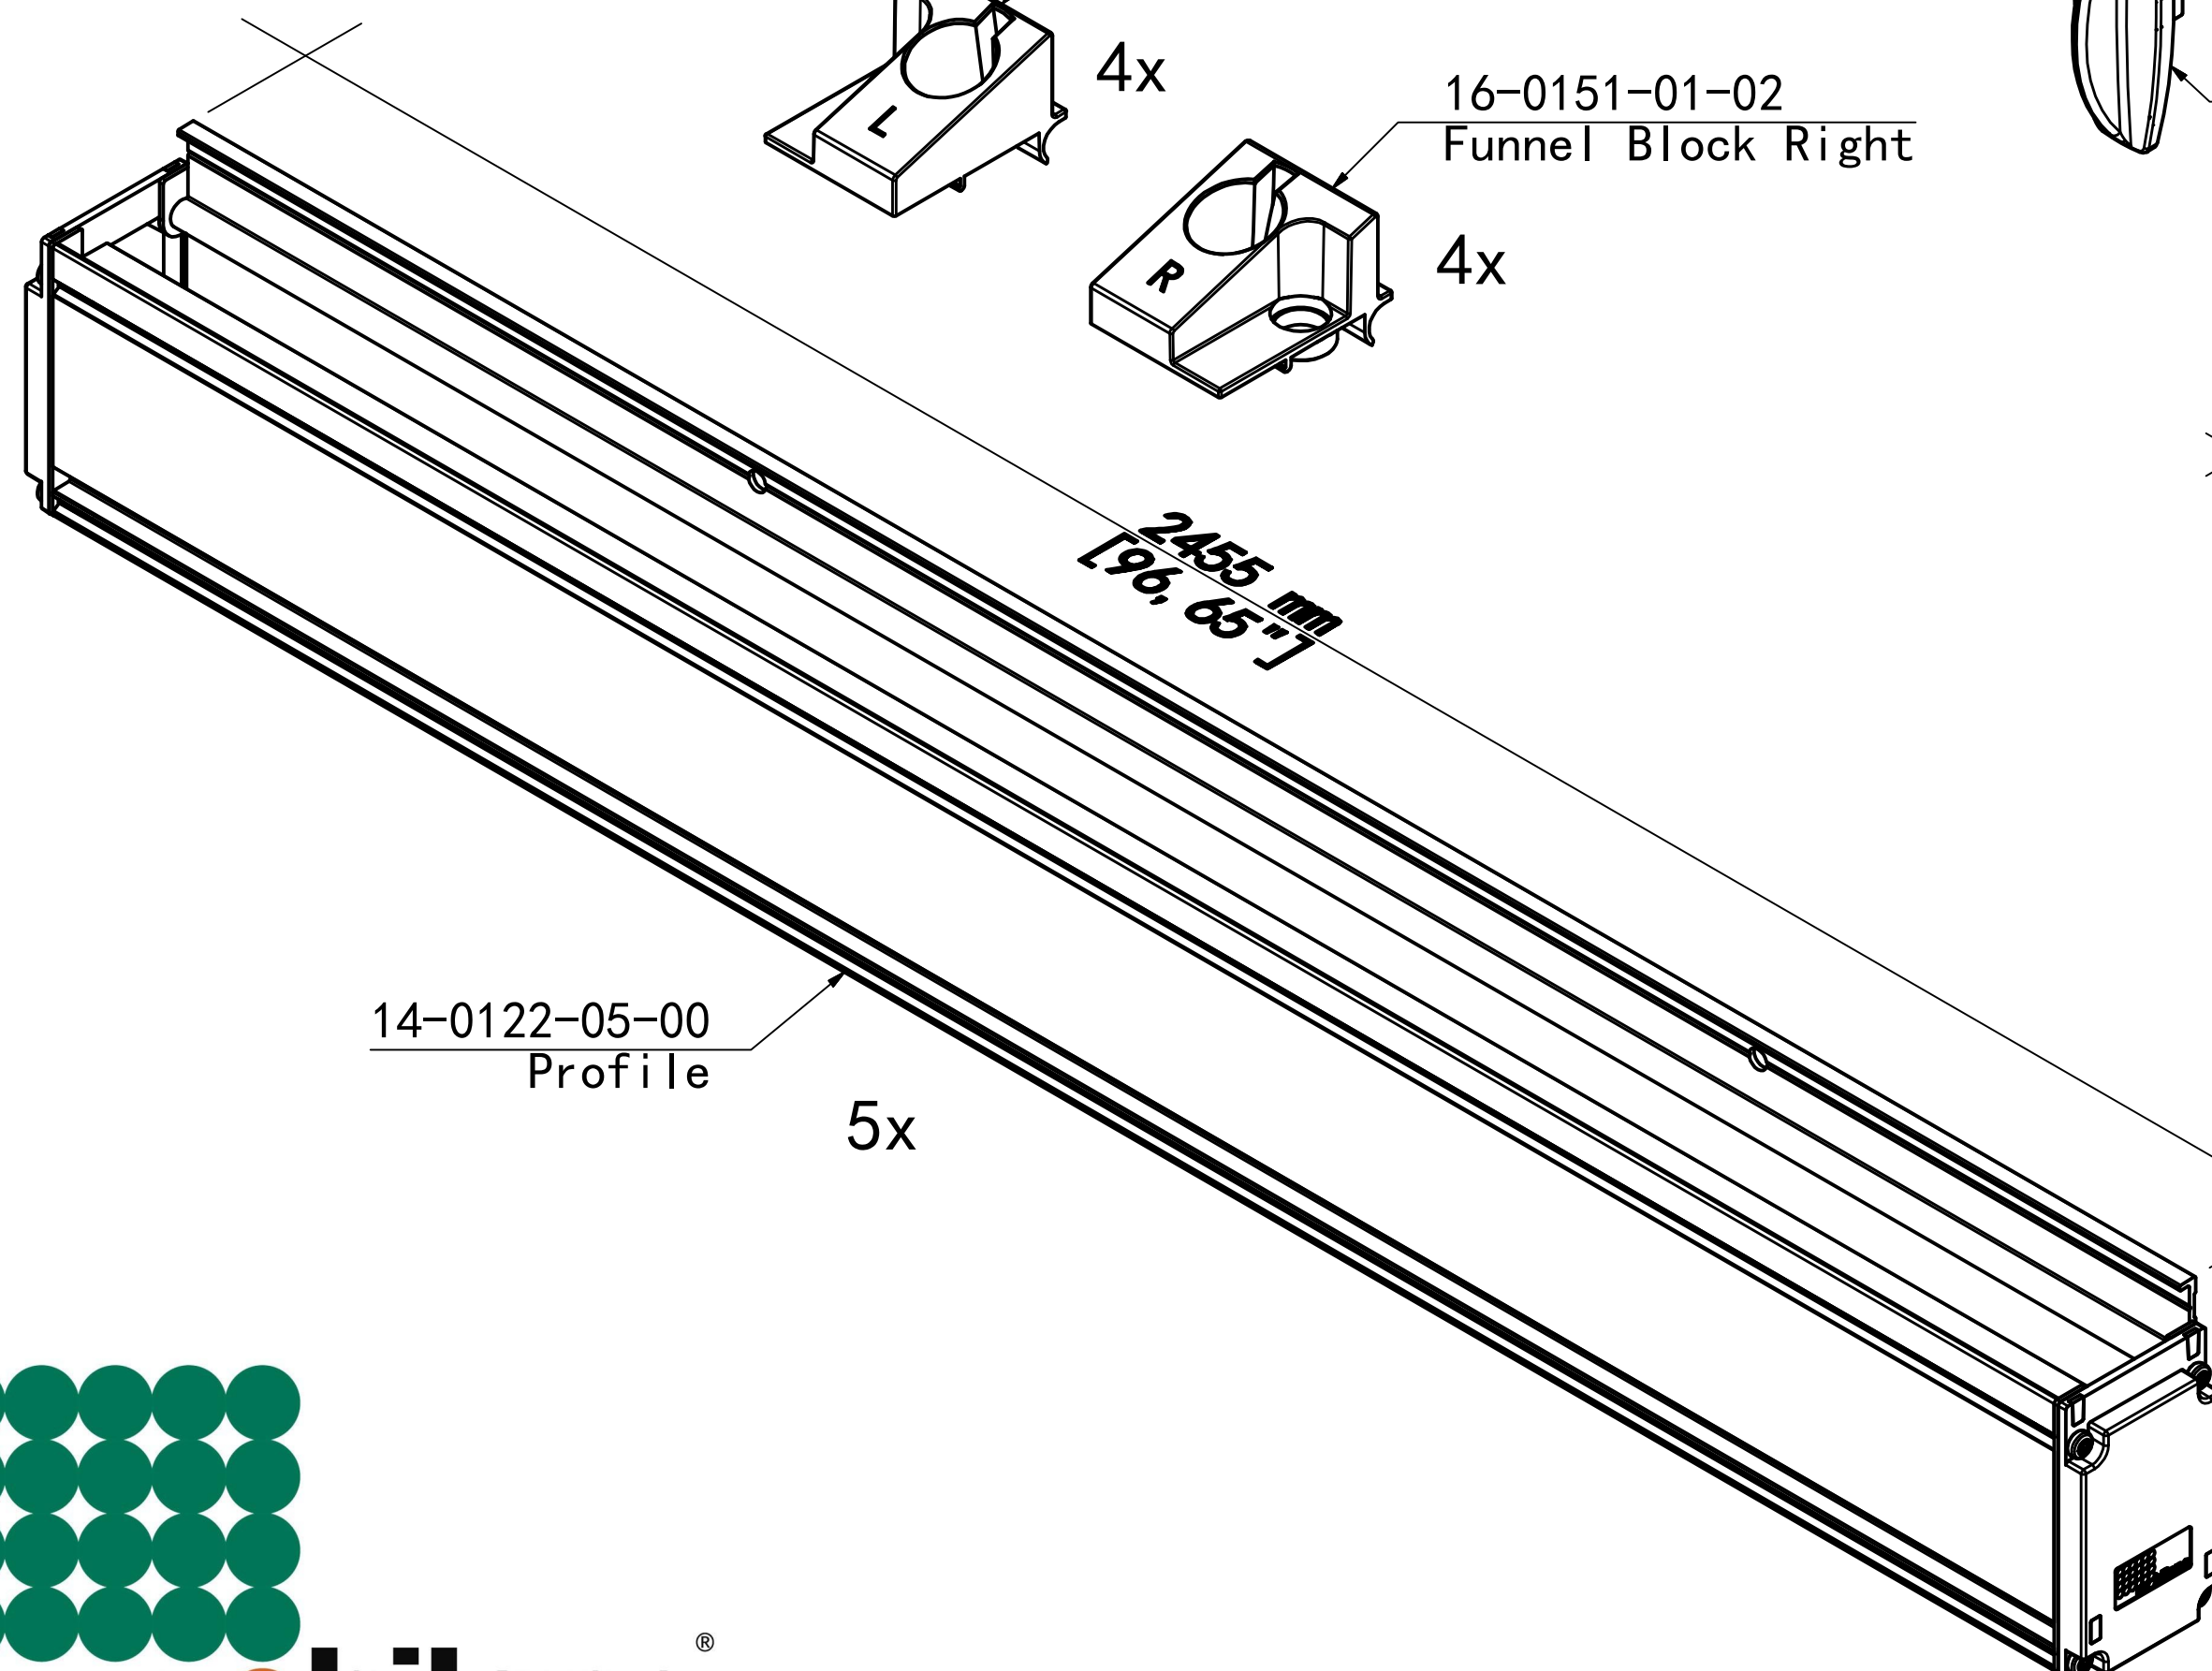


14-0122-00-06
Endcap Transparant

1x

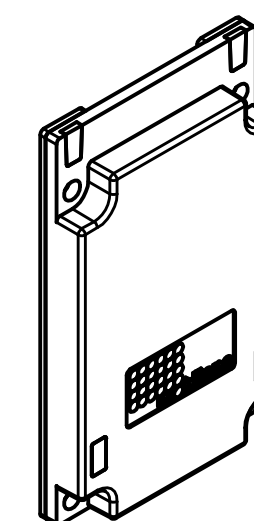


14-0122-99-05
DIN-7981/A2 3,9x19 T15



4x

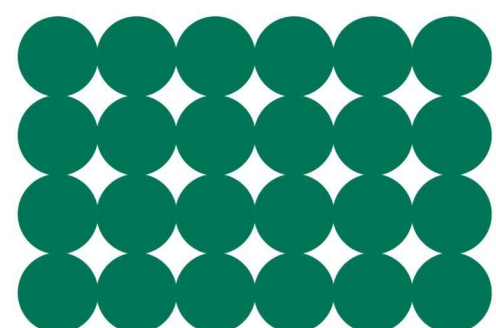


mobilane

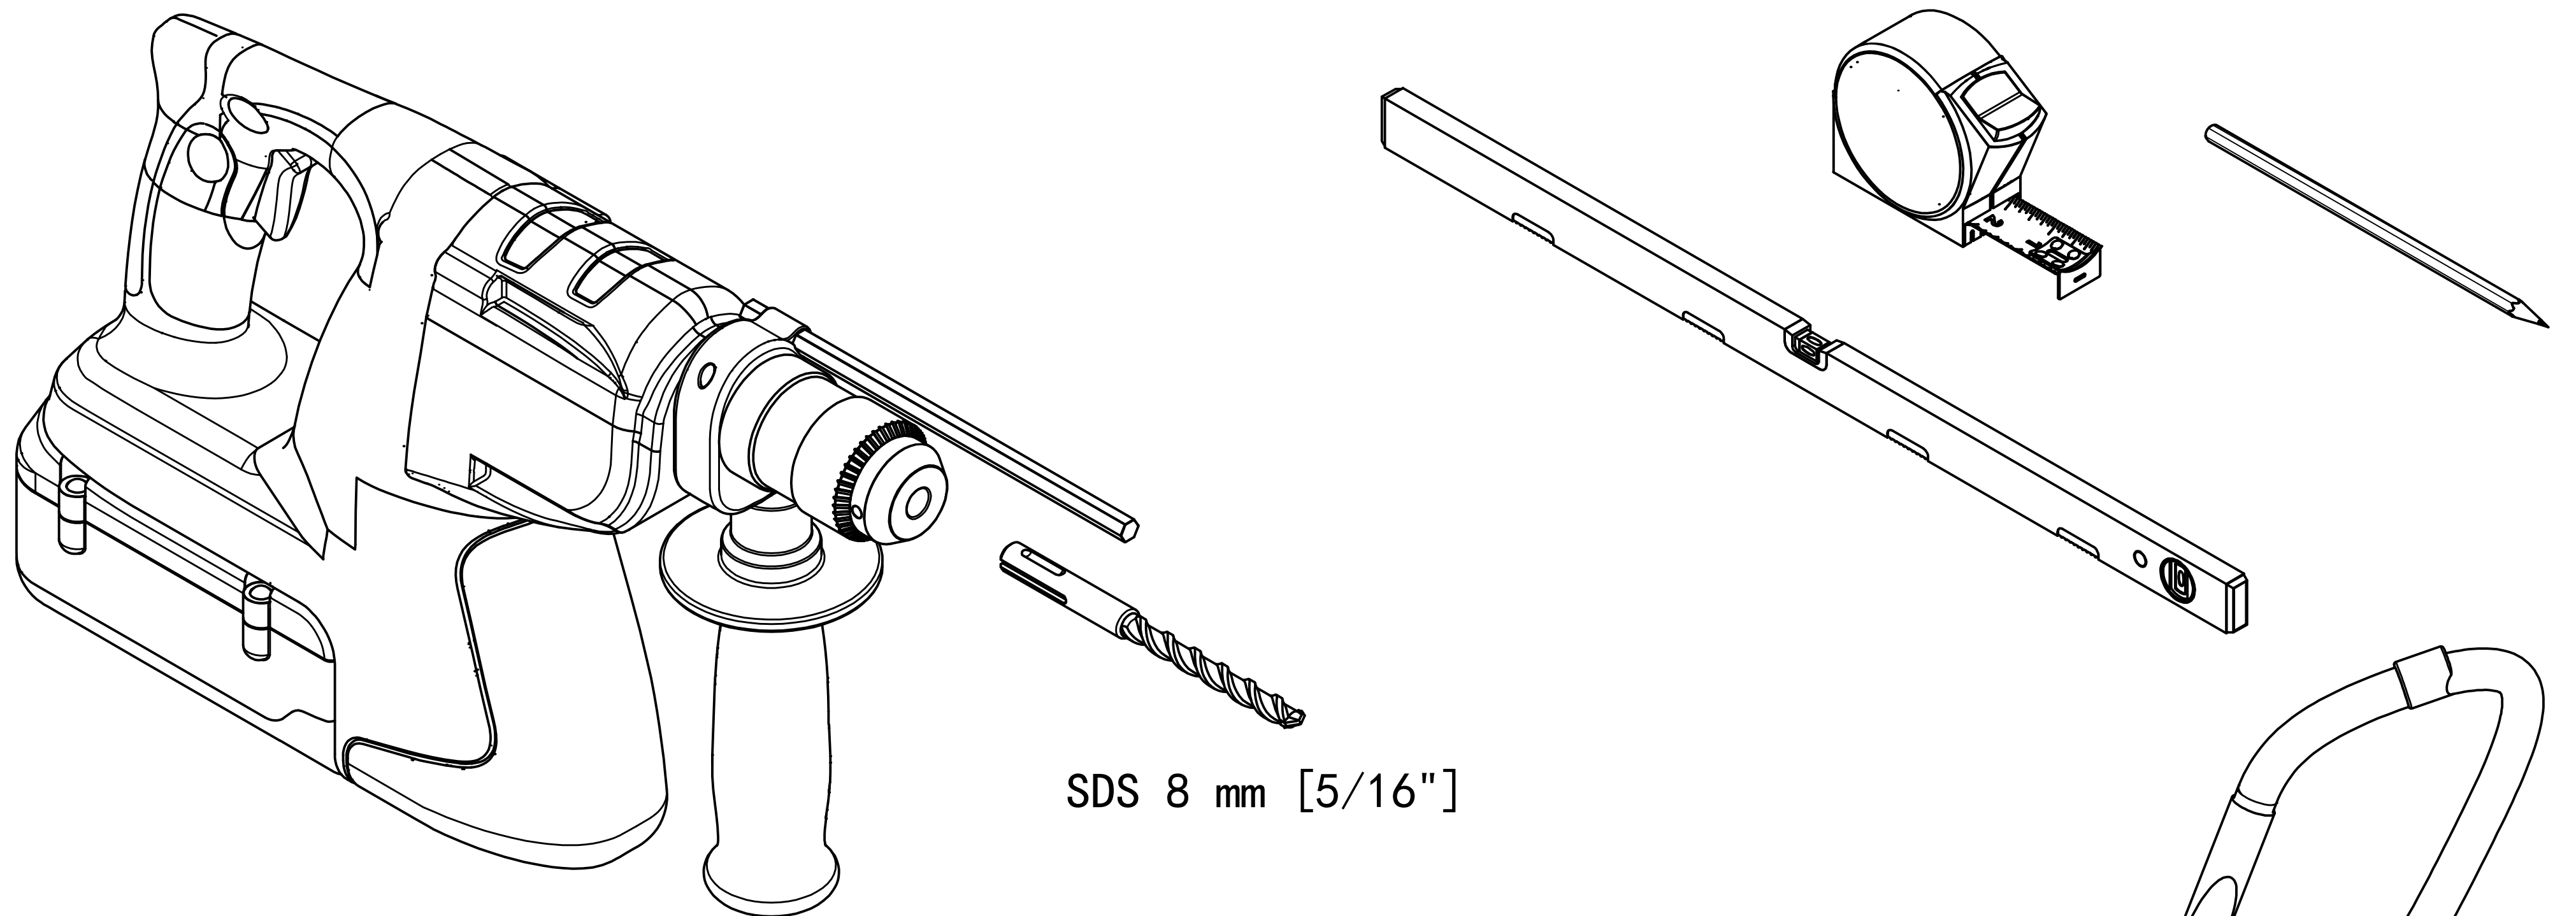

SDS 8 mm [5/16"]

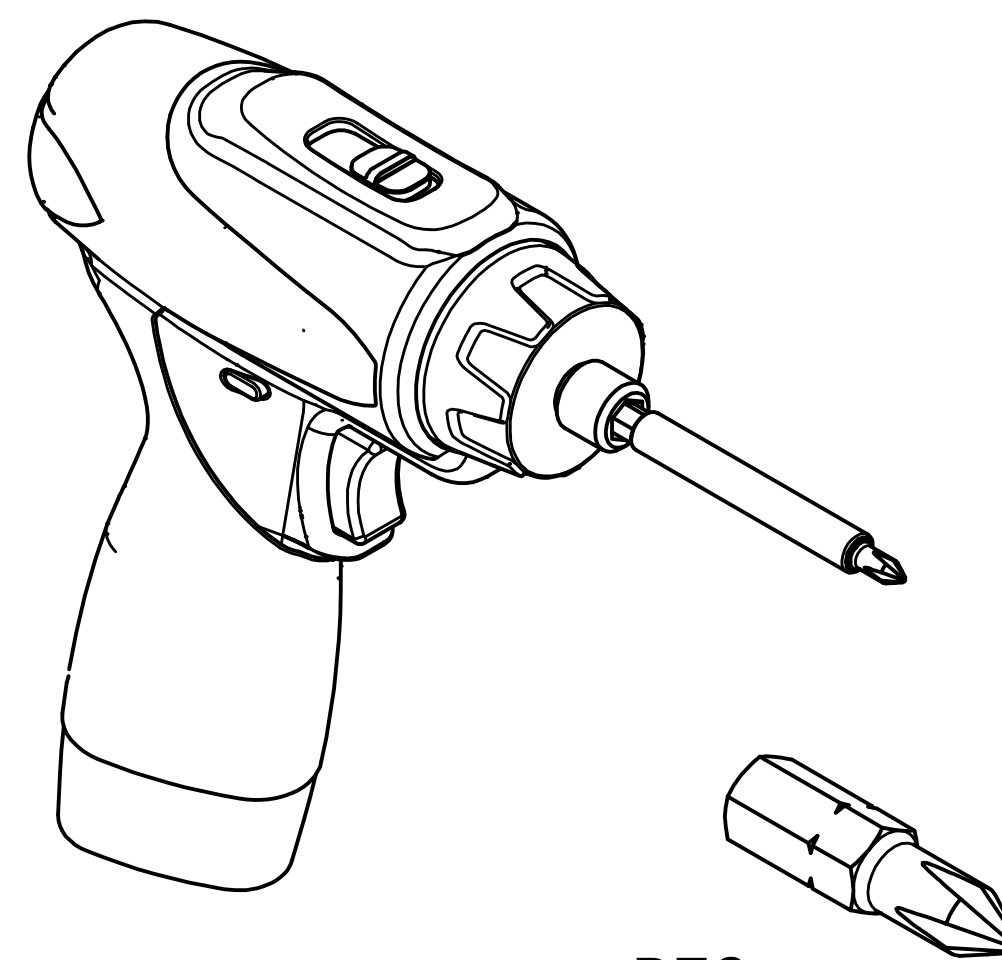
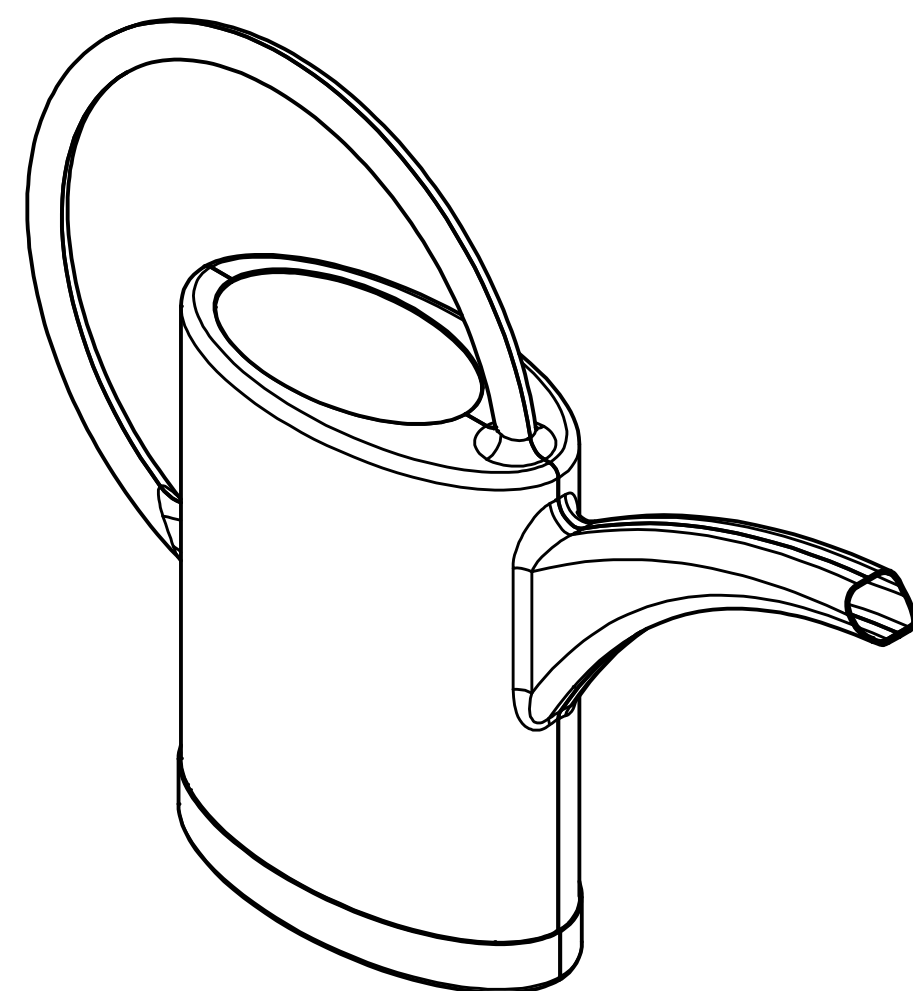


PZ2

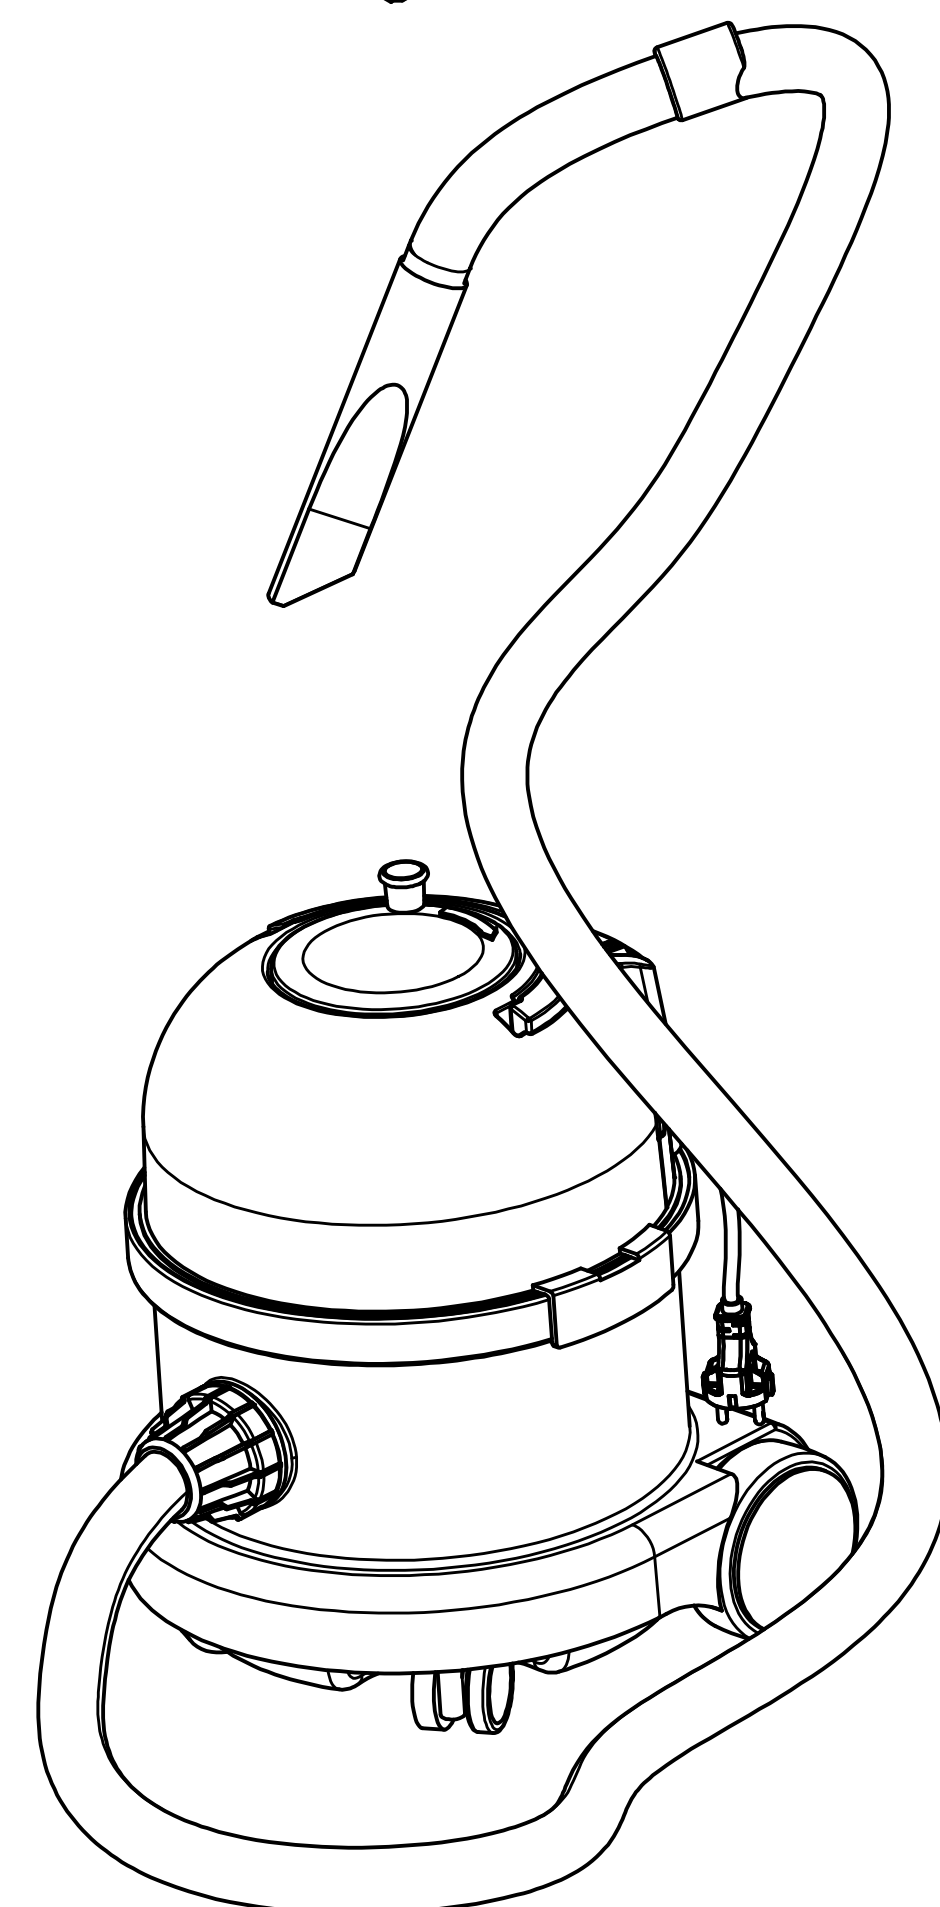


1A

USE DRILL PATTERN (1B)


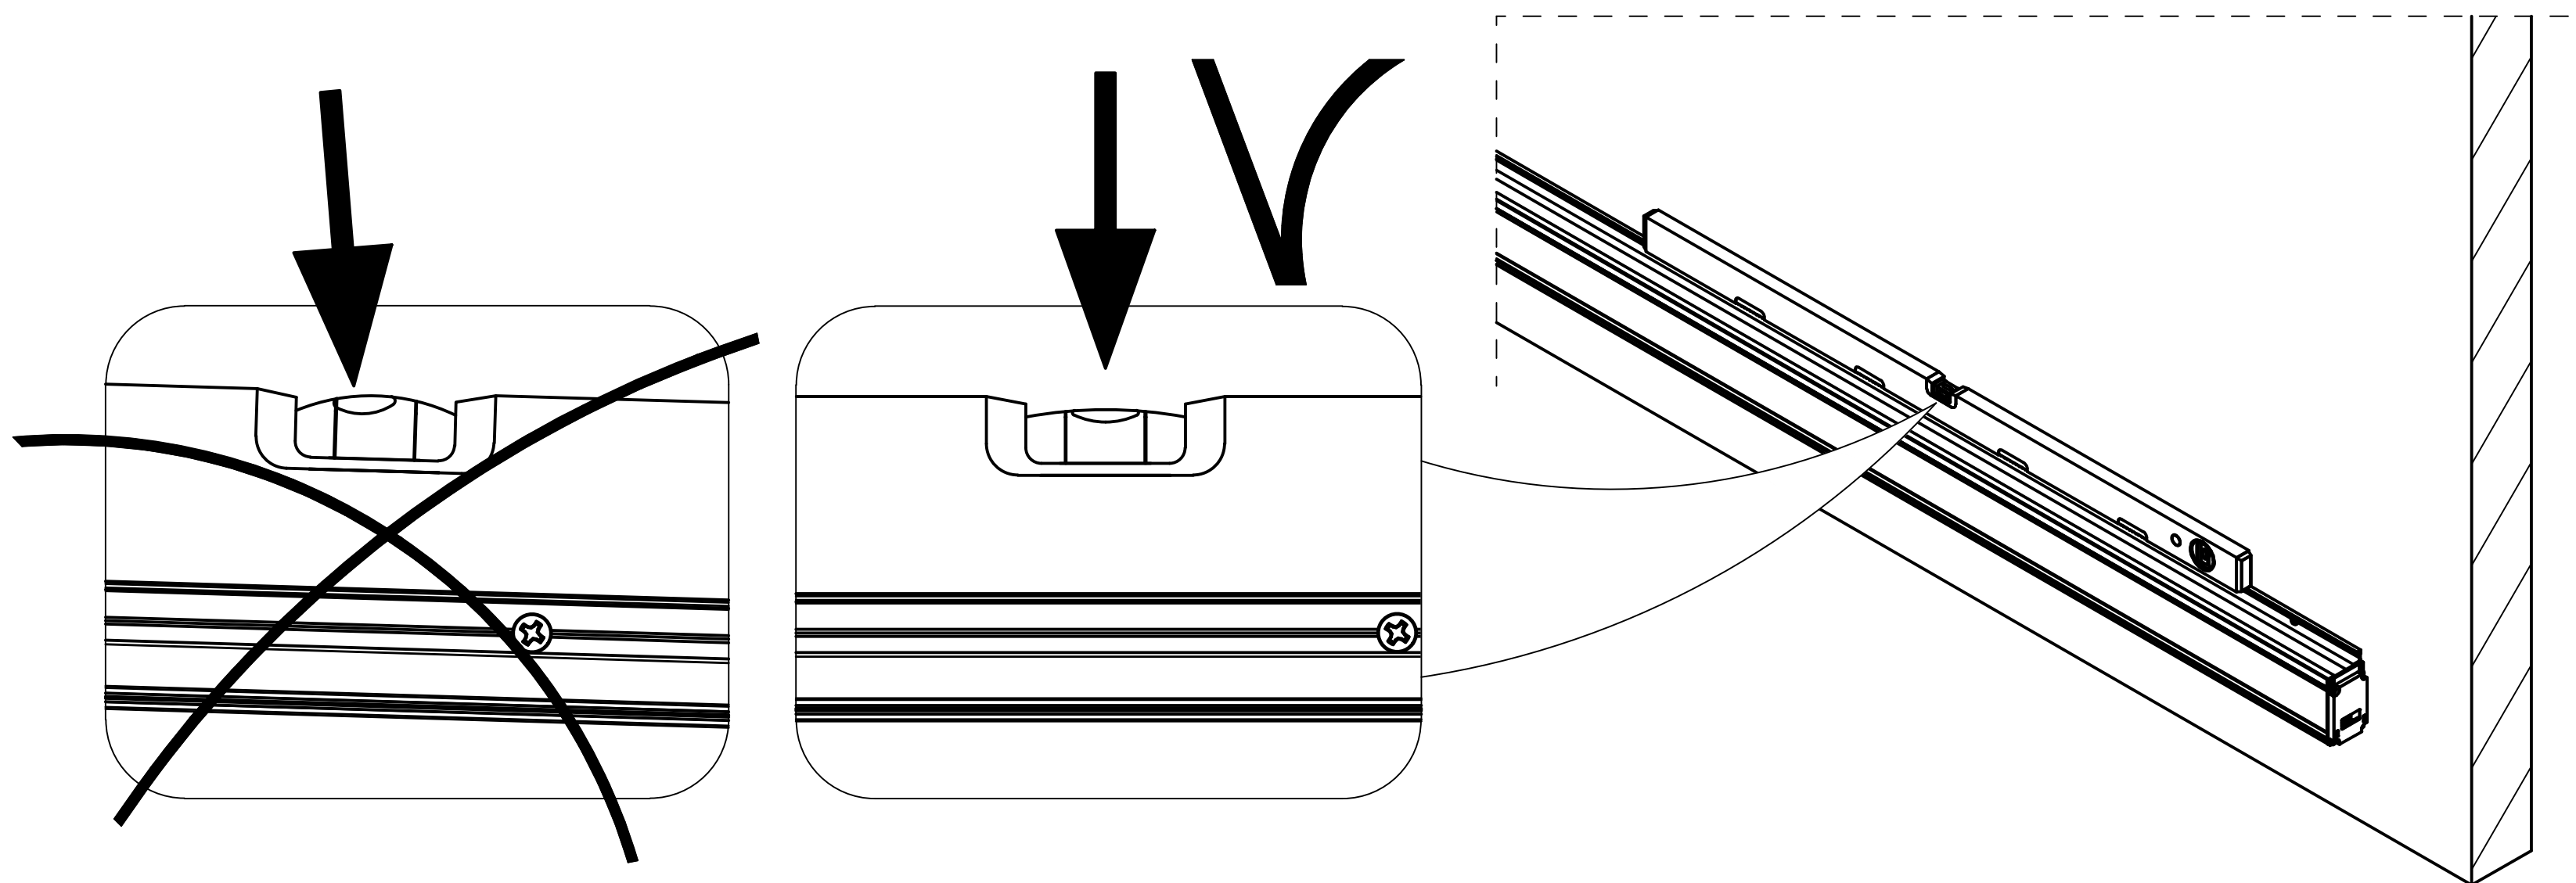
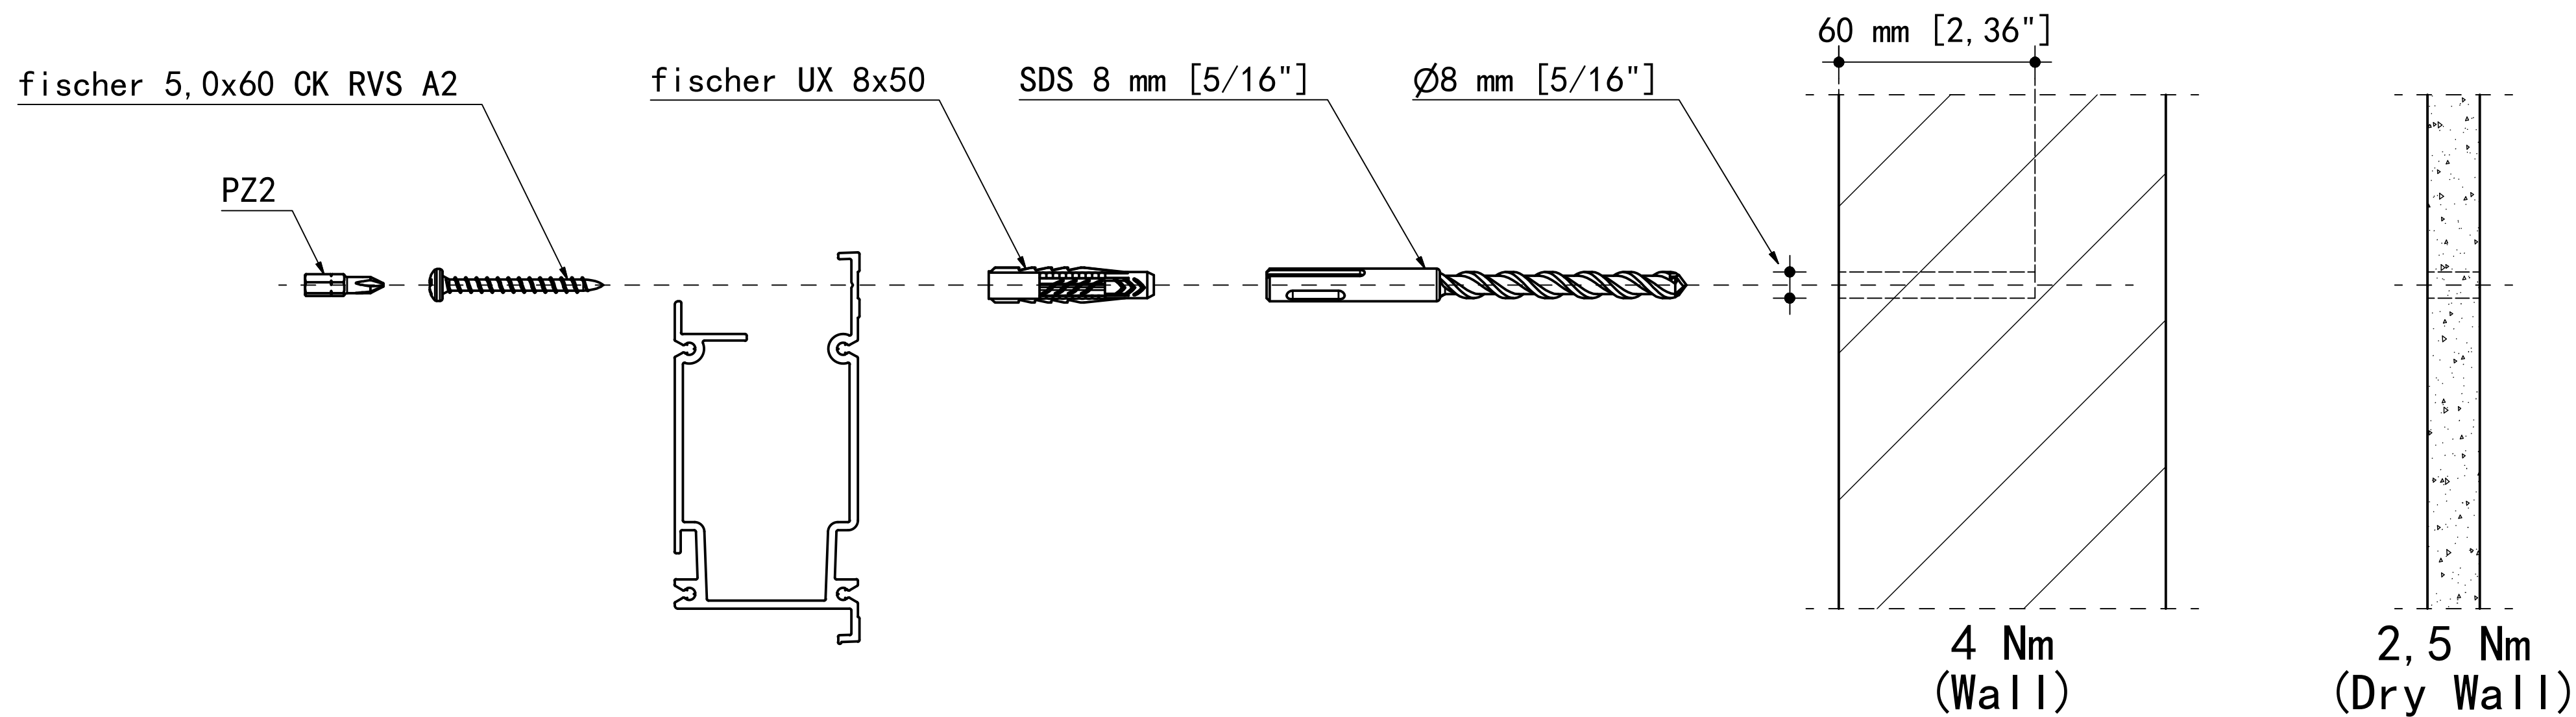


1B


DRILL PATTERN

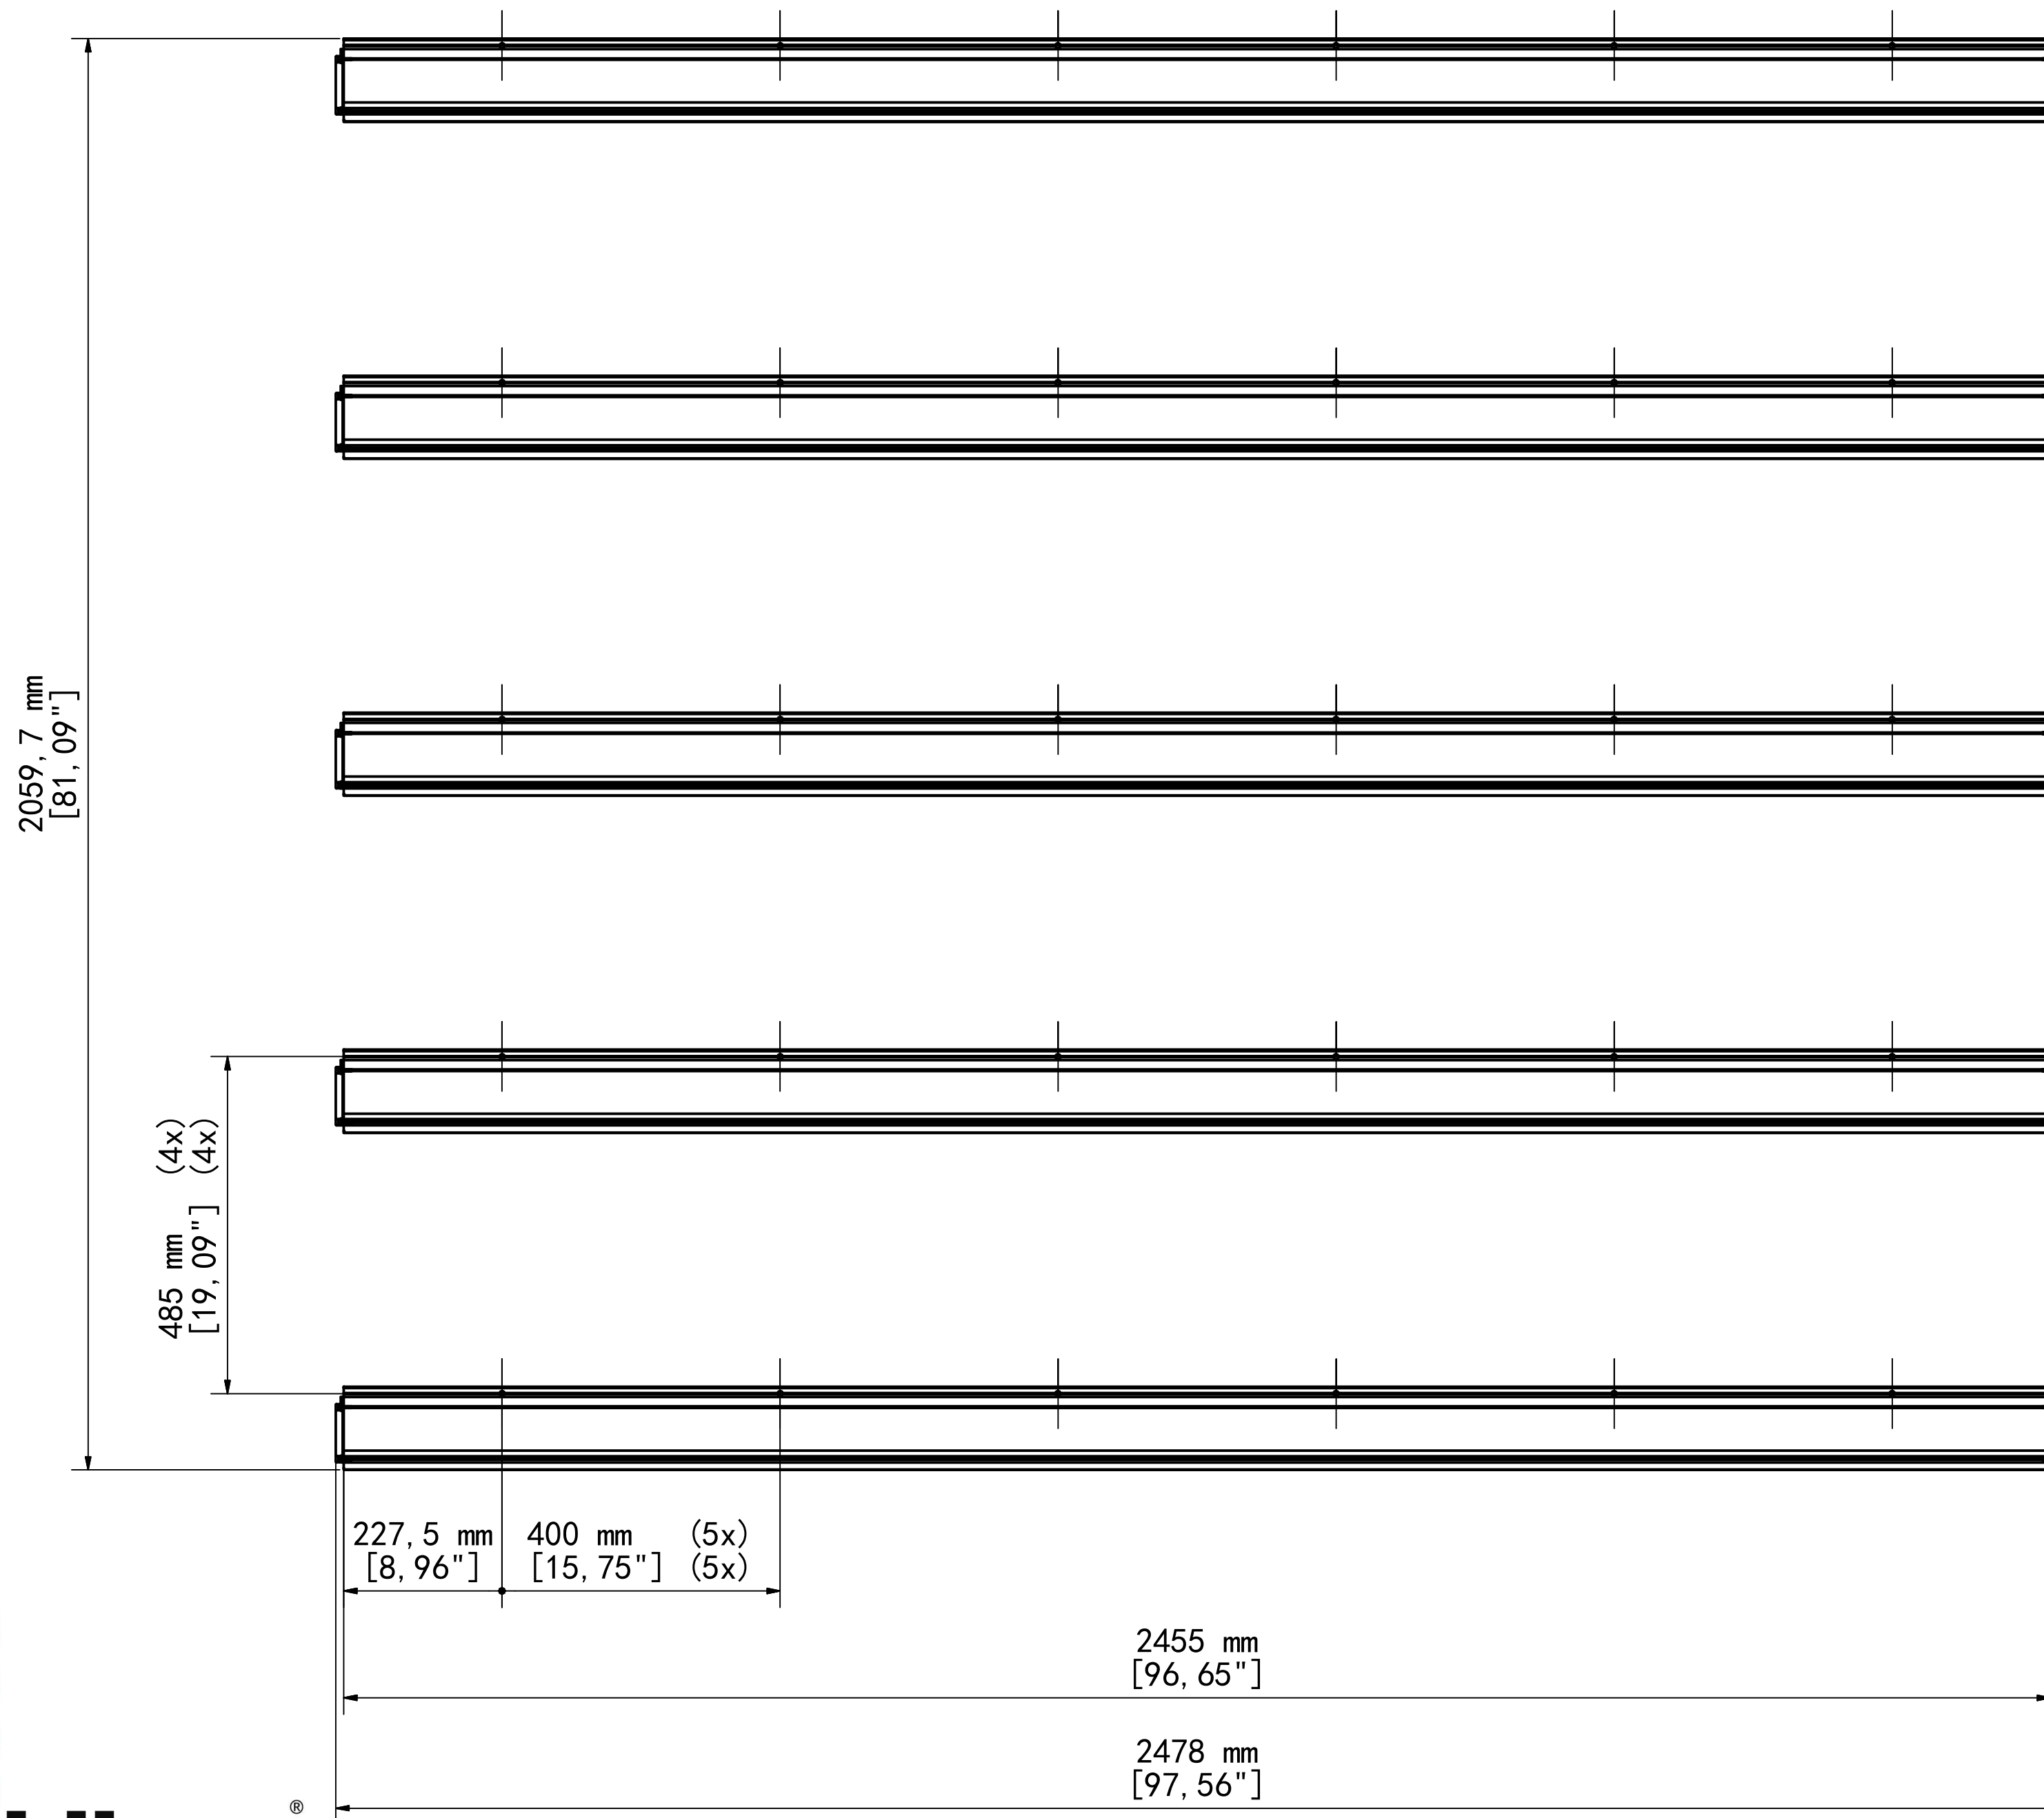


2

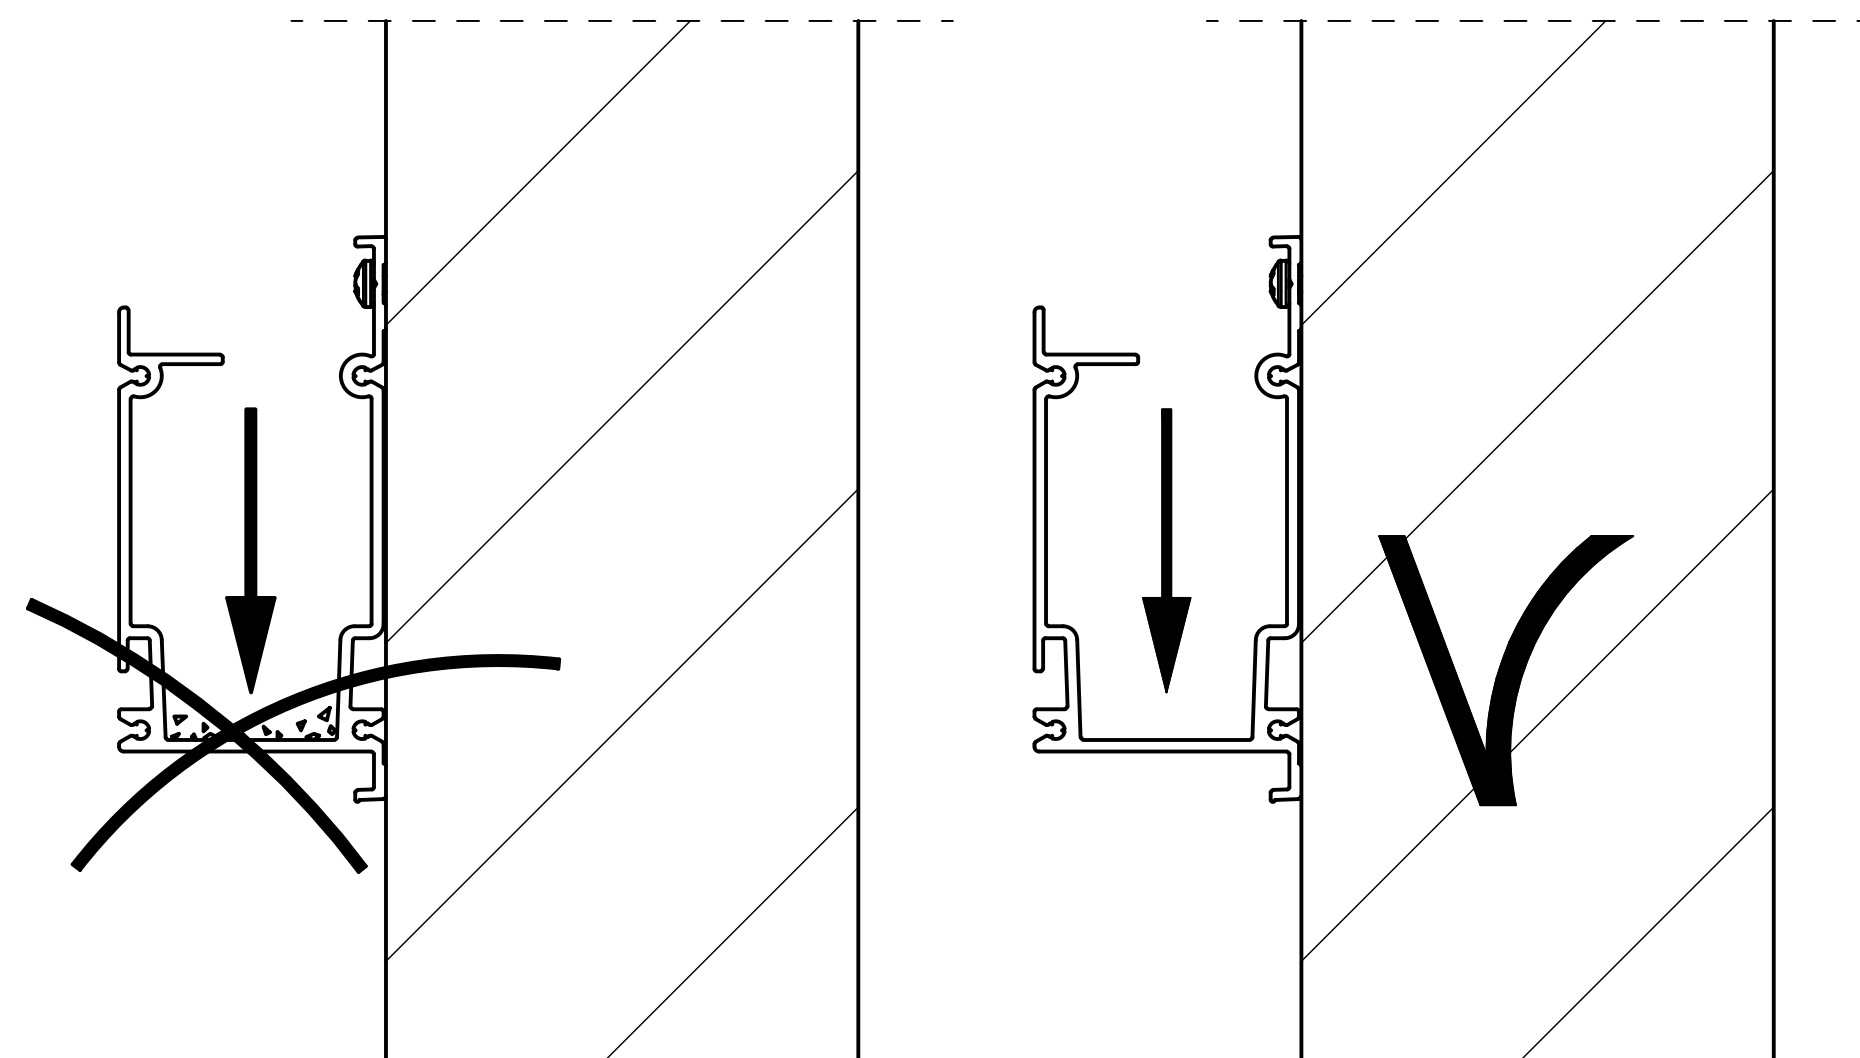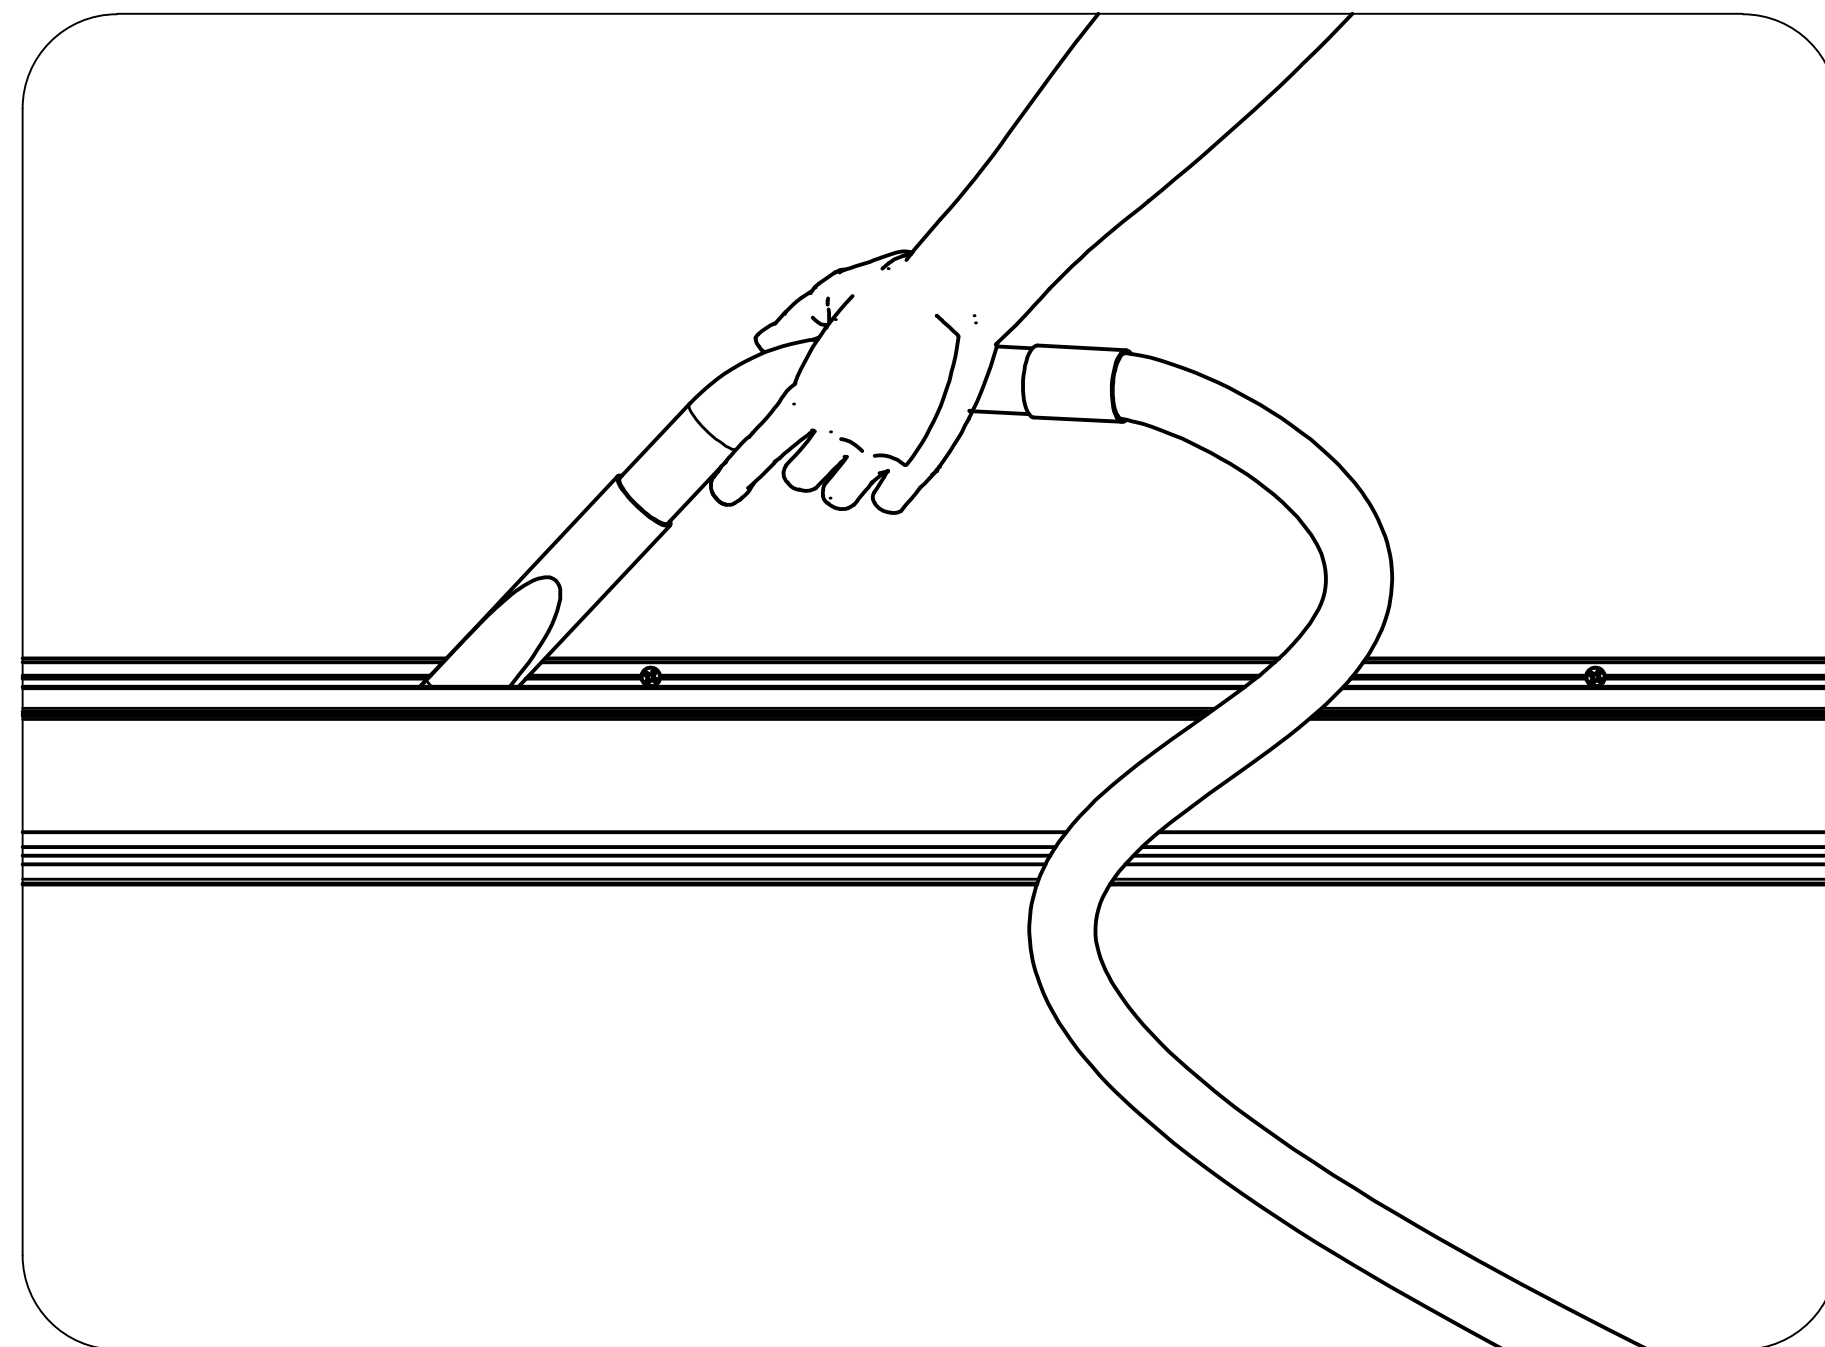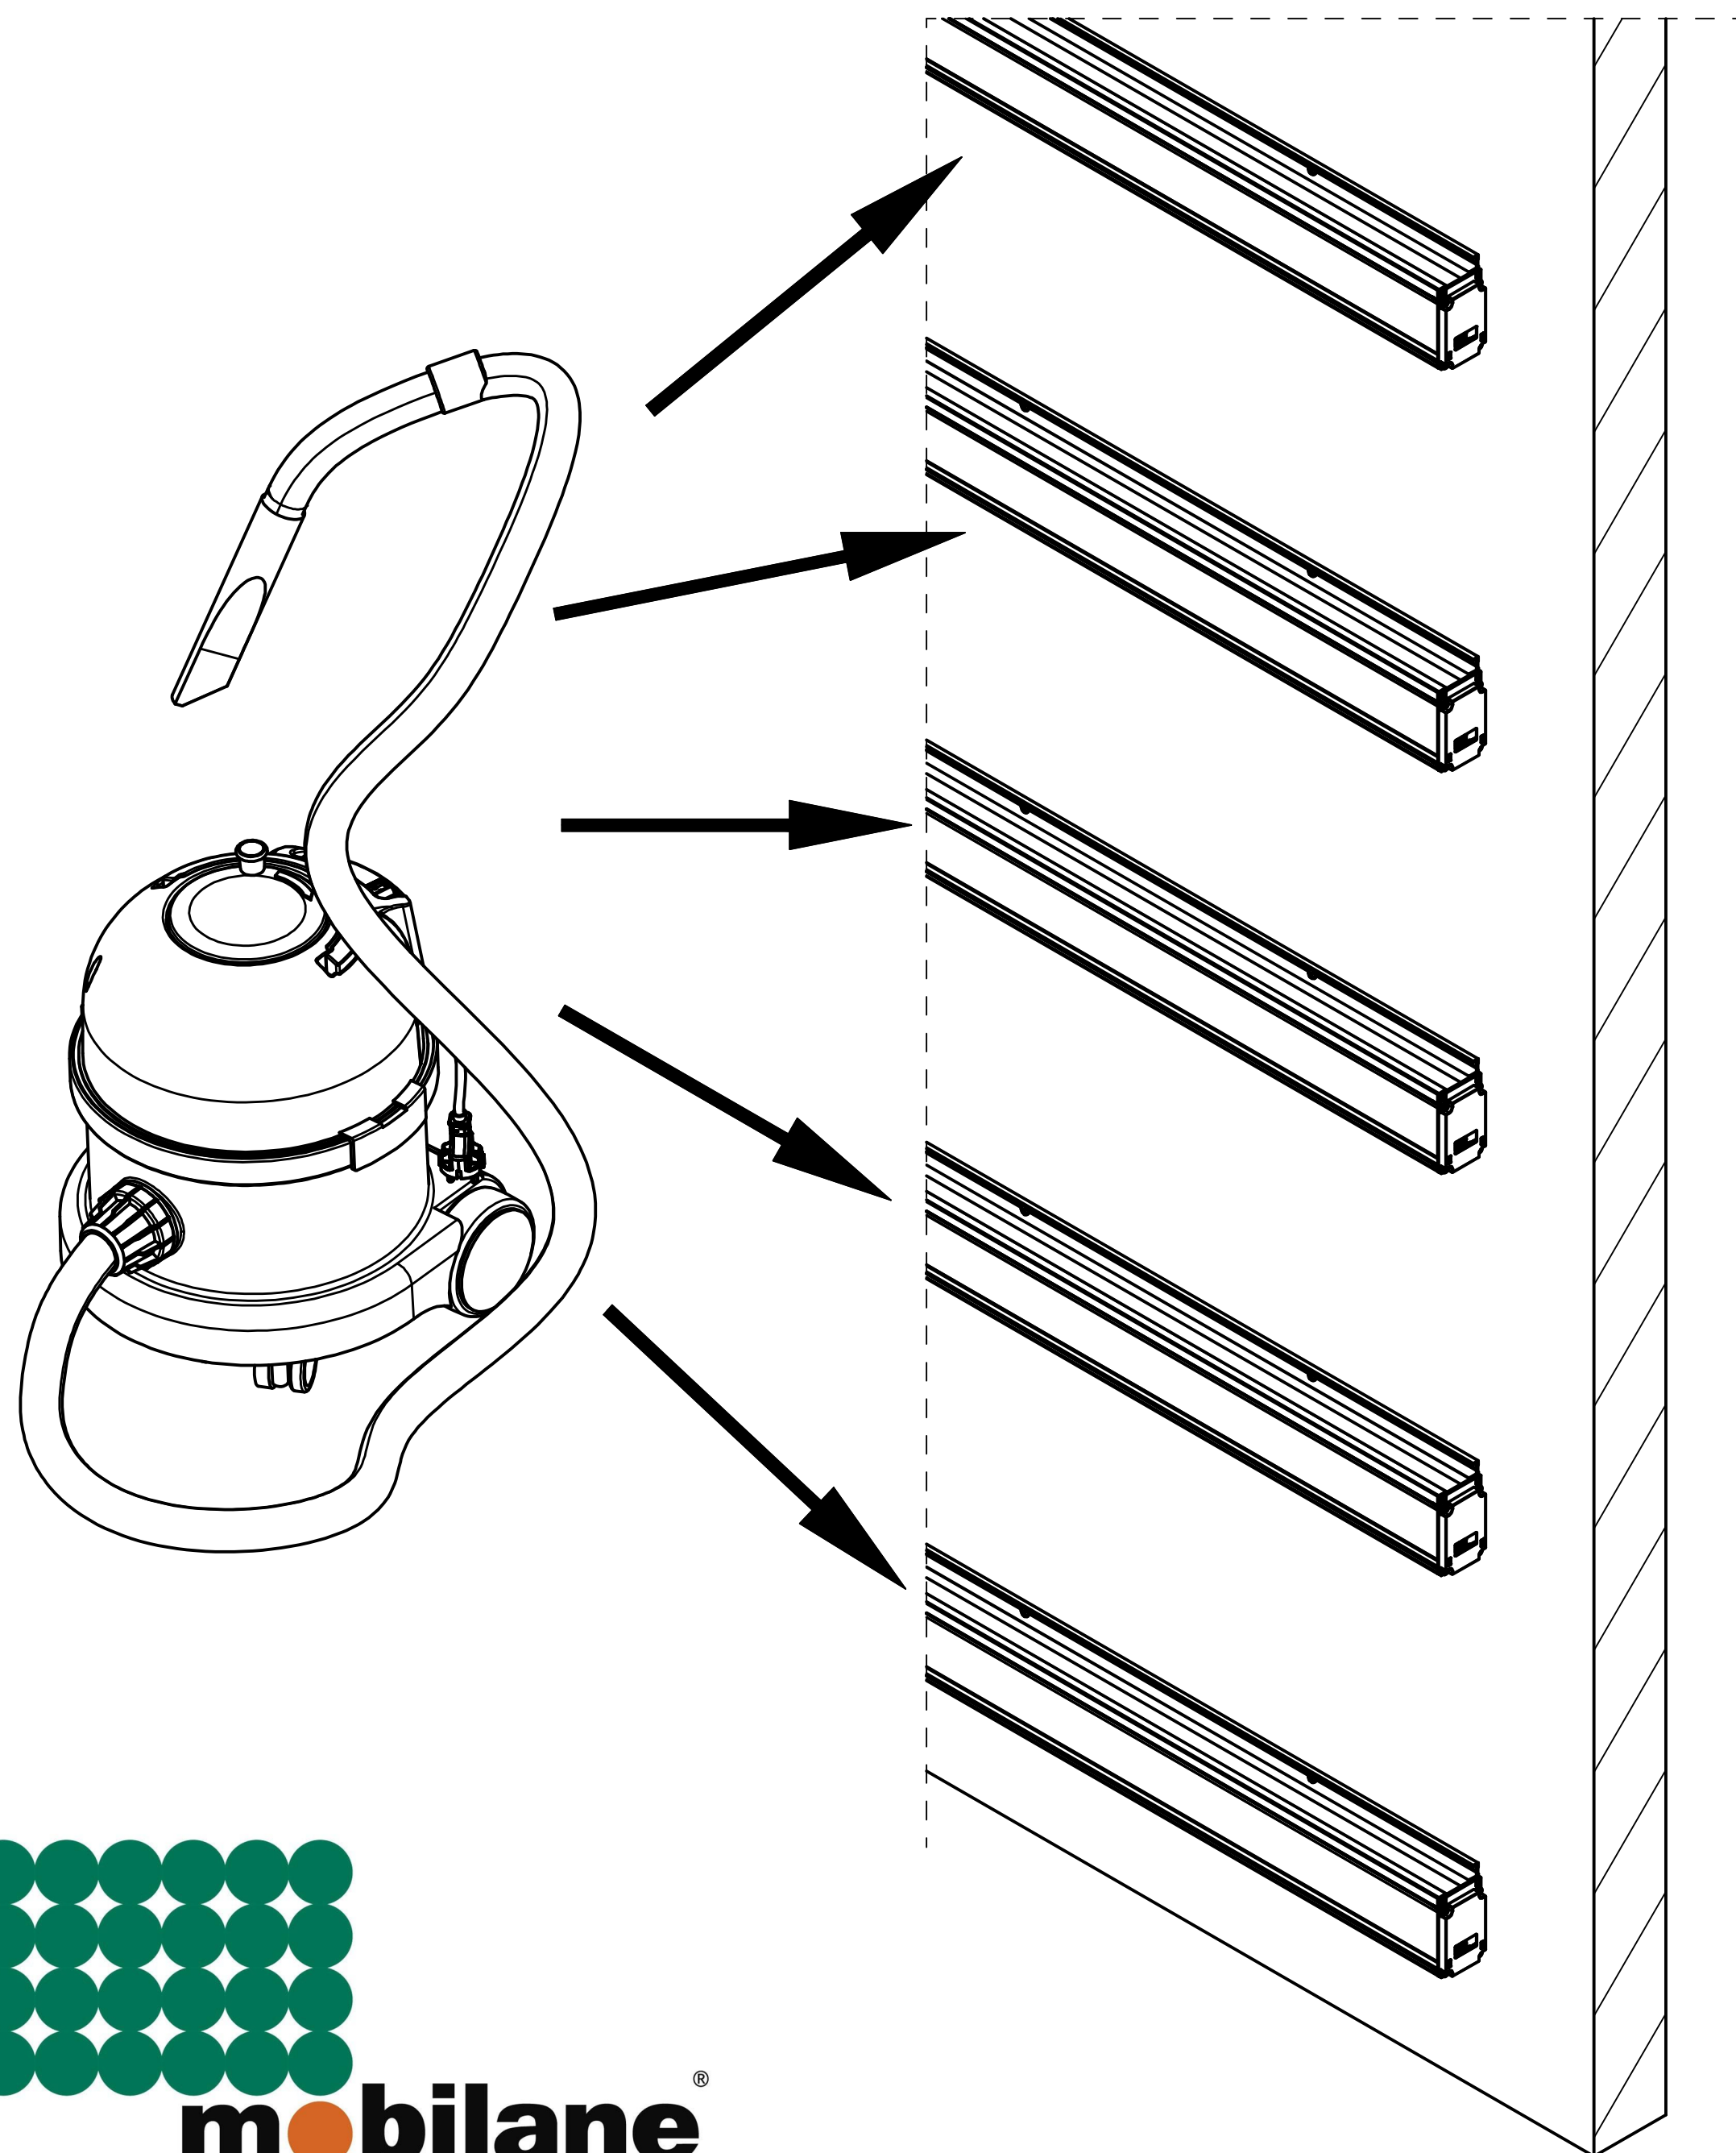



3A

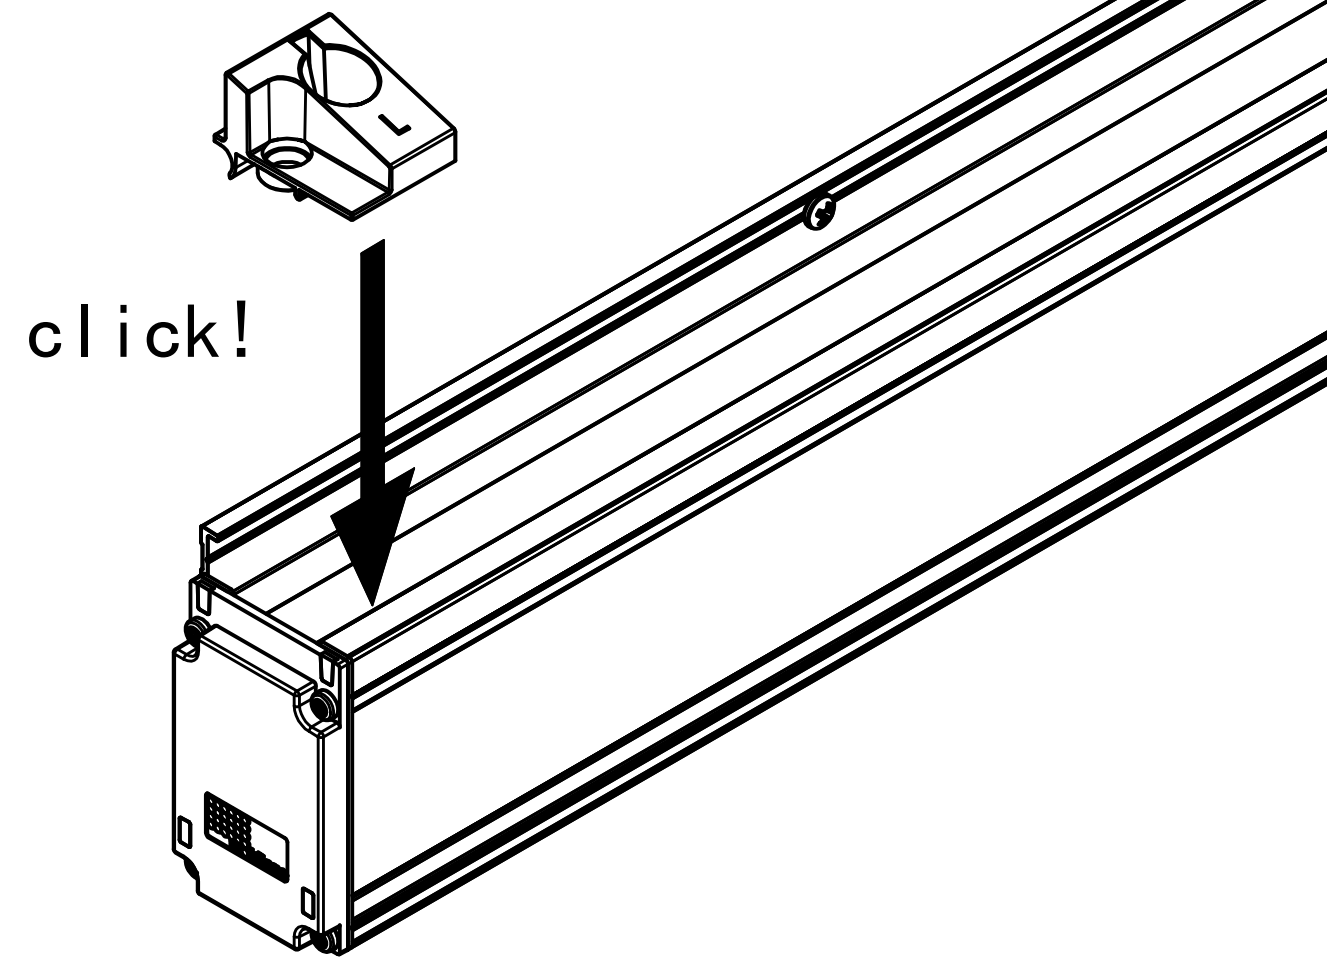


CHOOSE 3A: "LEFT" OR 3B: "RIGHT"

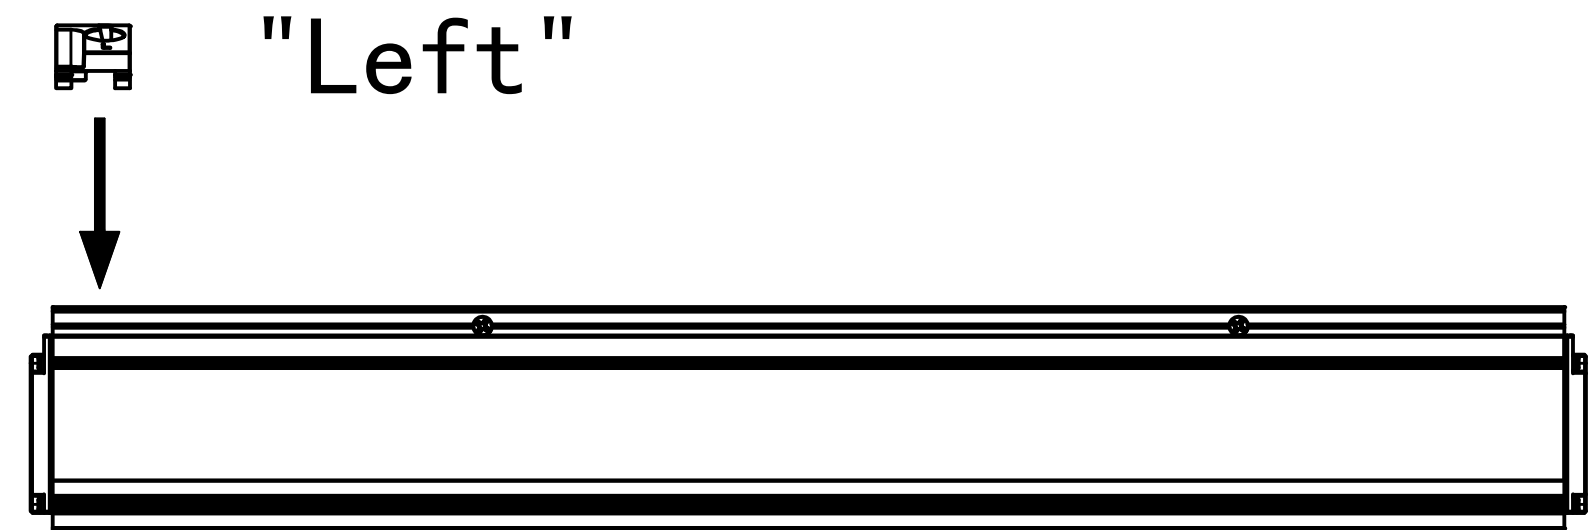


3B

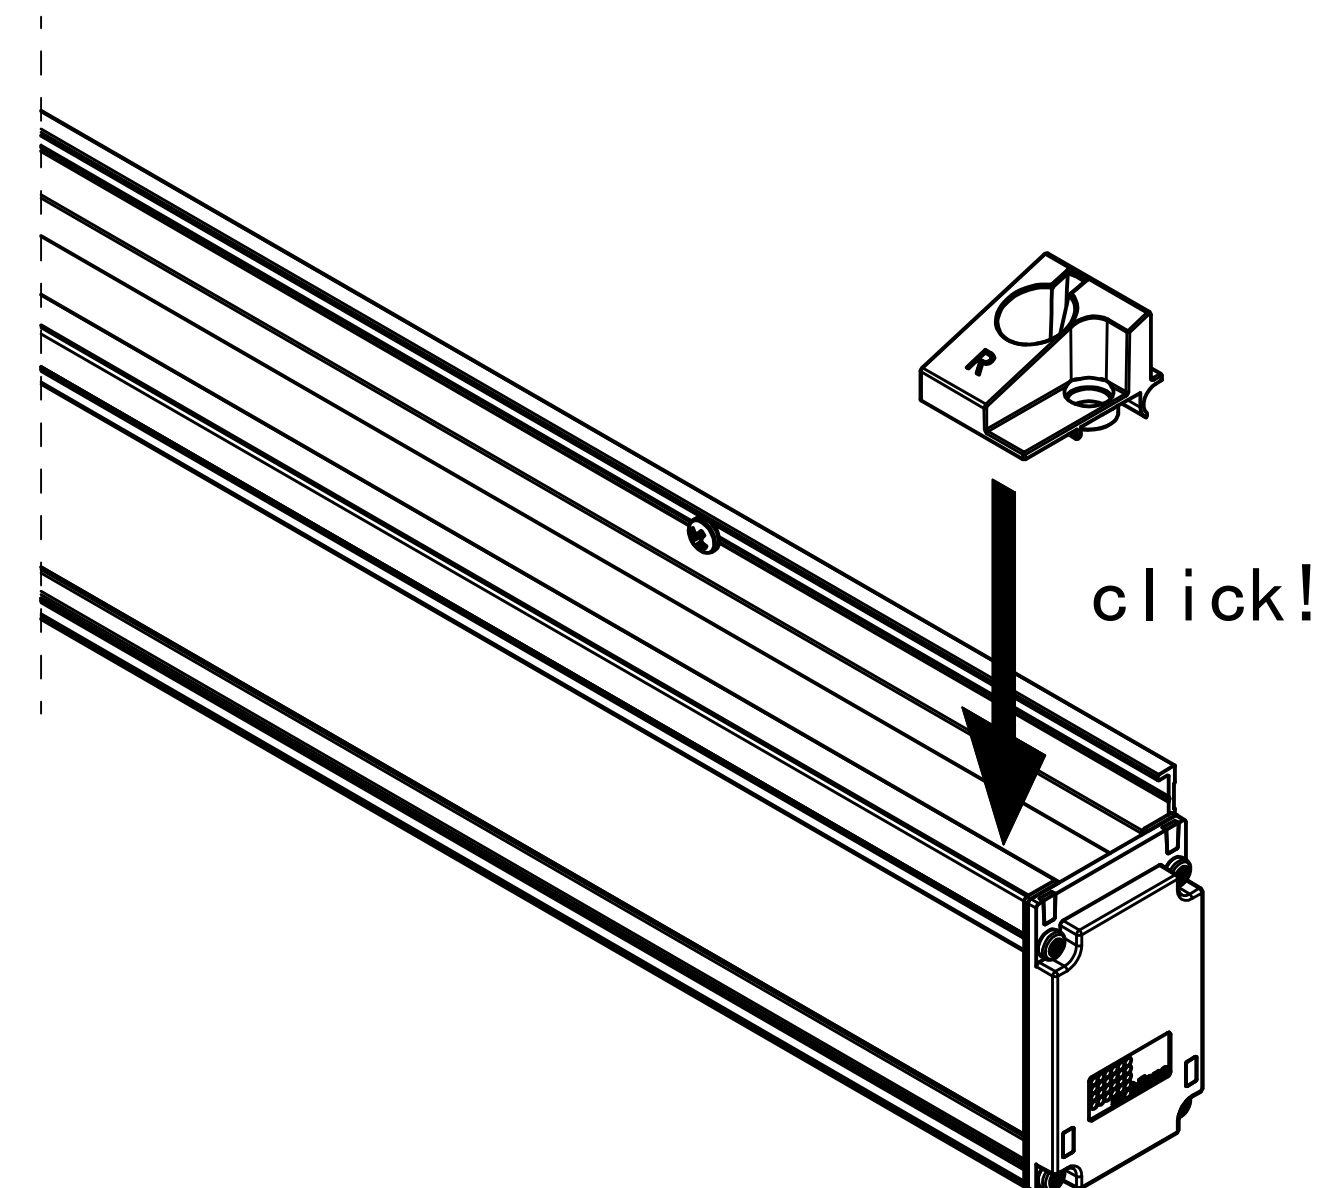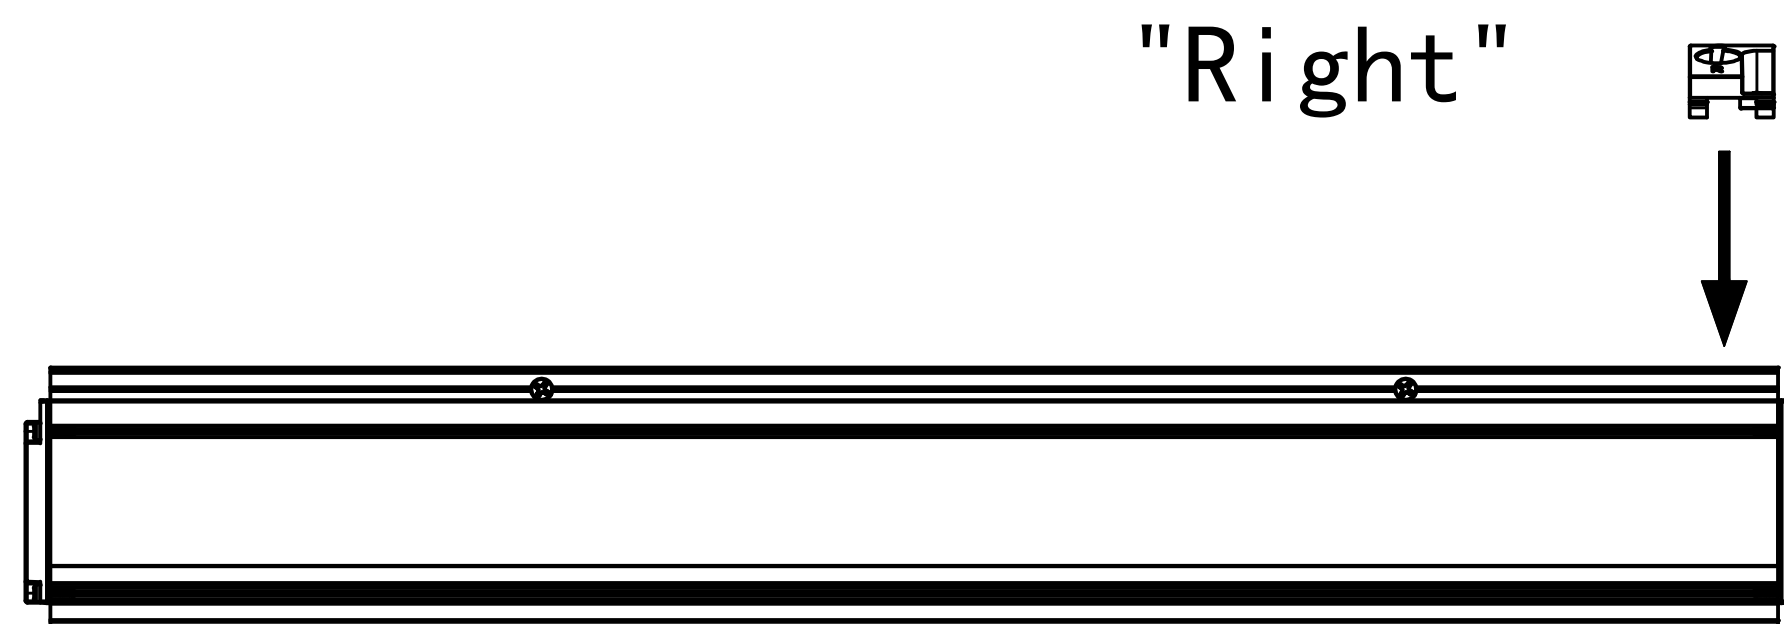


4A

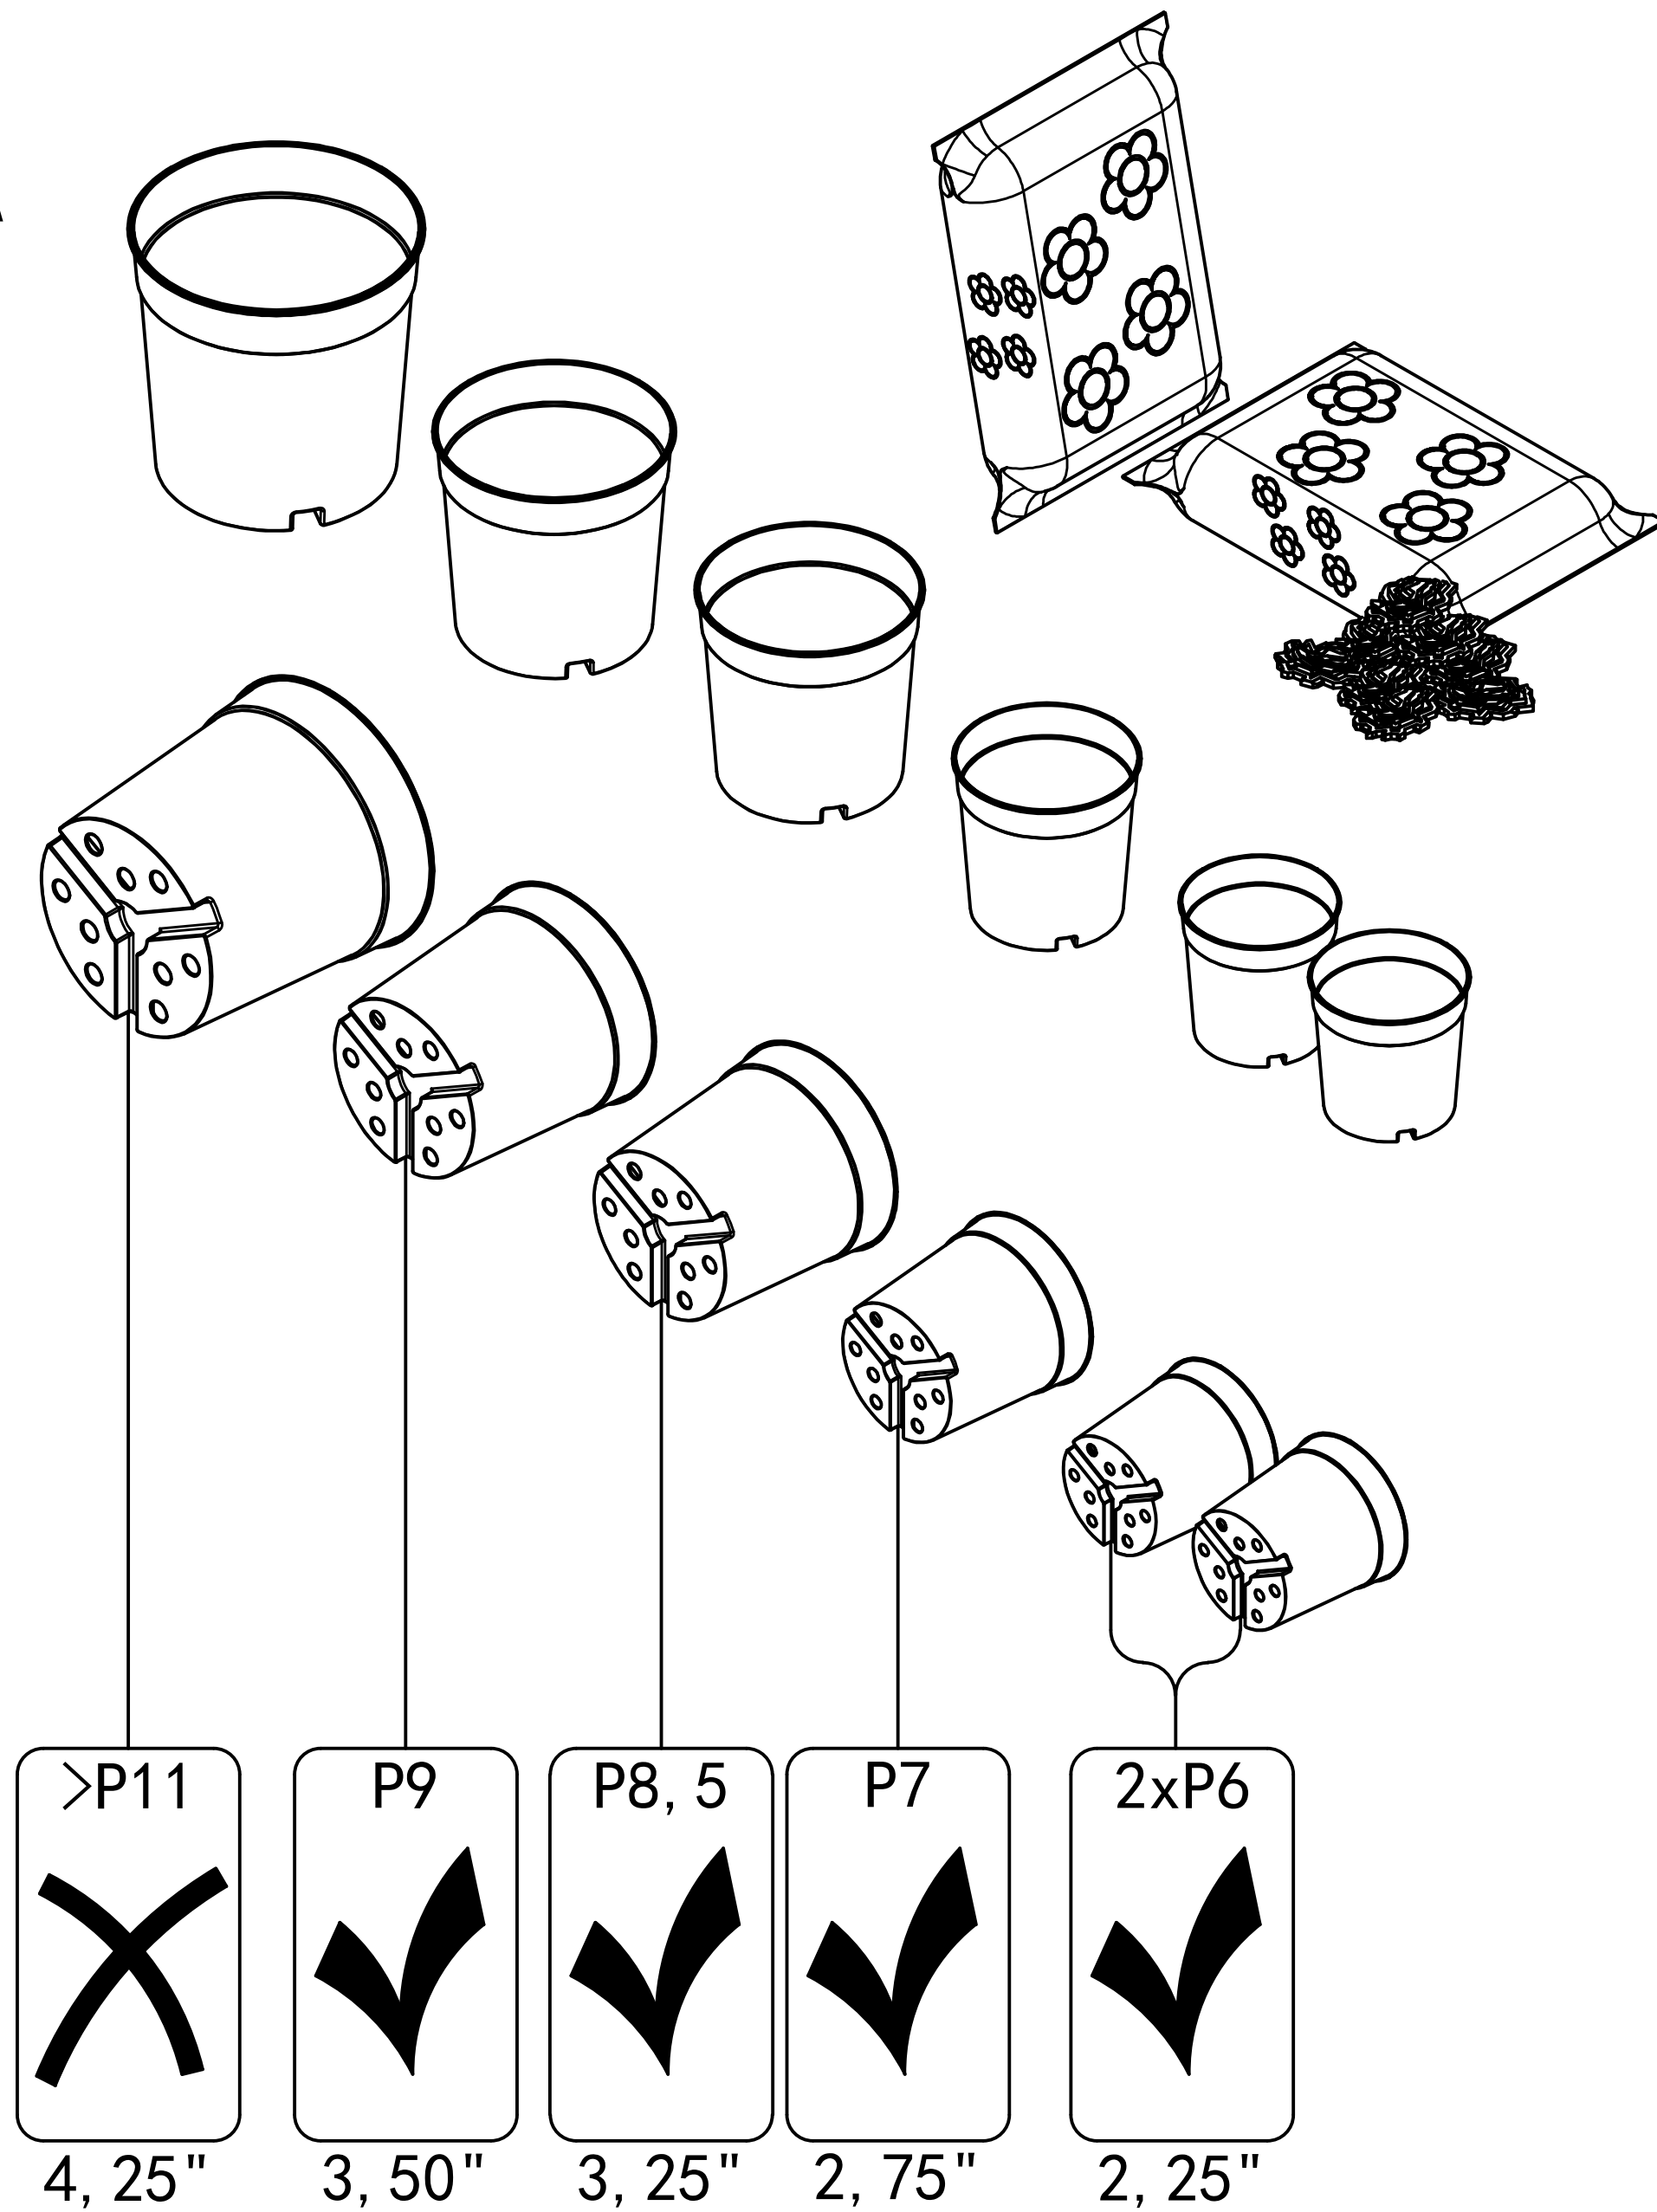


4B

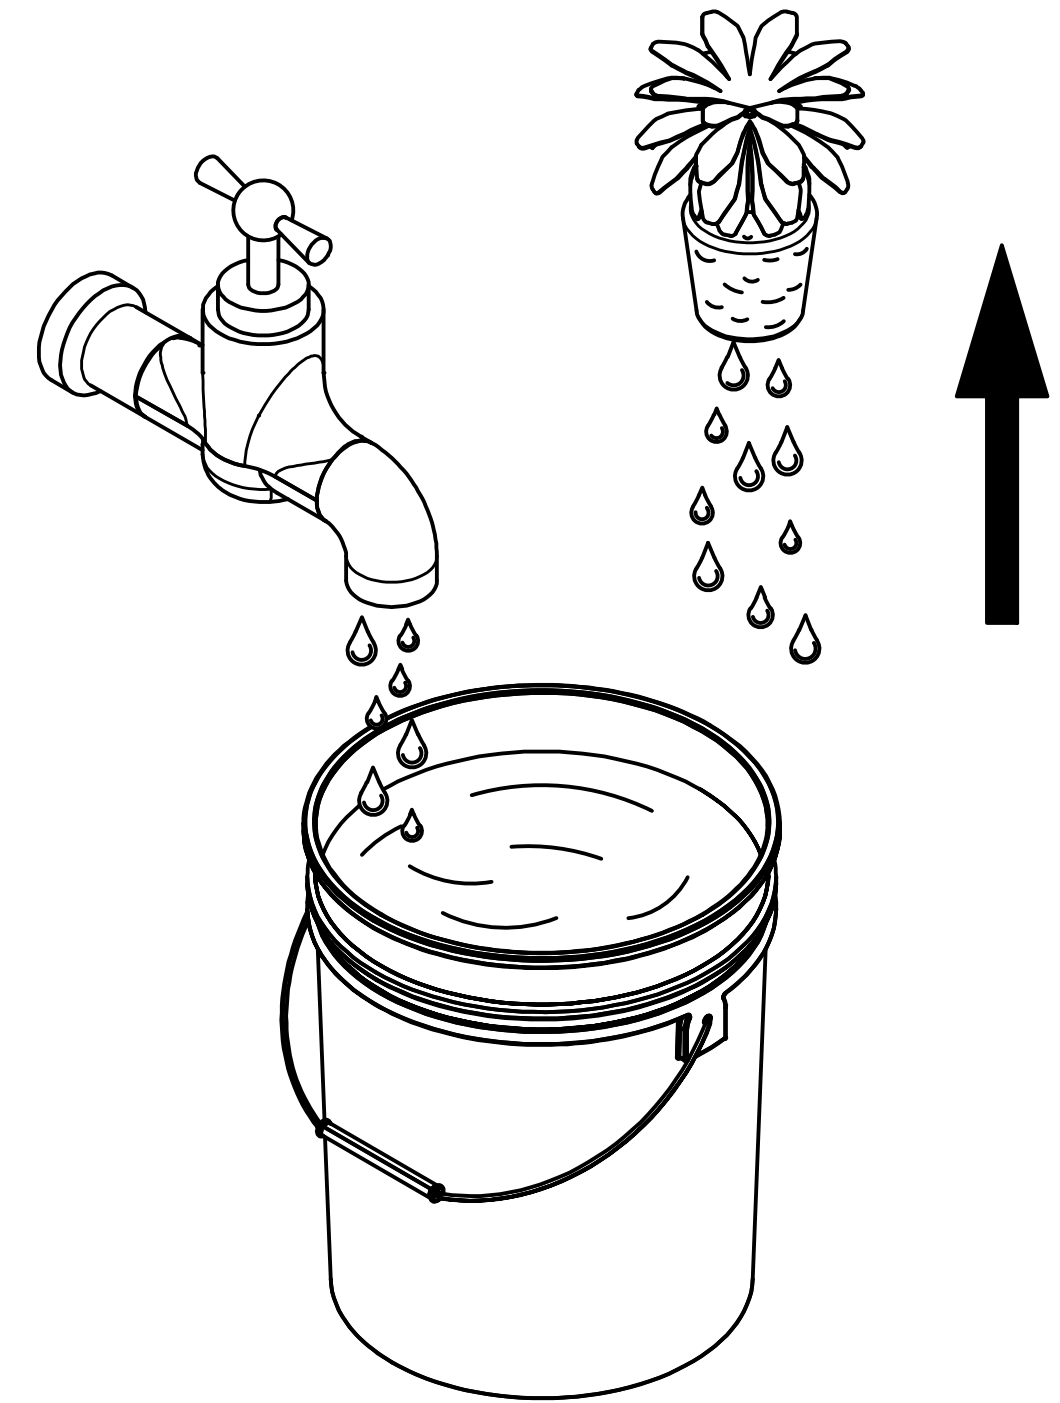


4C

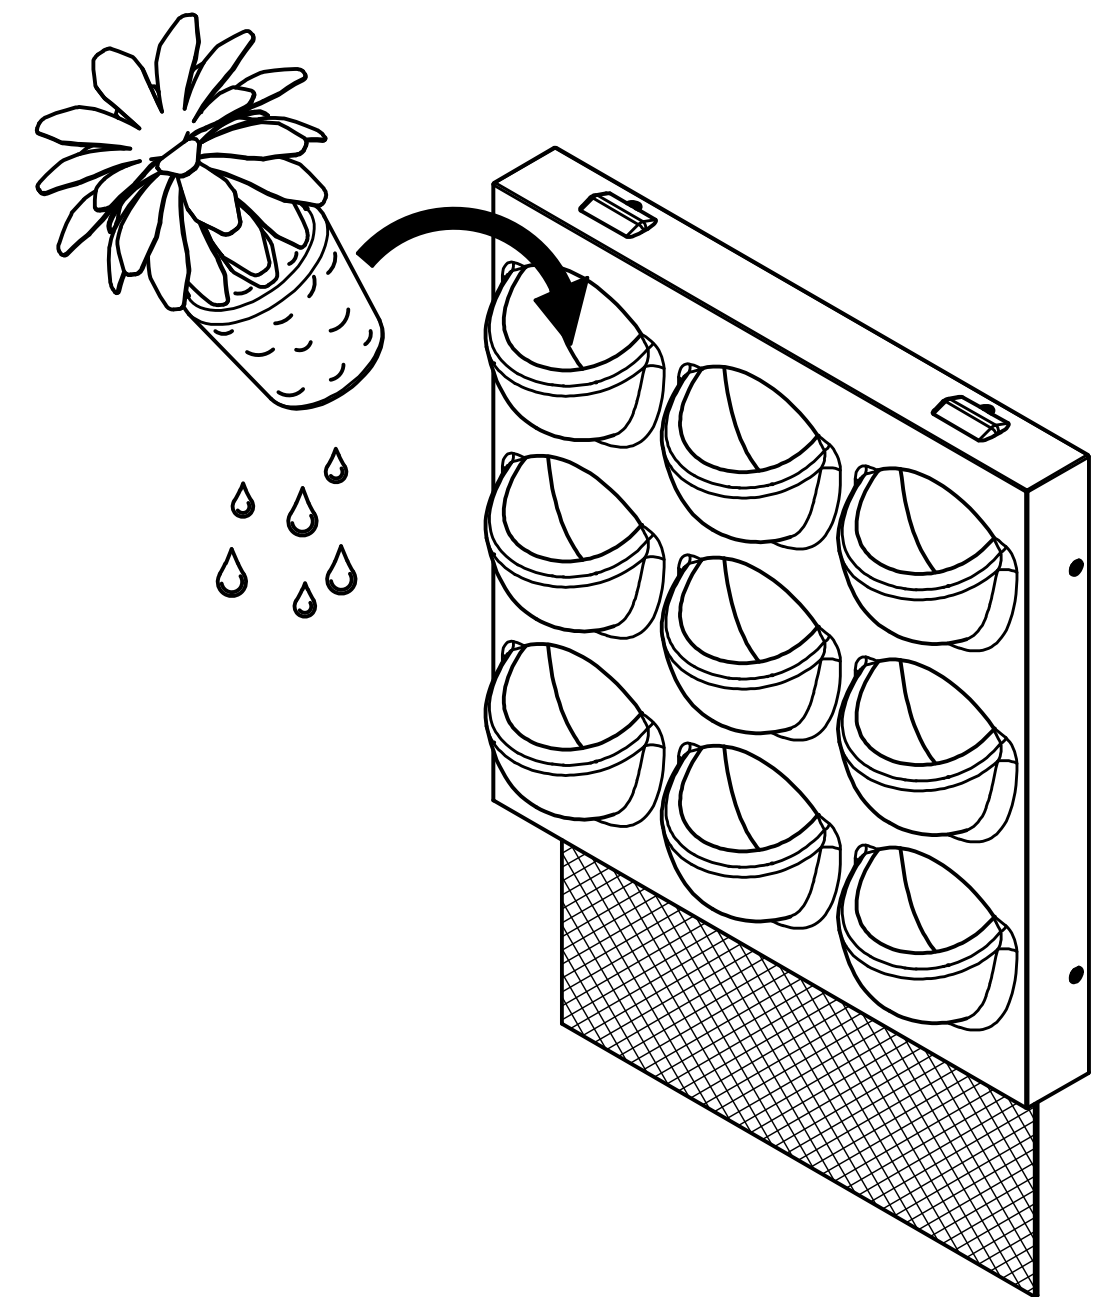





4D

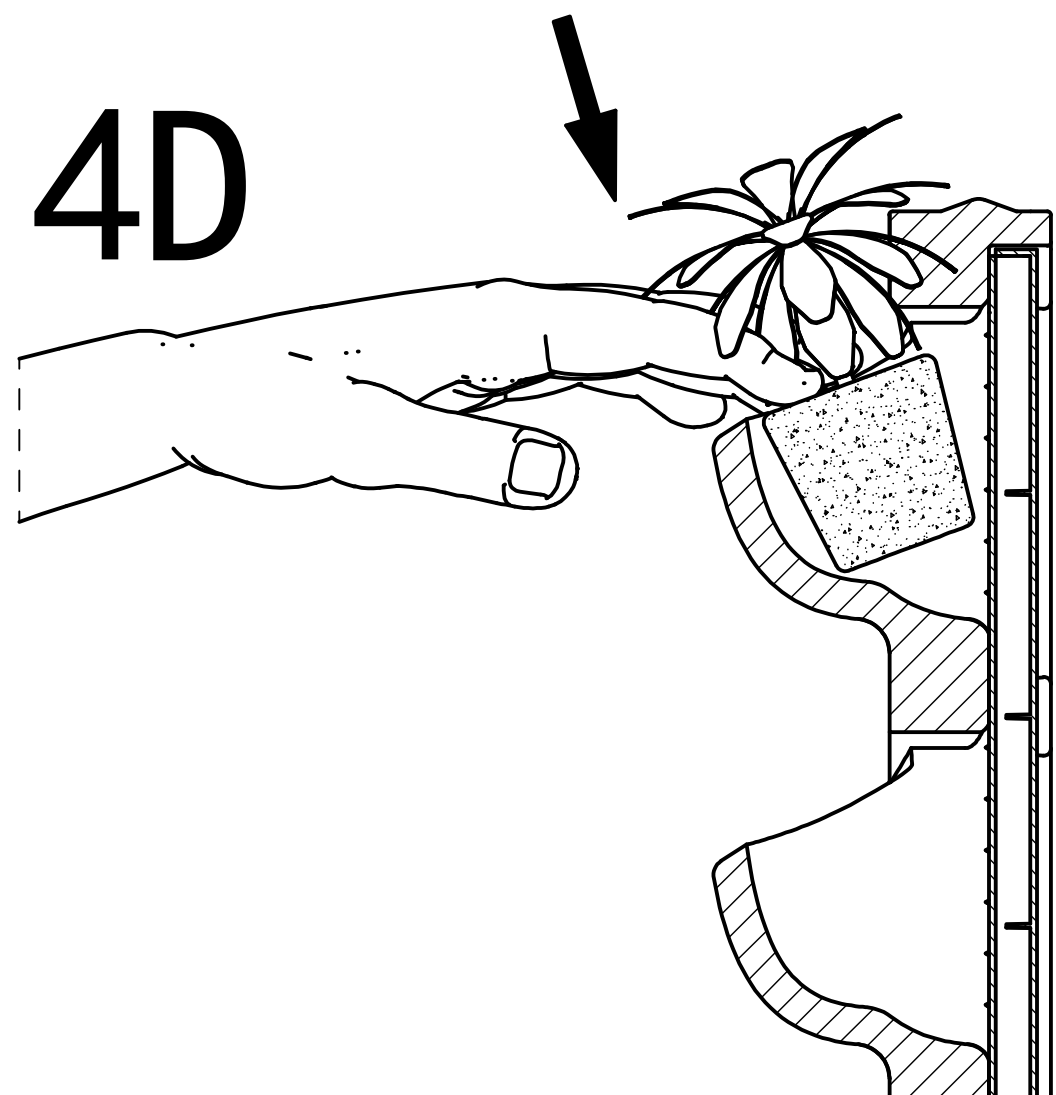







4E

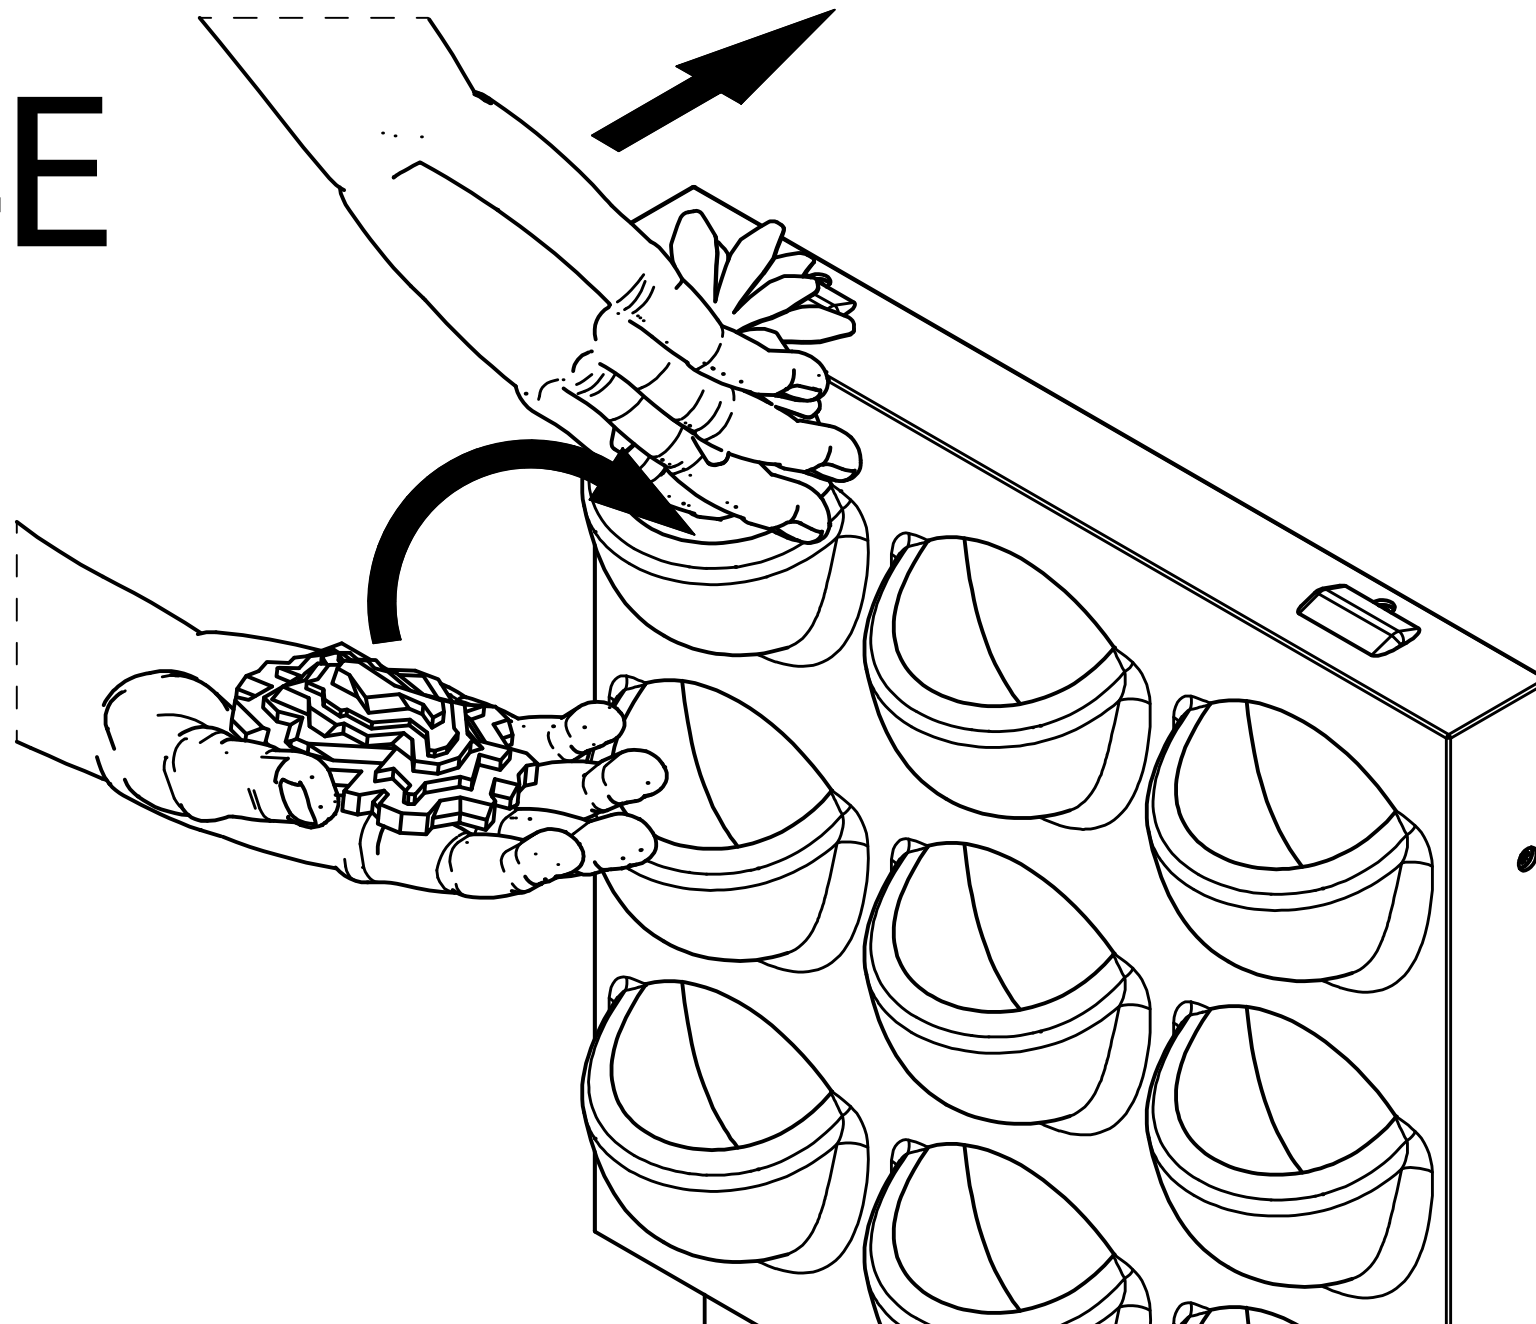

4F

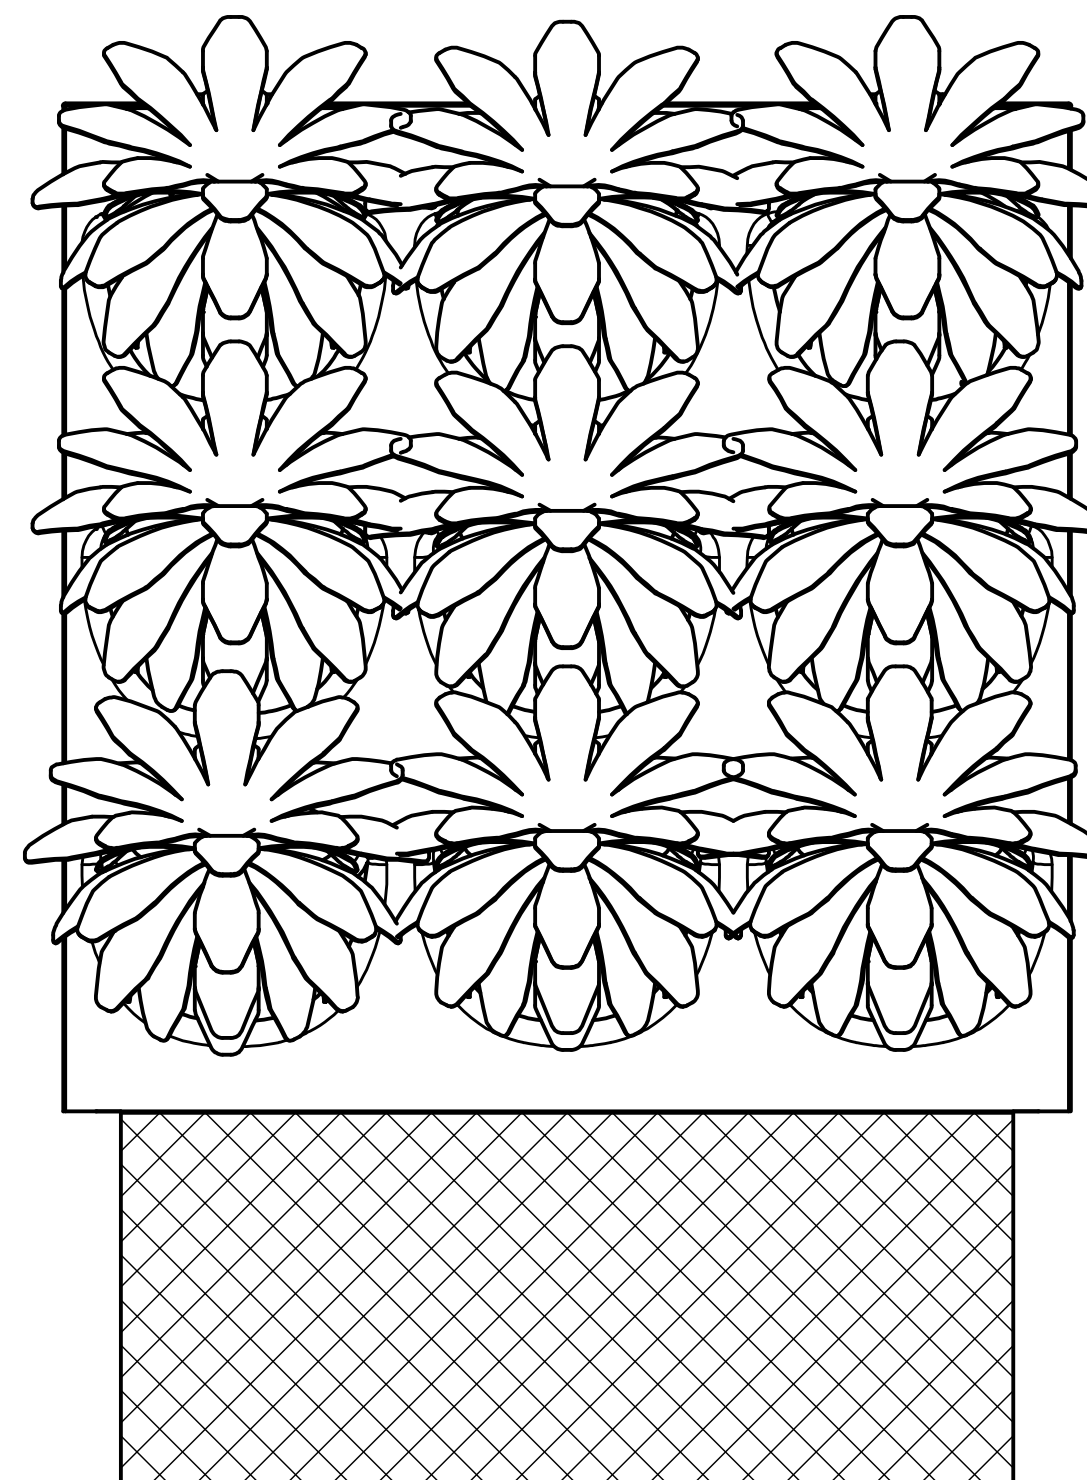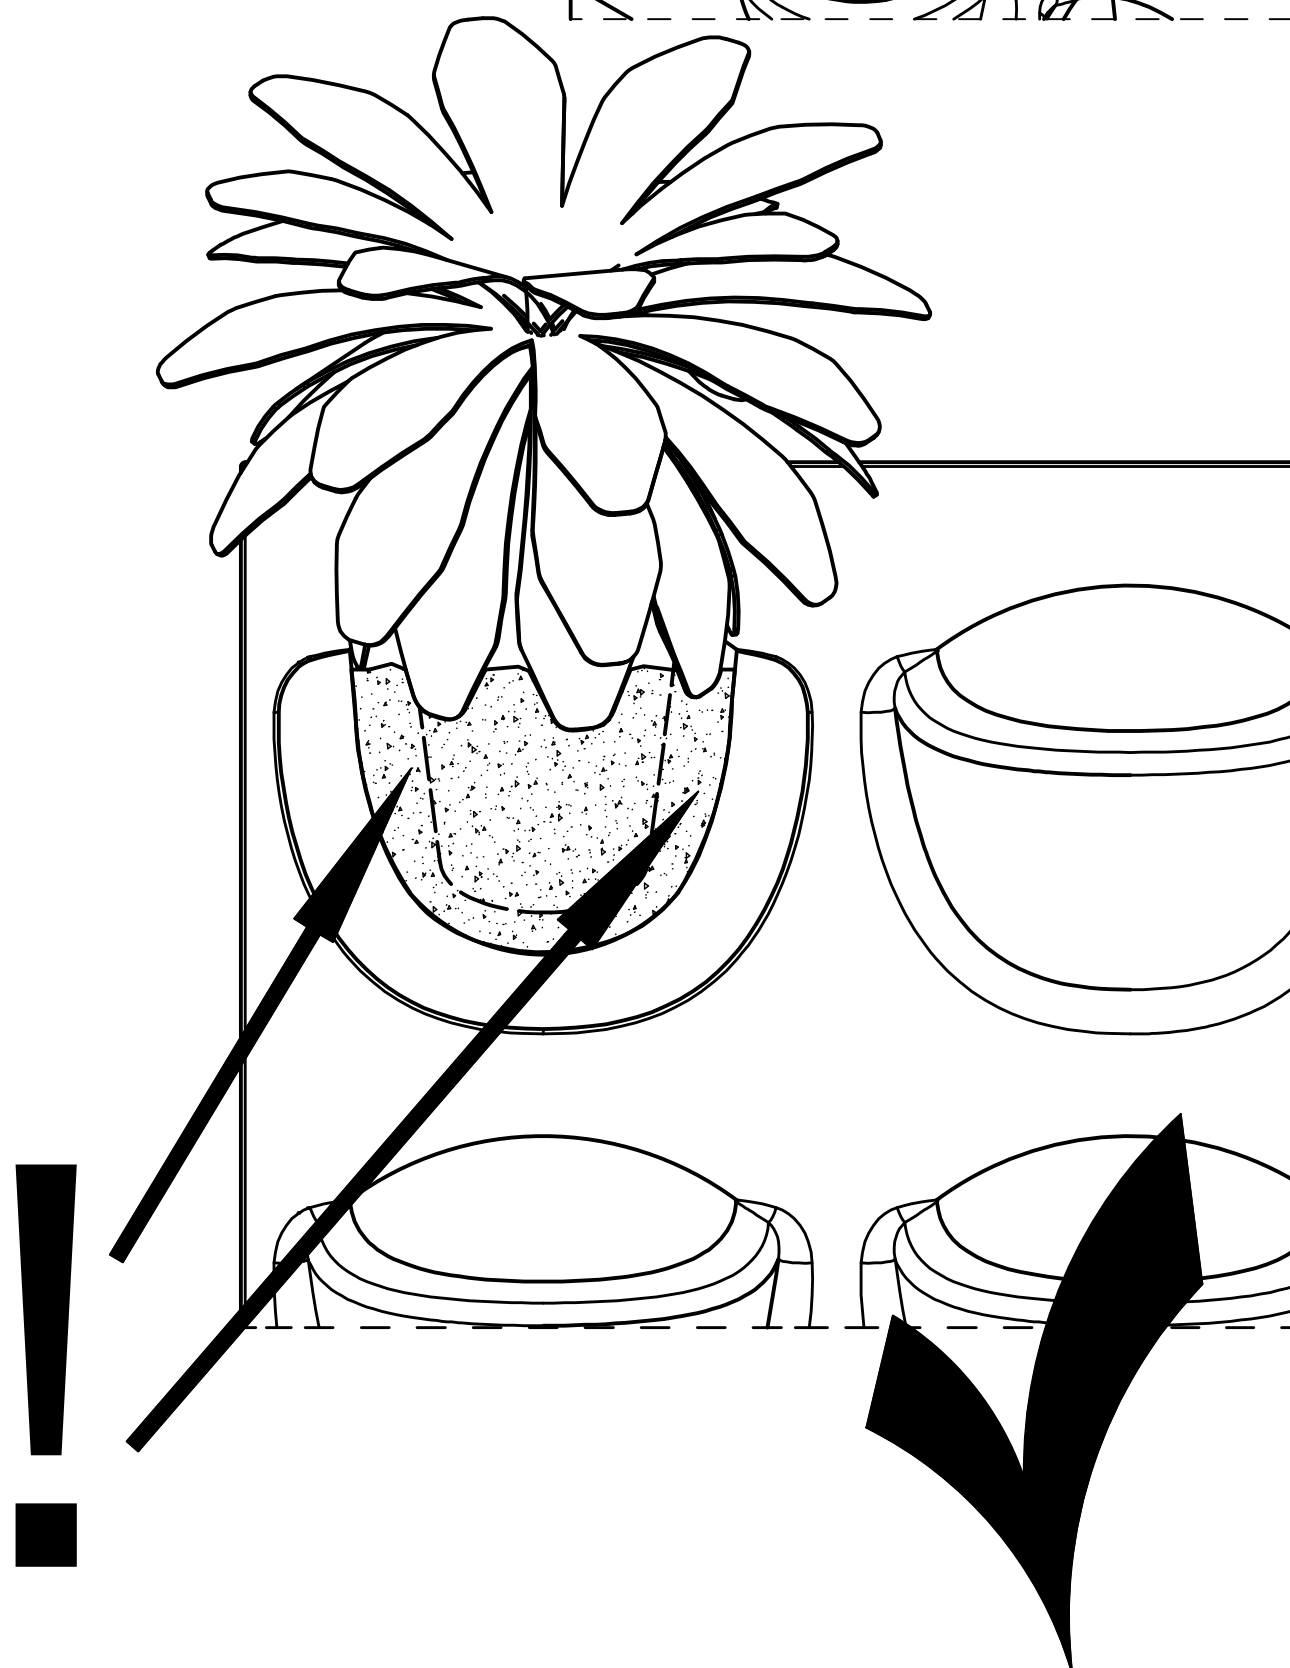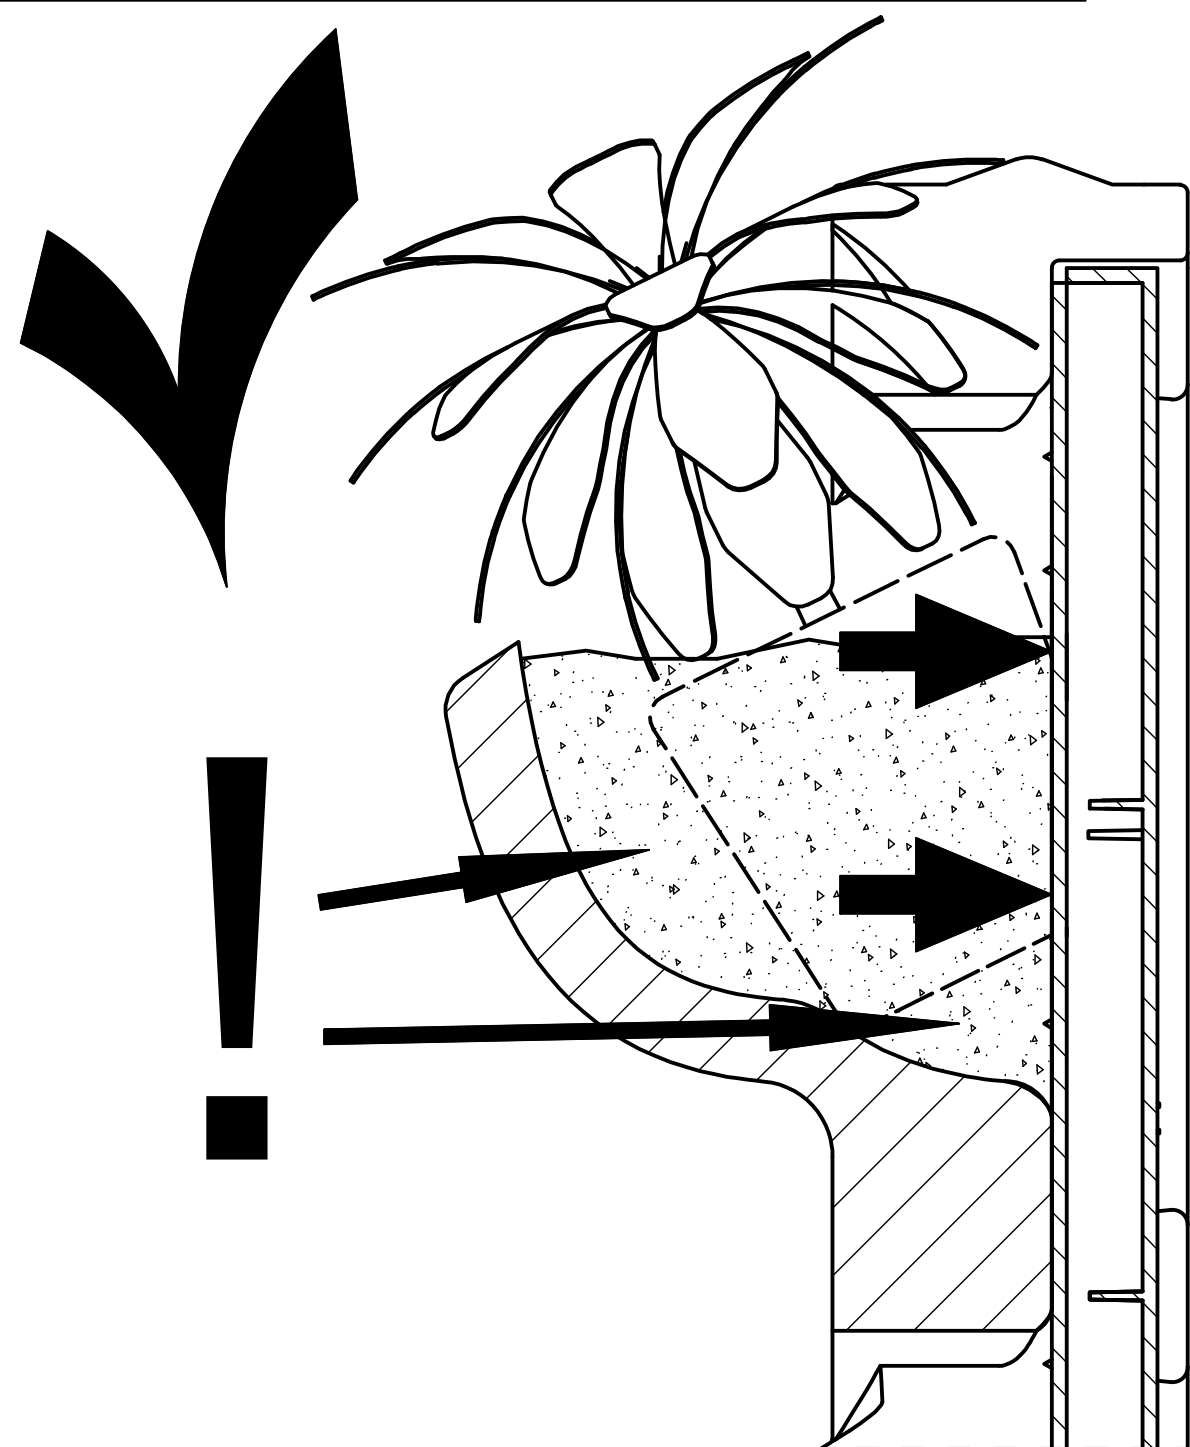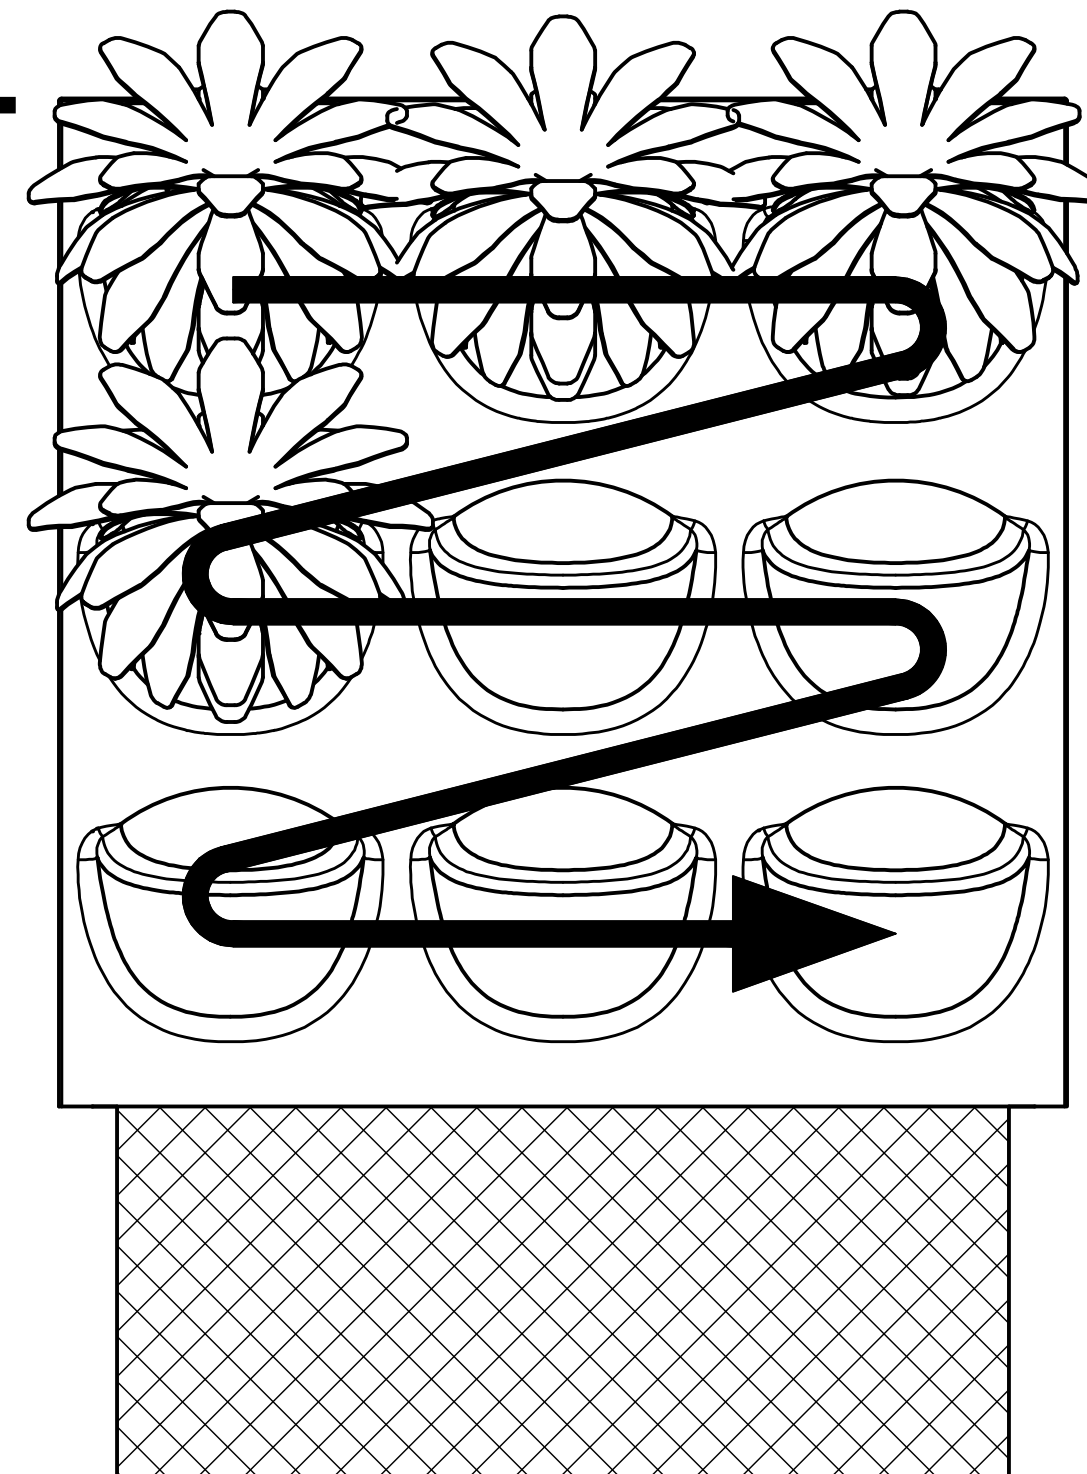





5

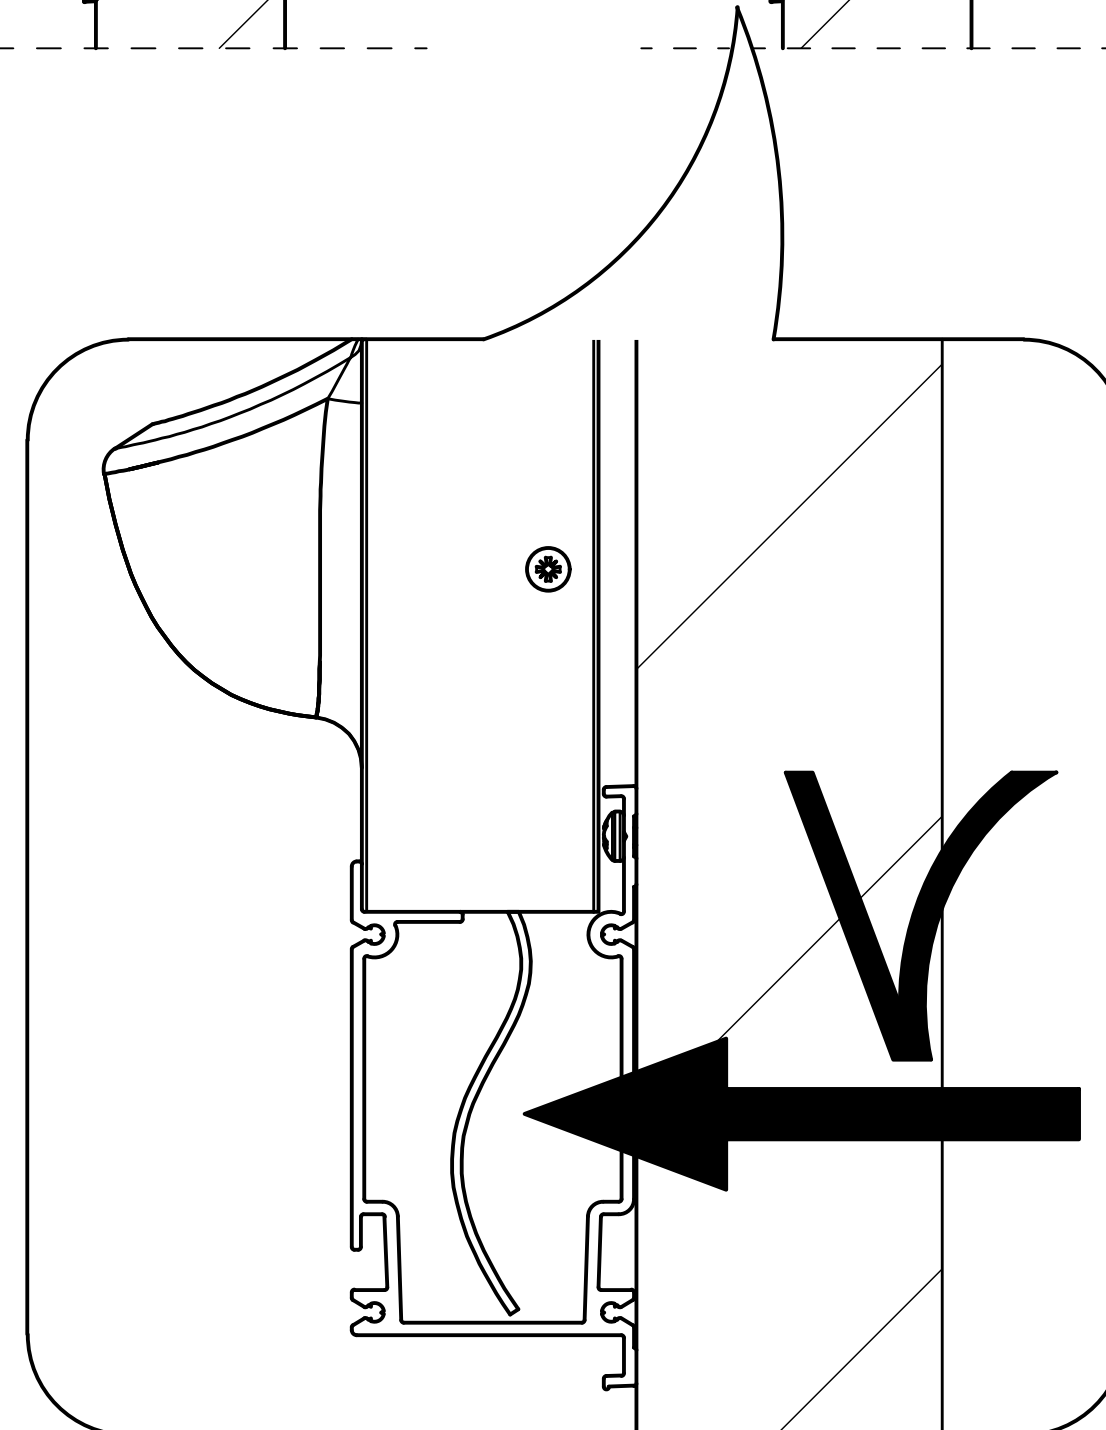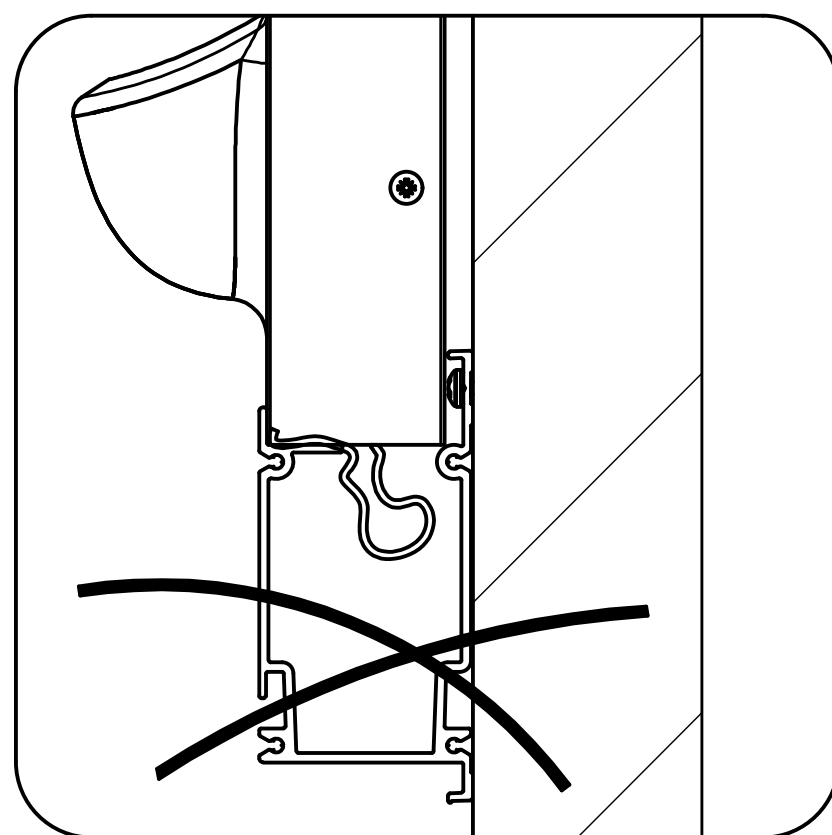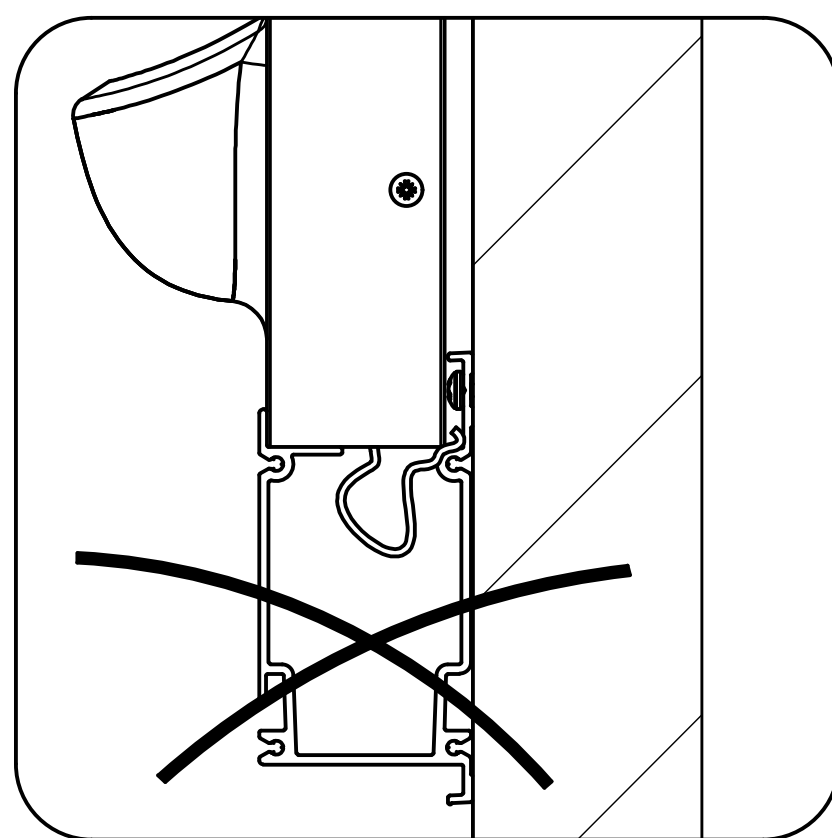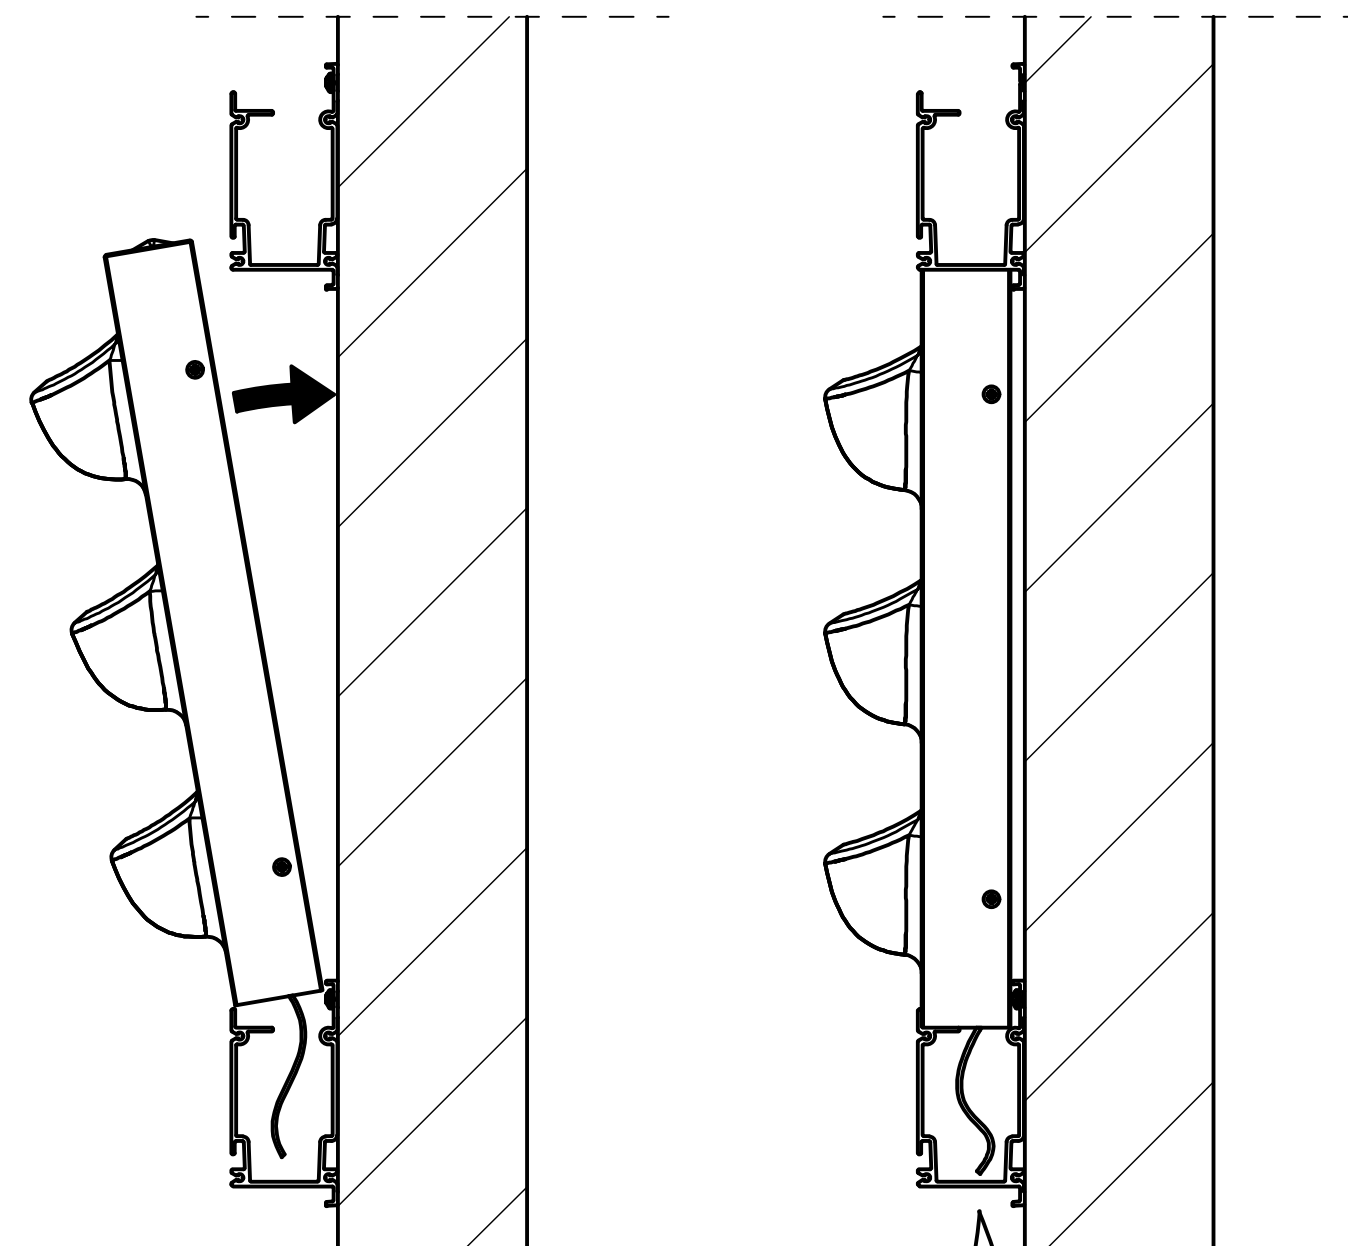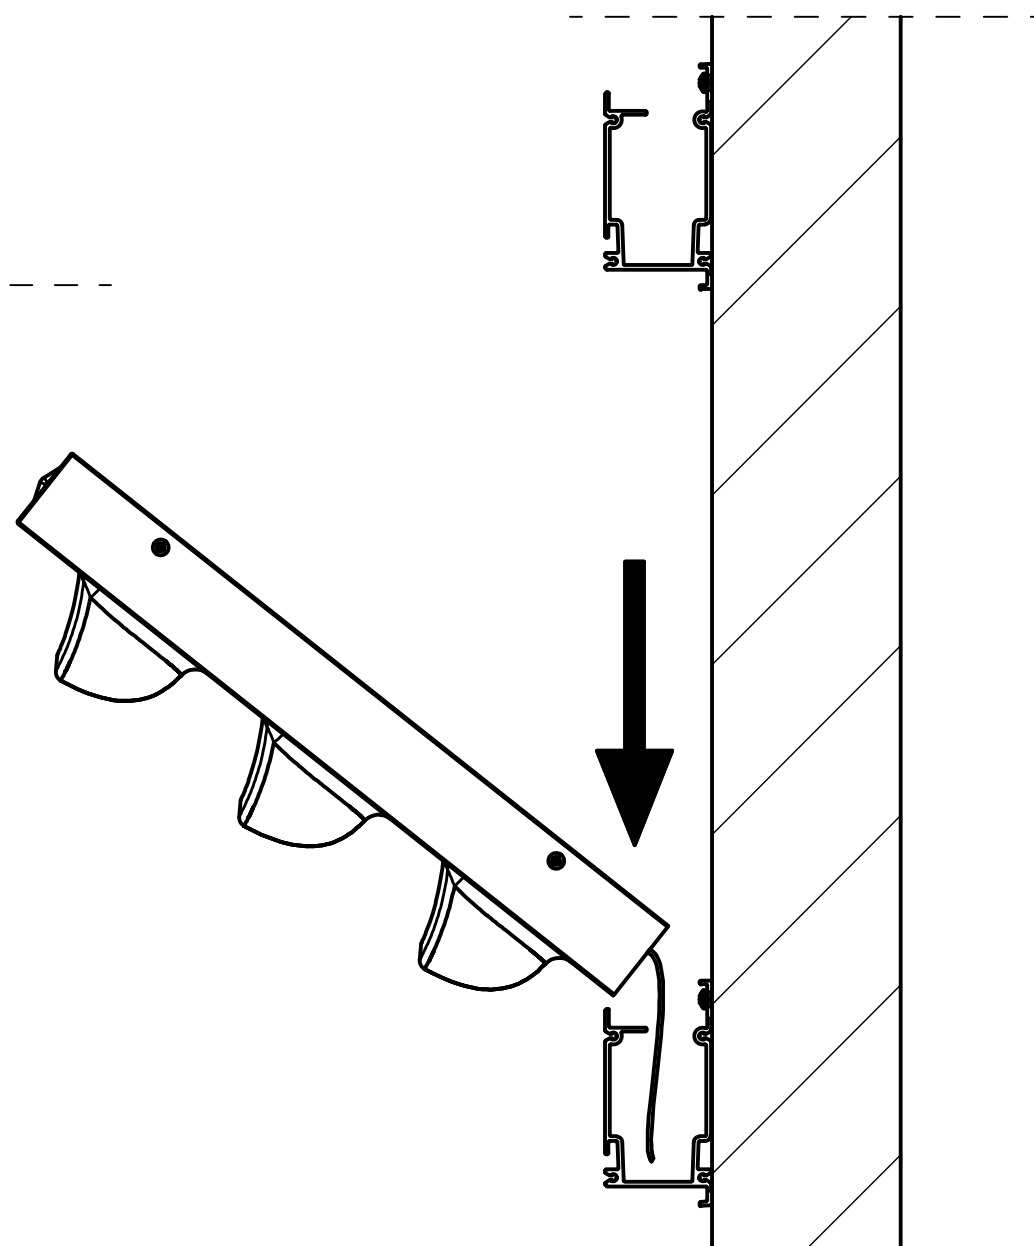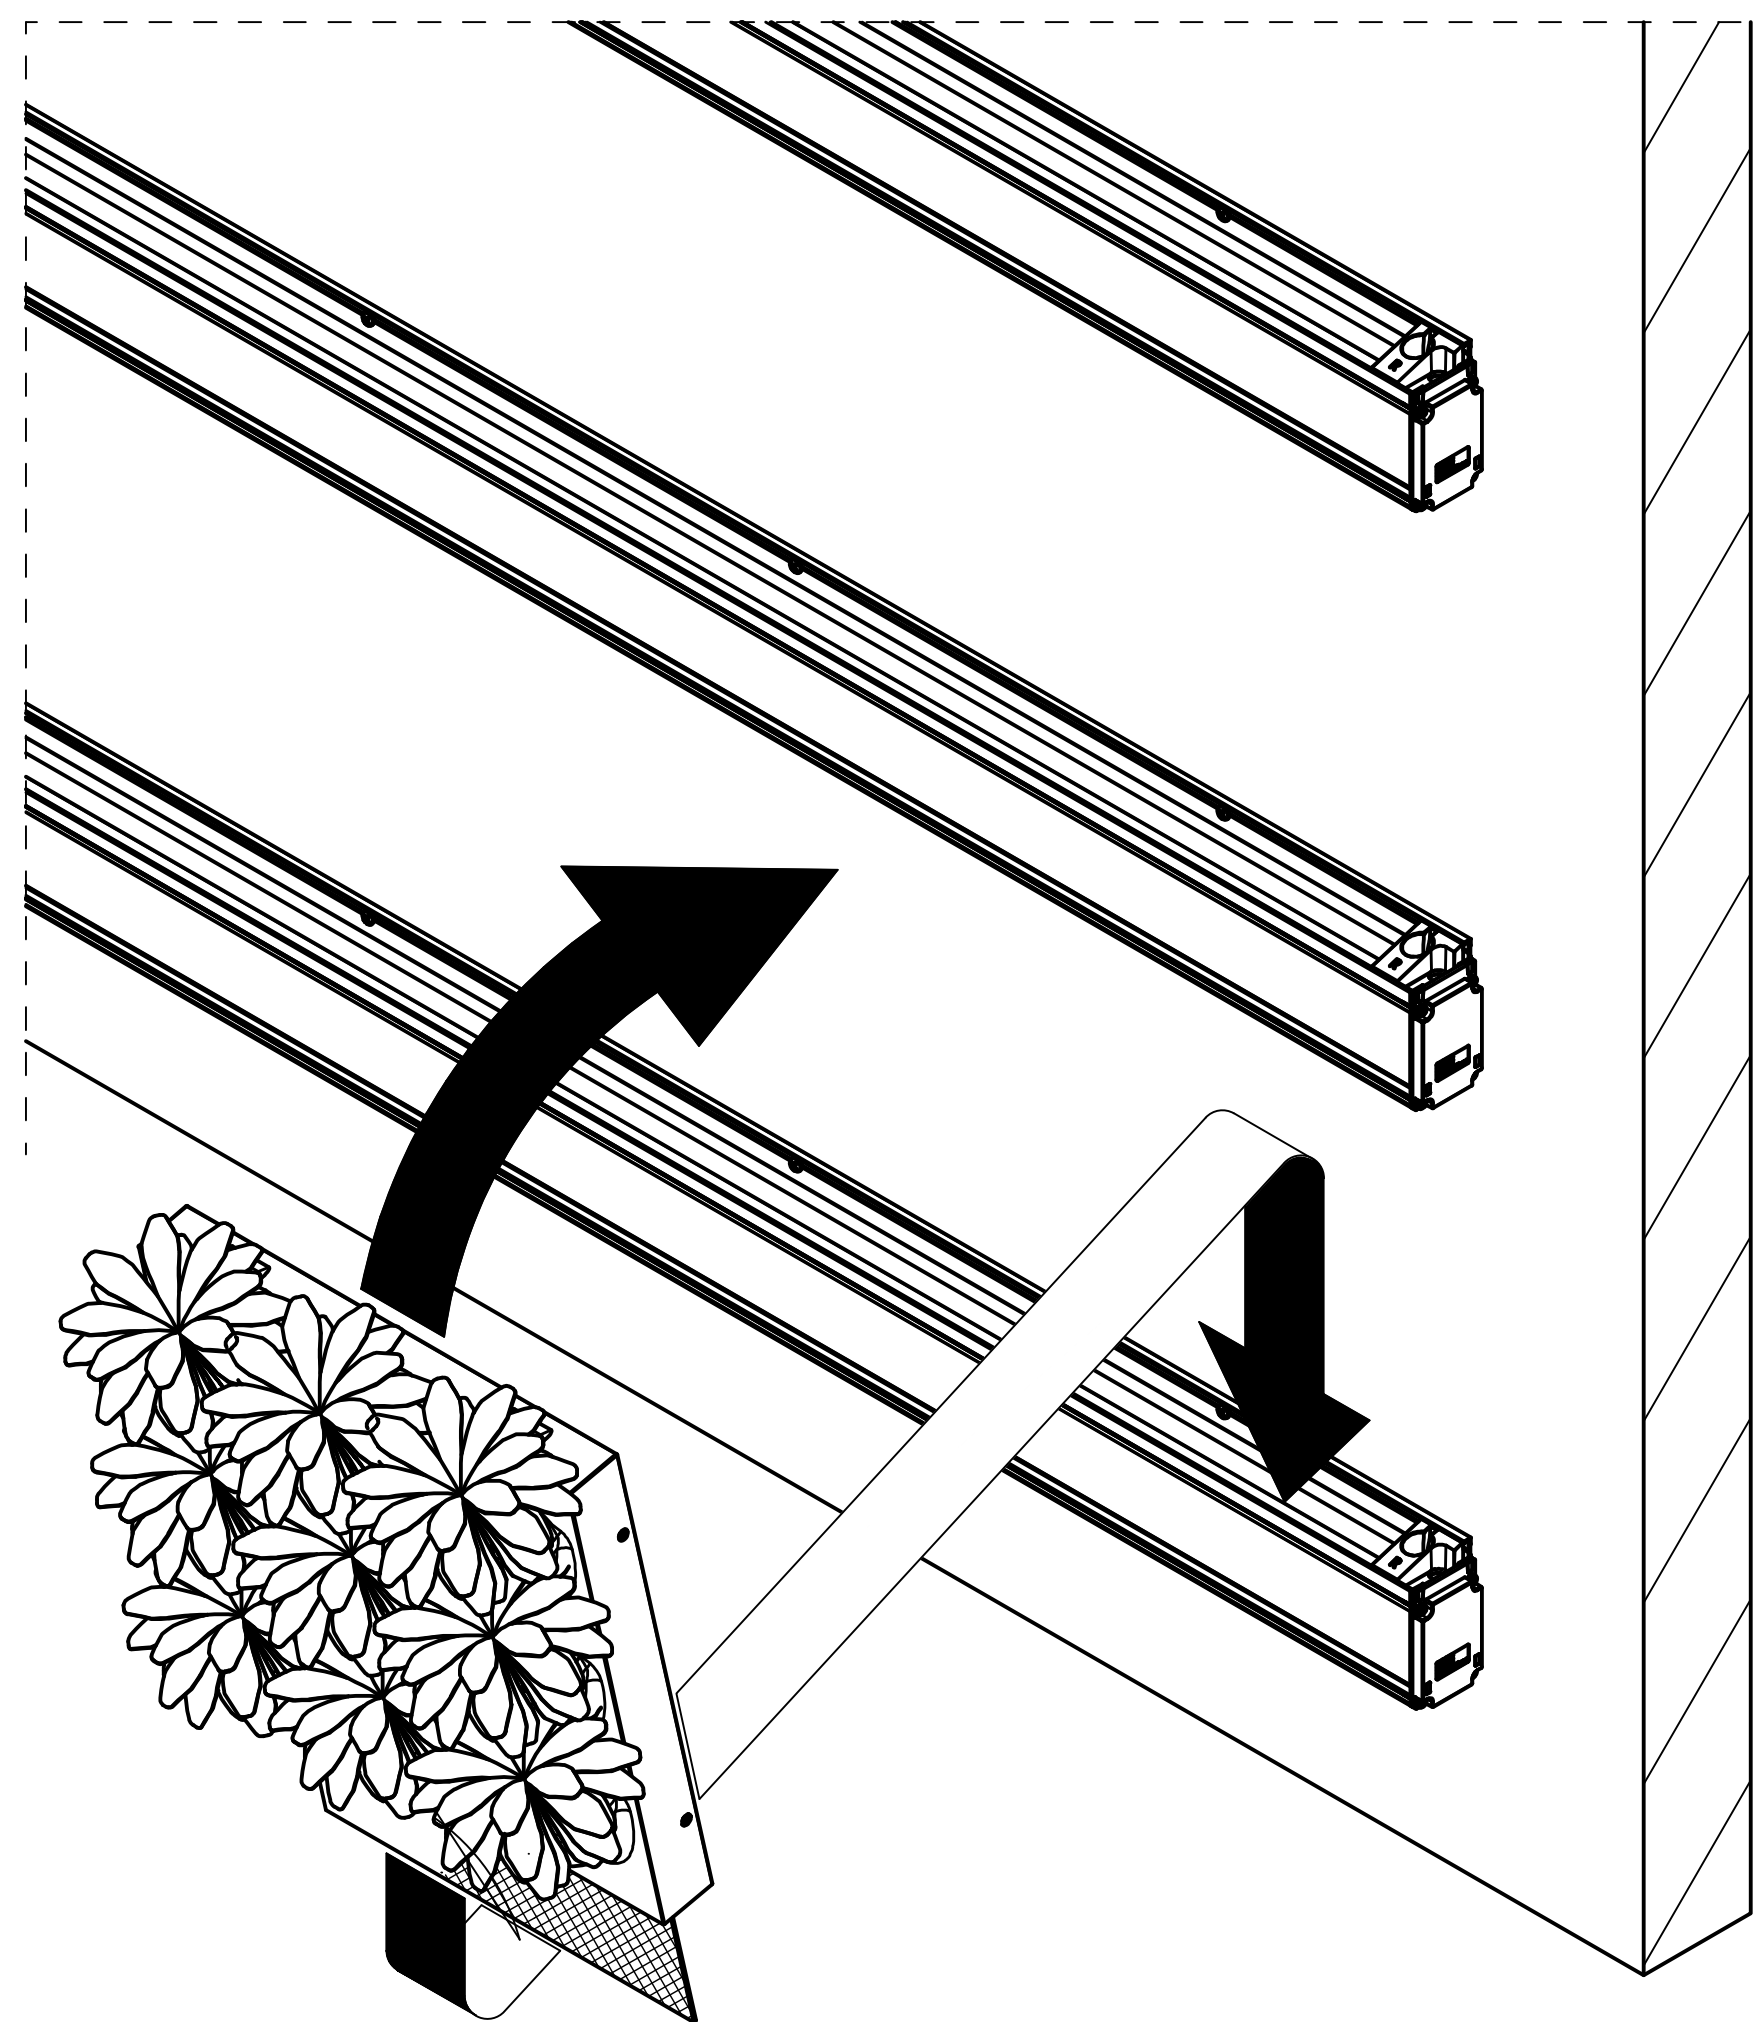

CHECK !



6

click! 


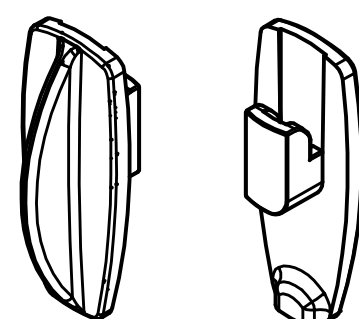
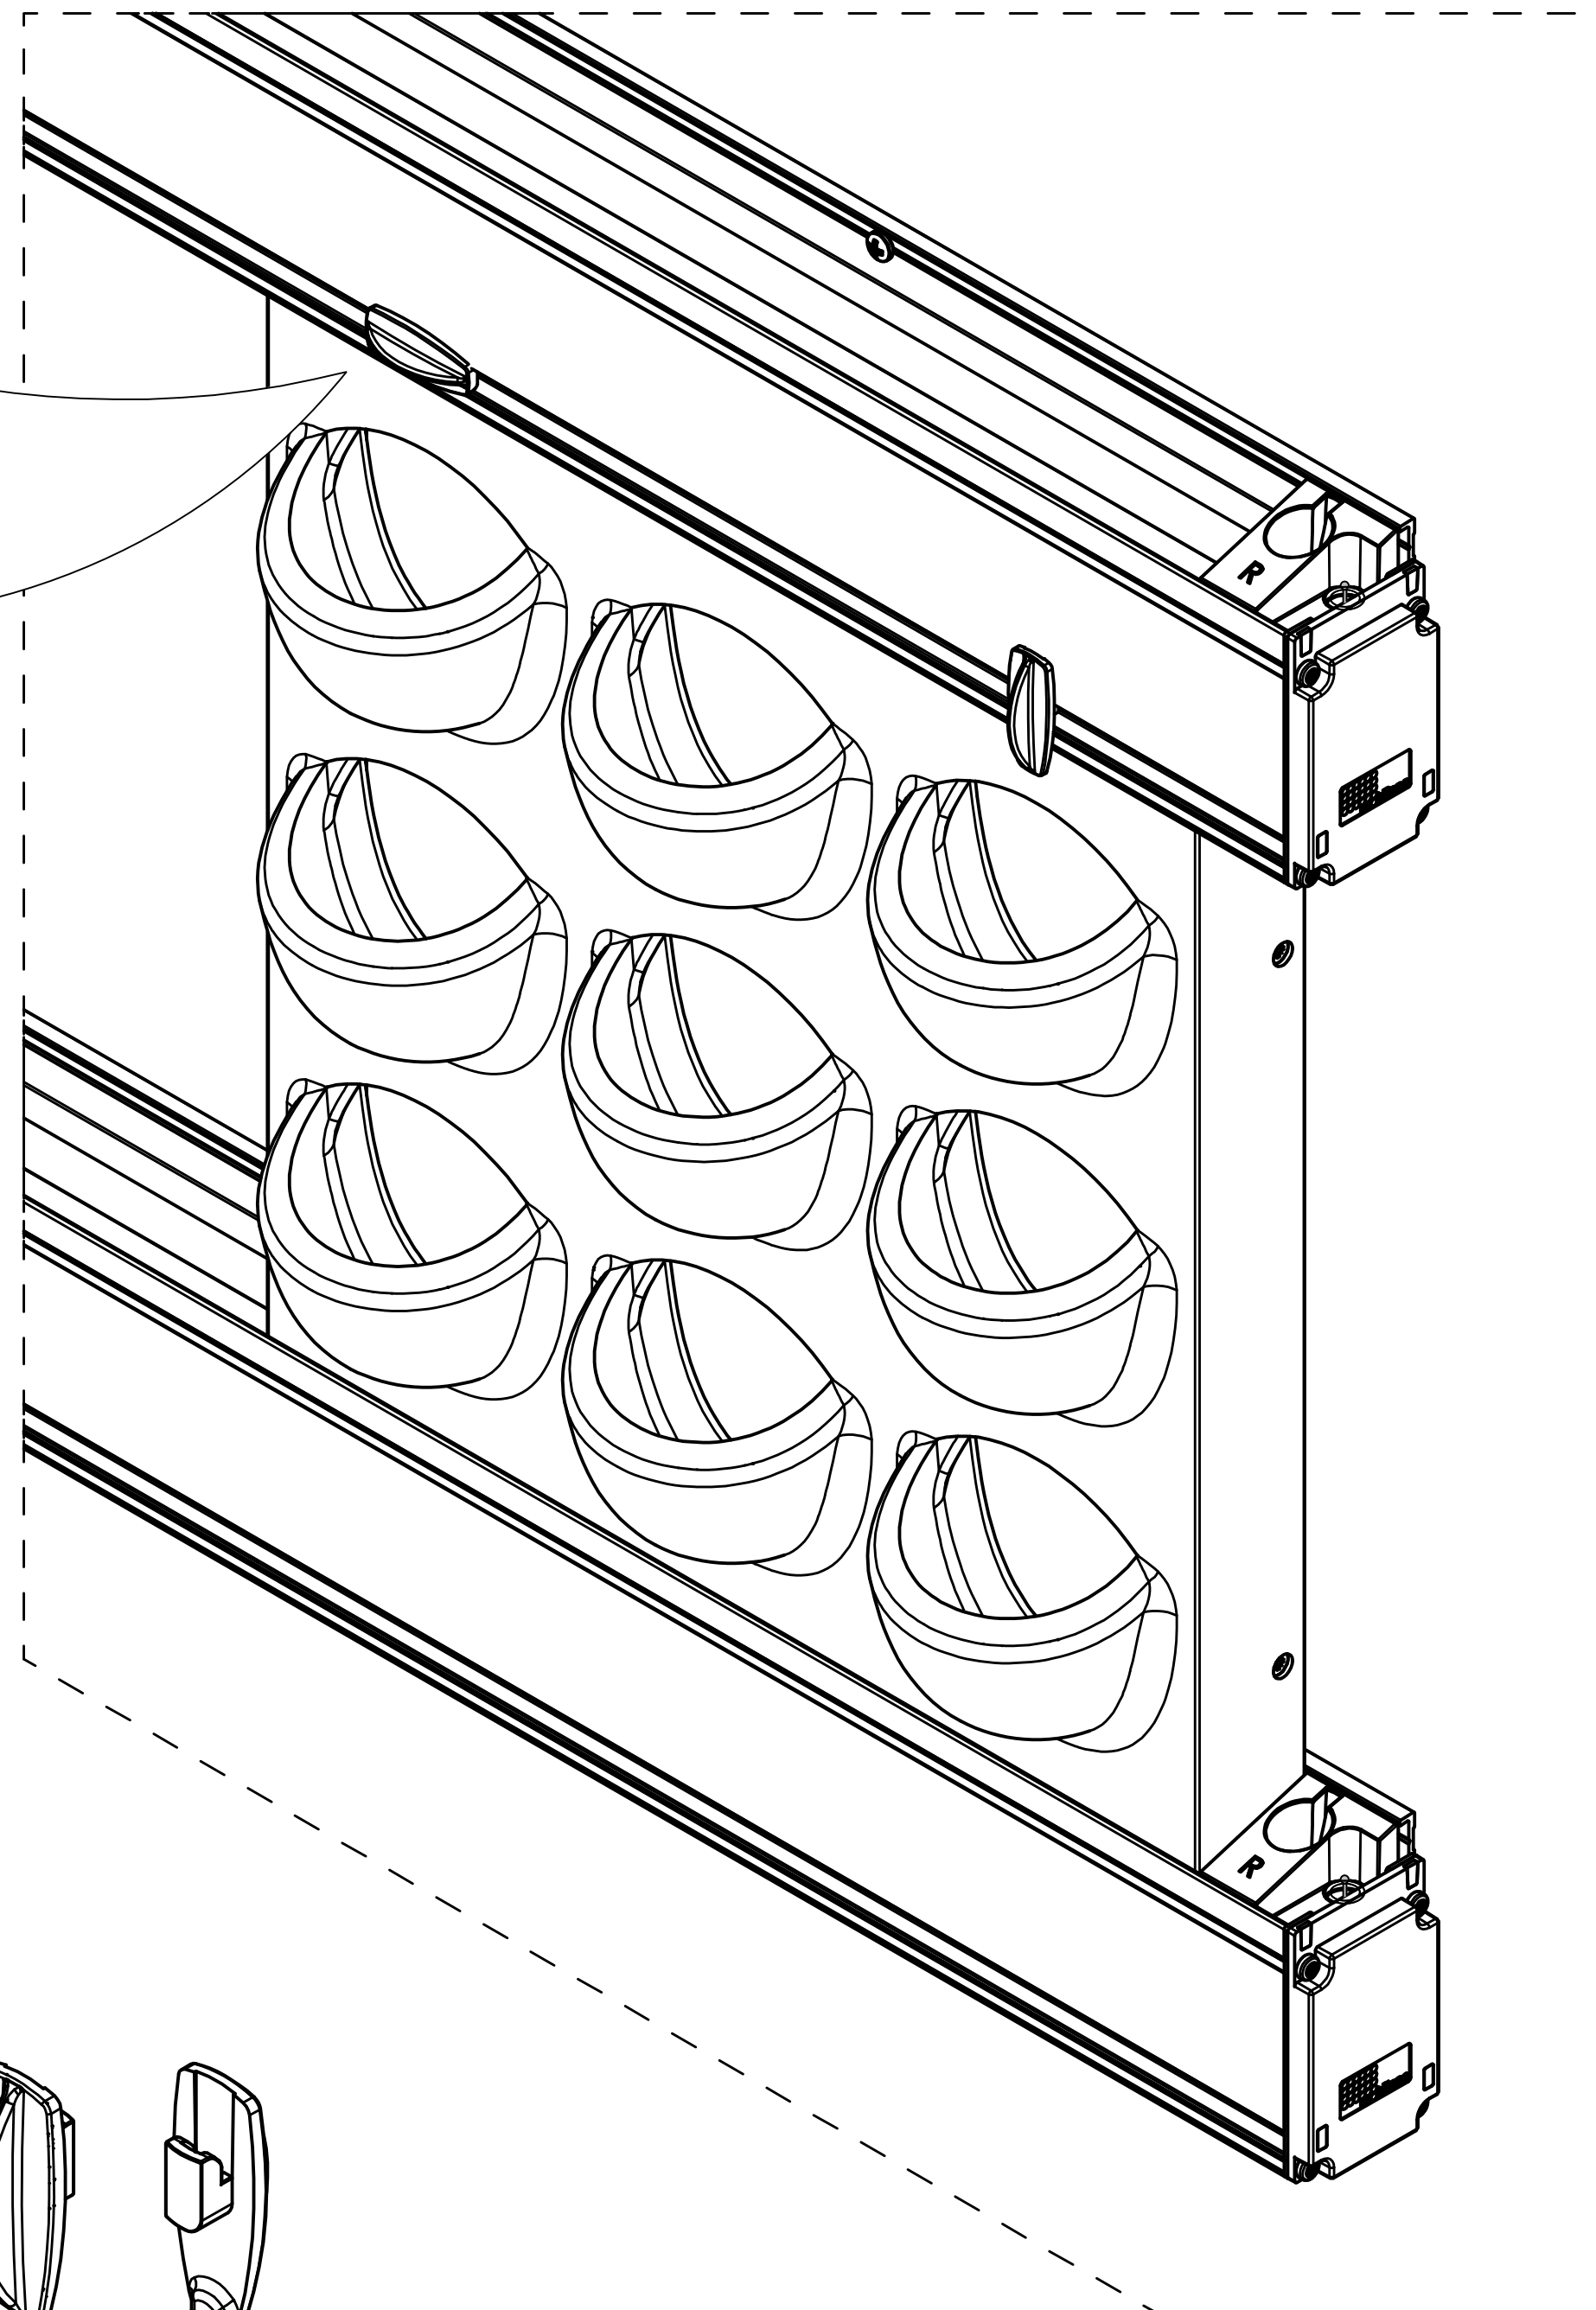
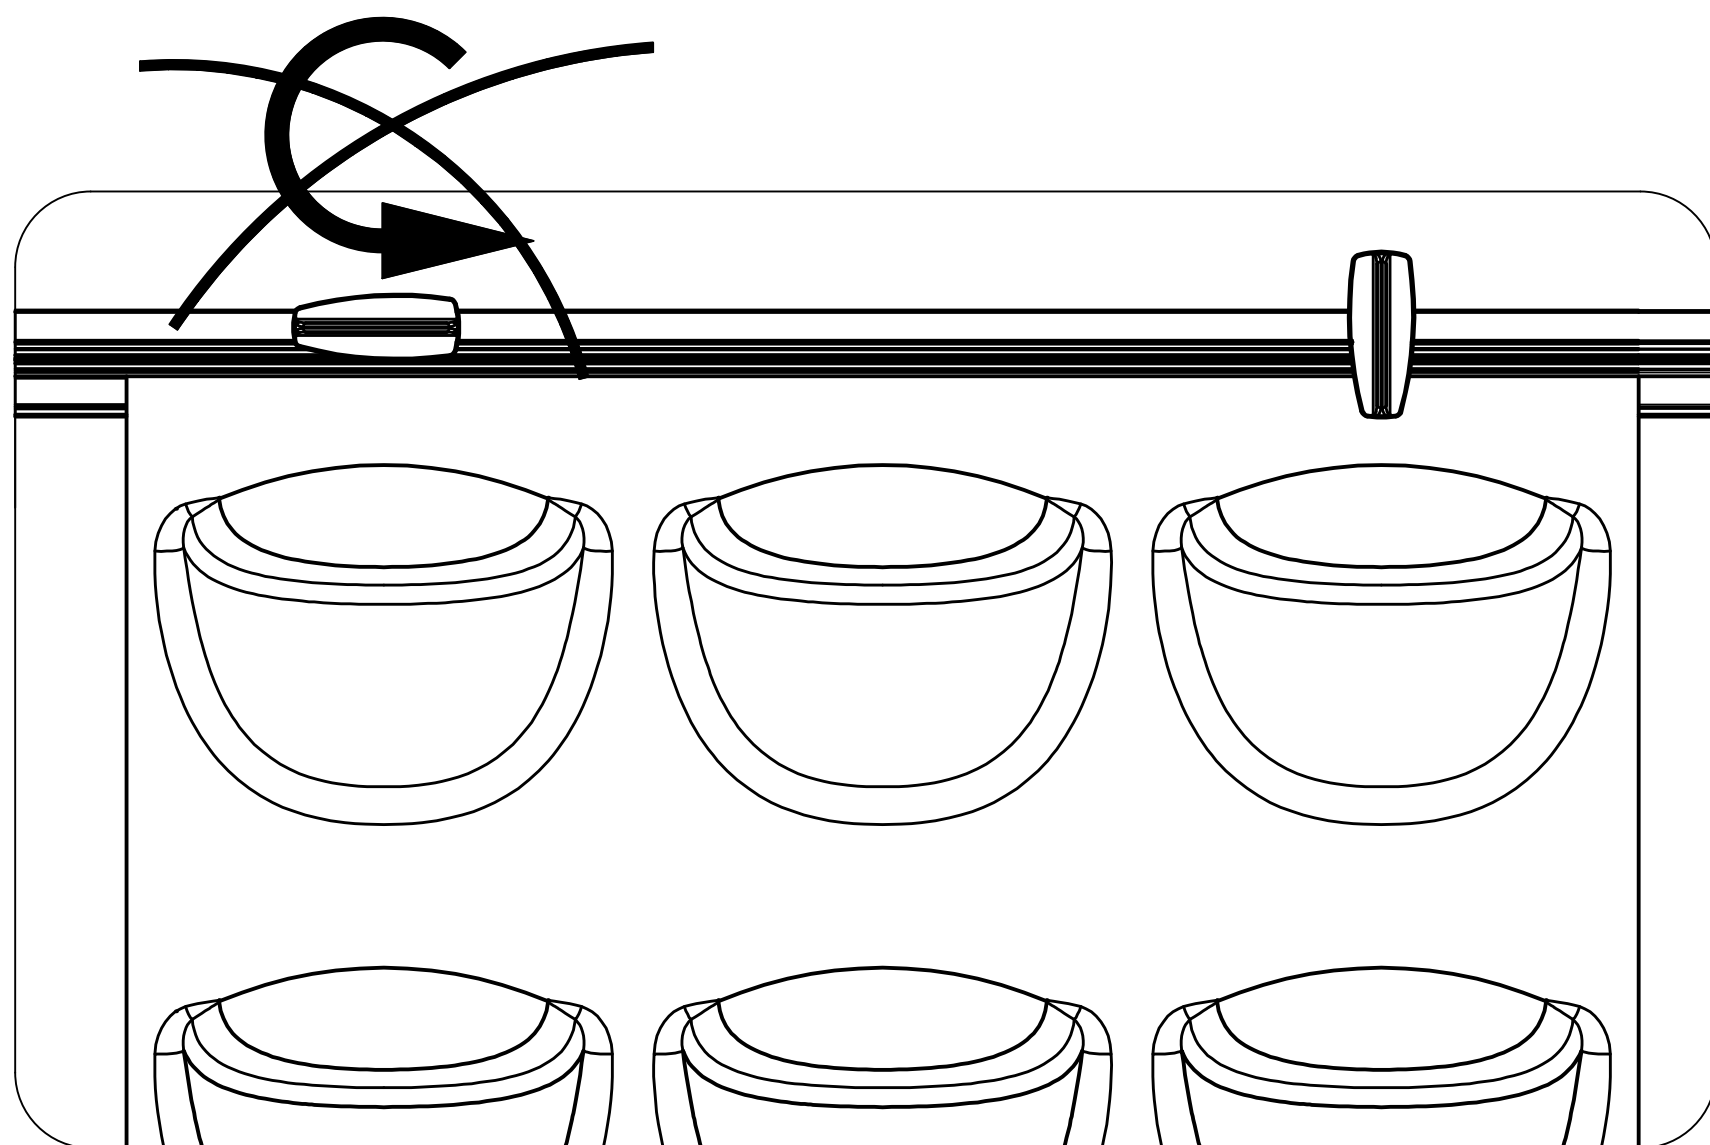
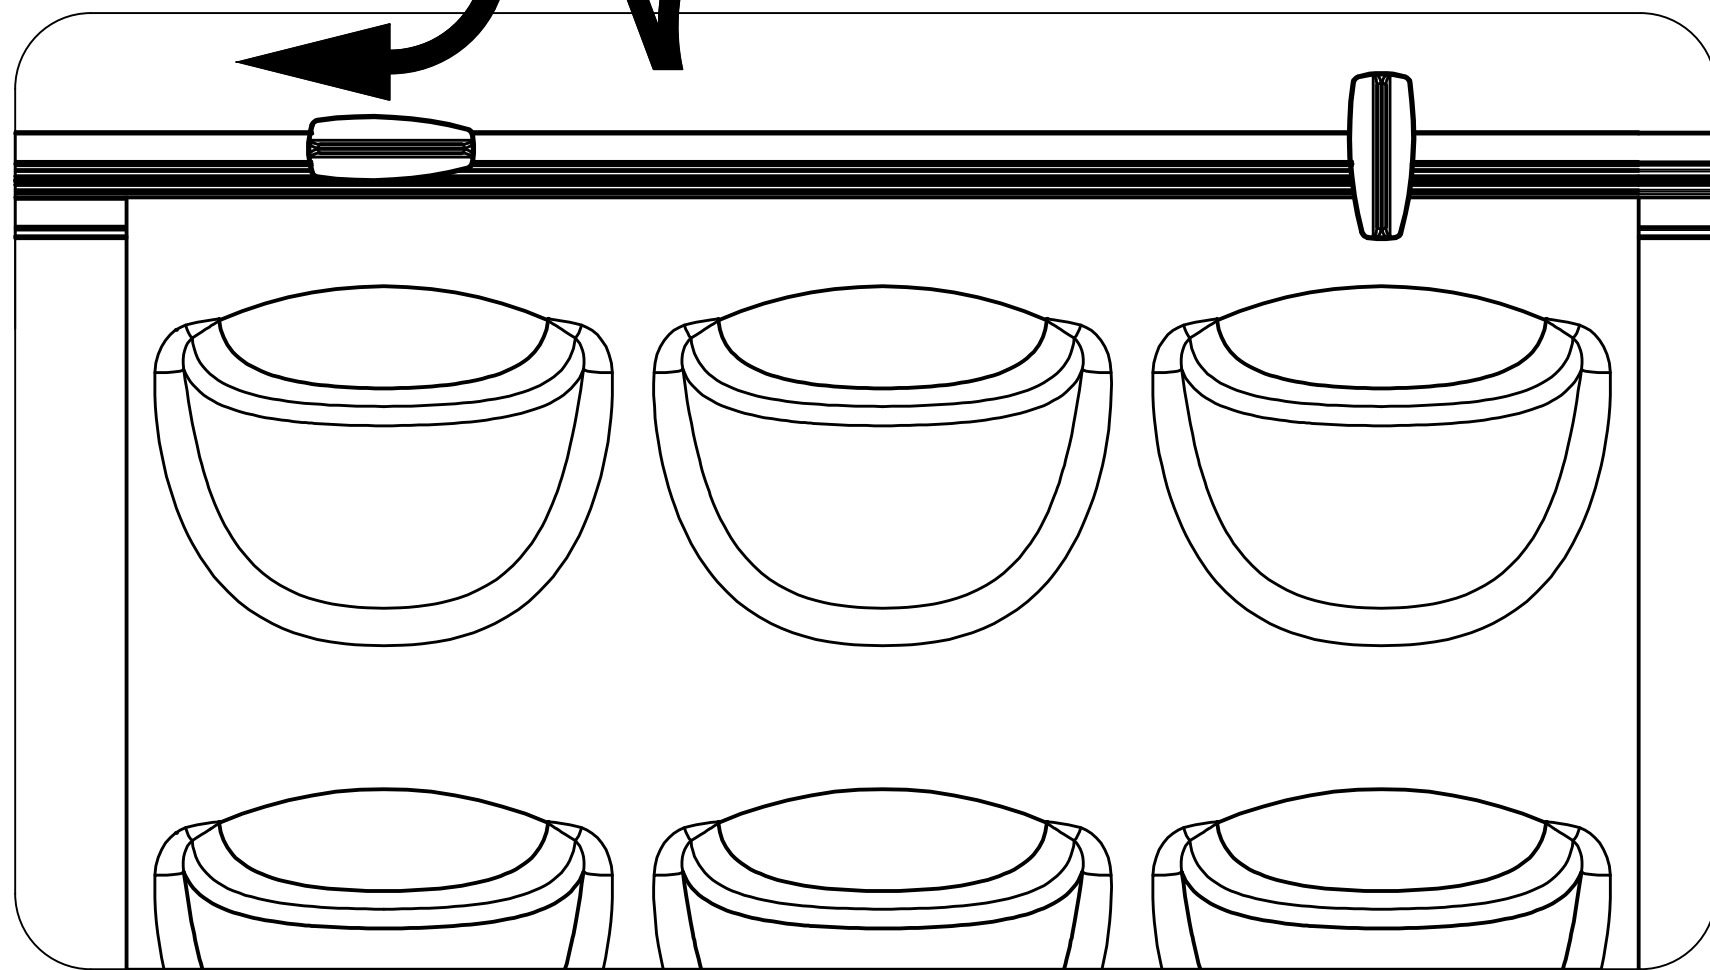


2x




7

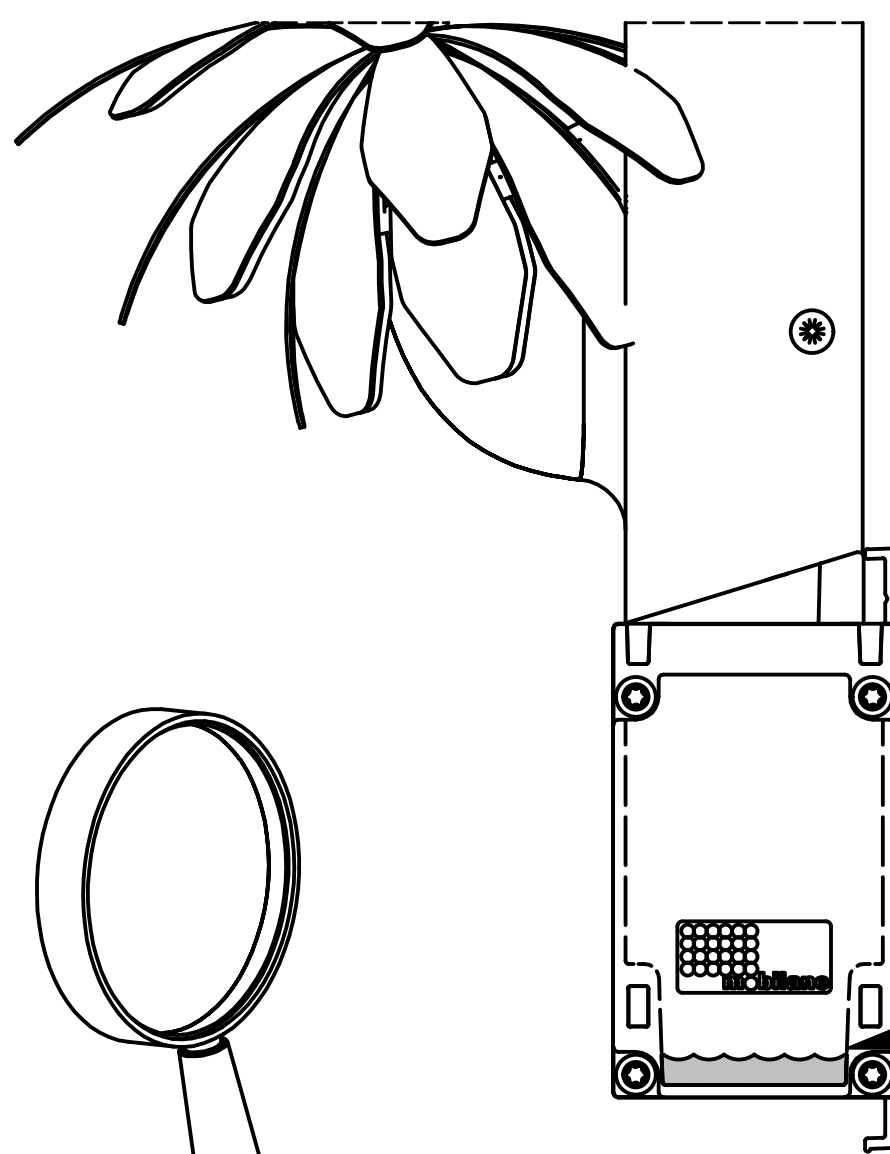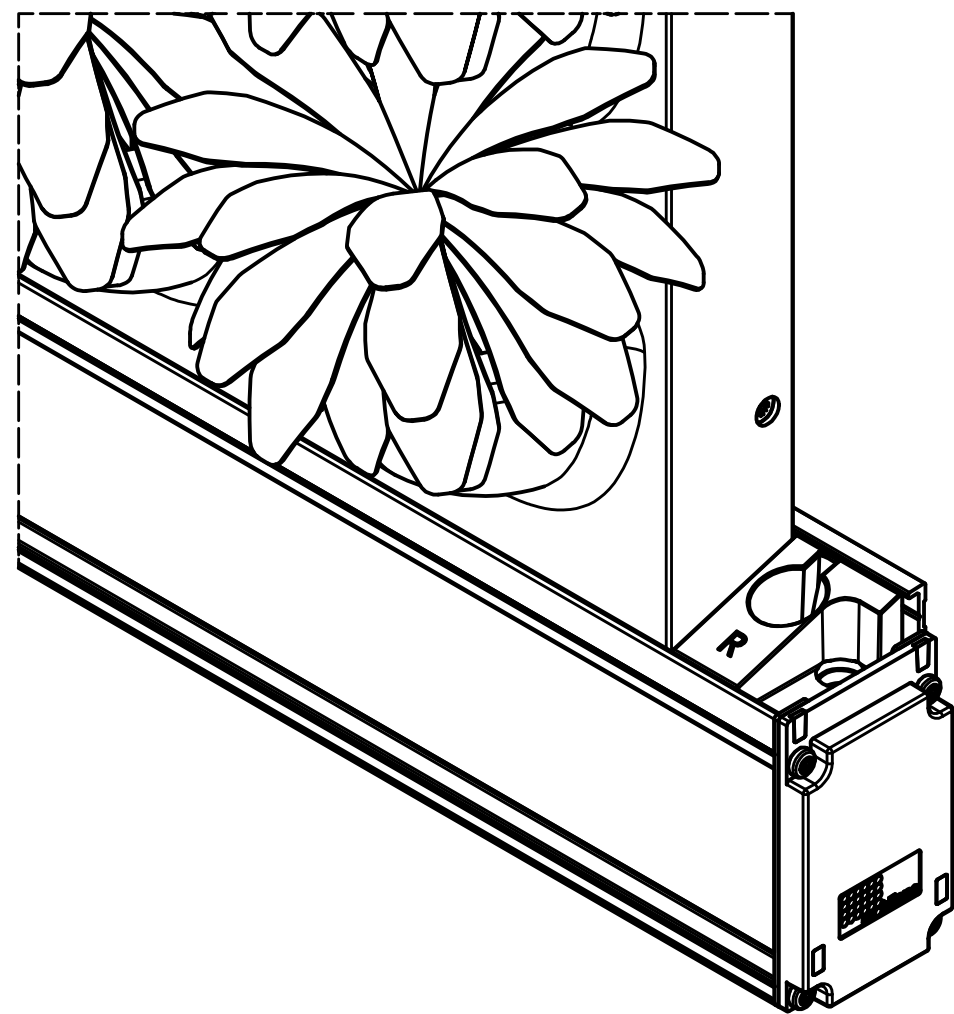

! = Fill

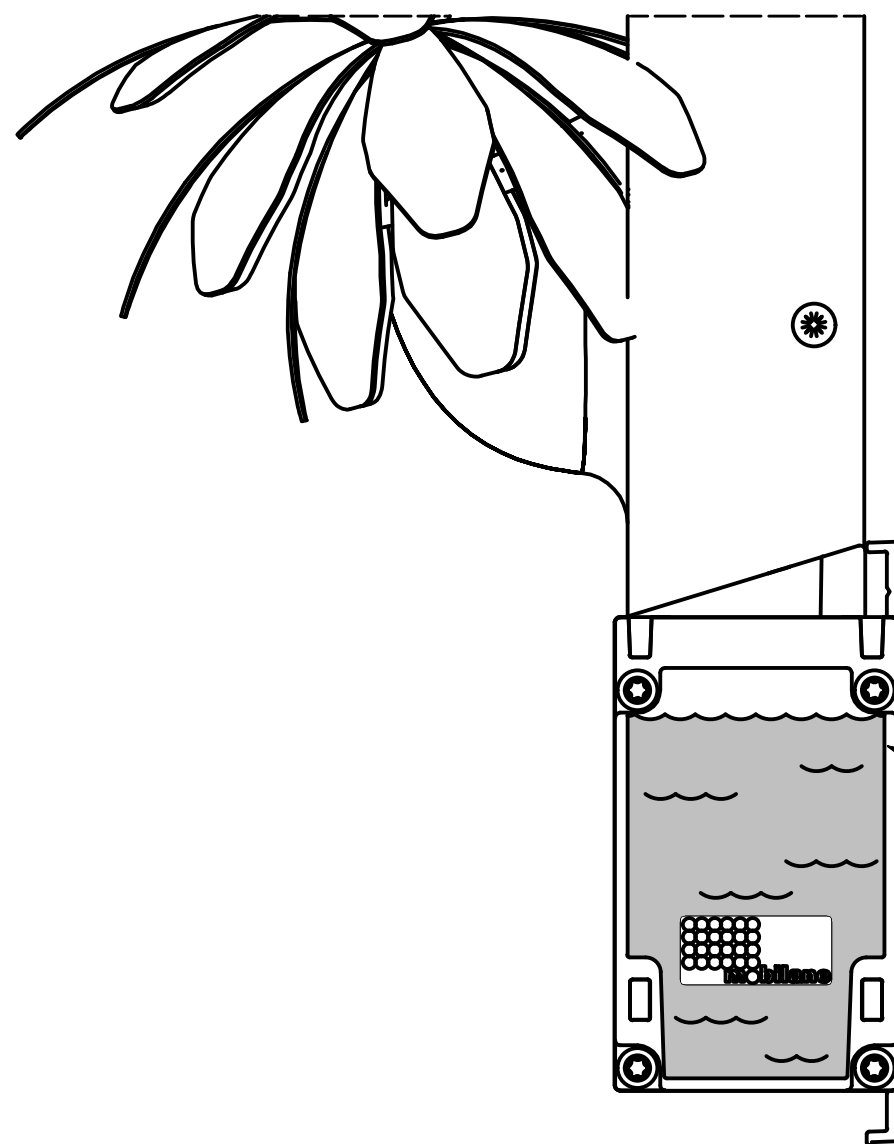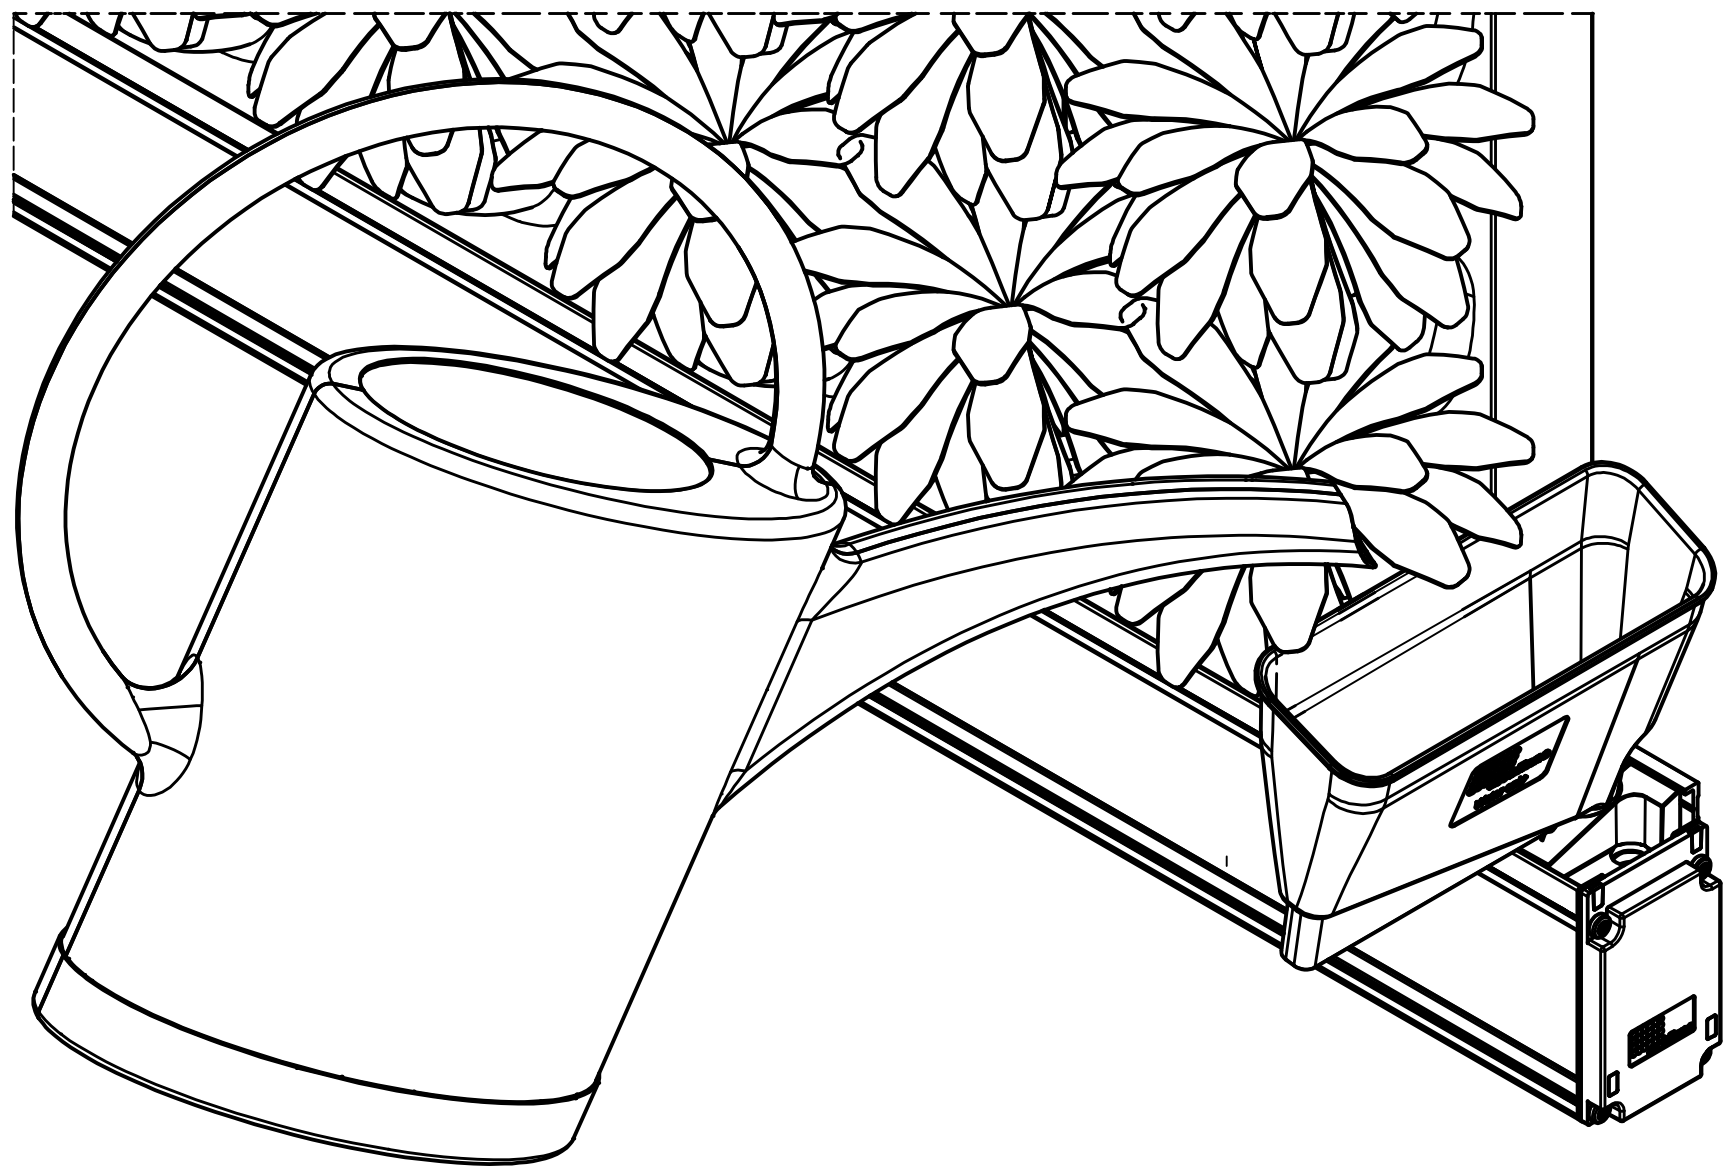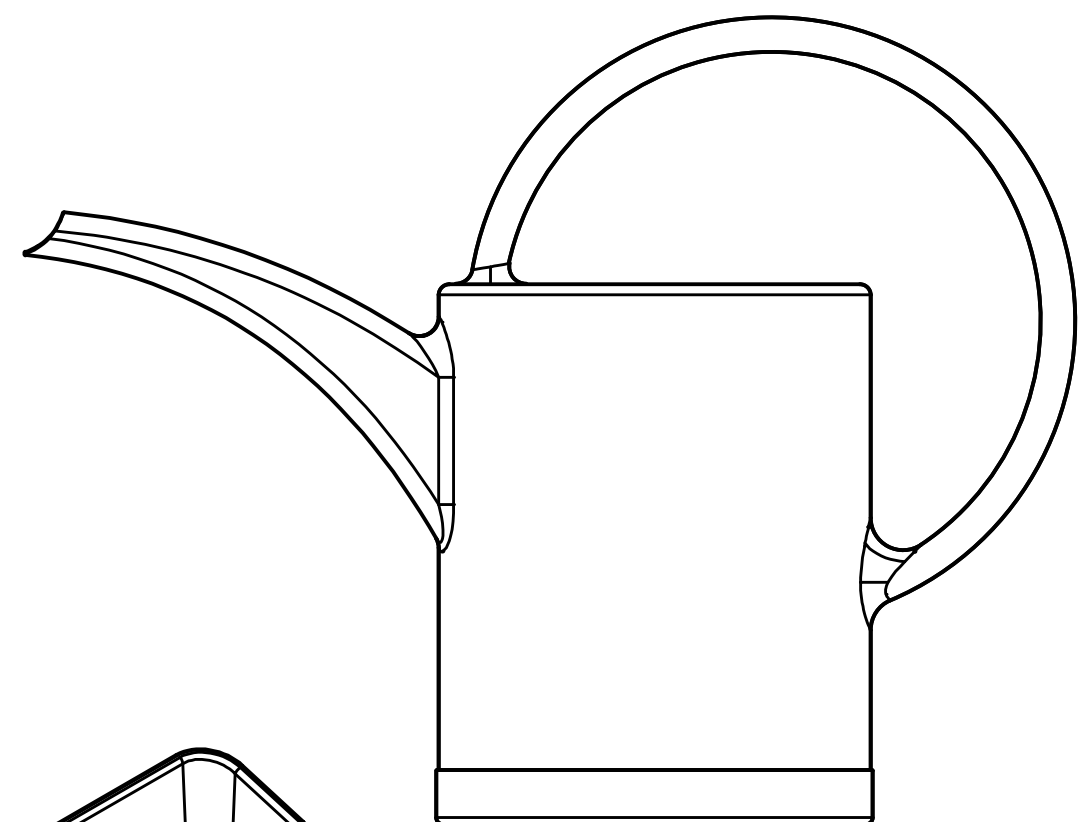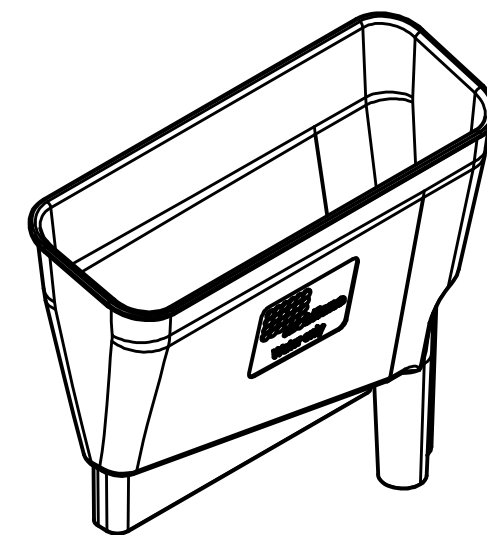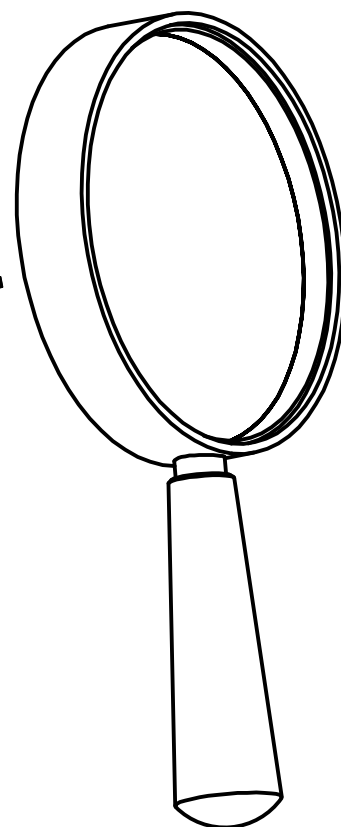

! =

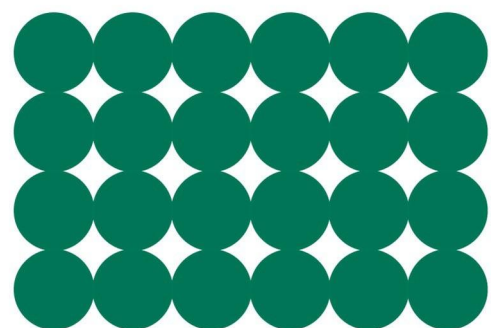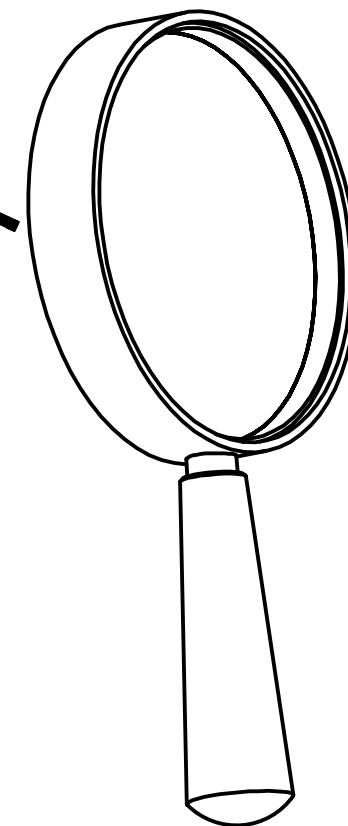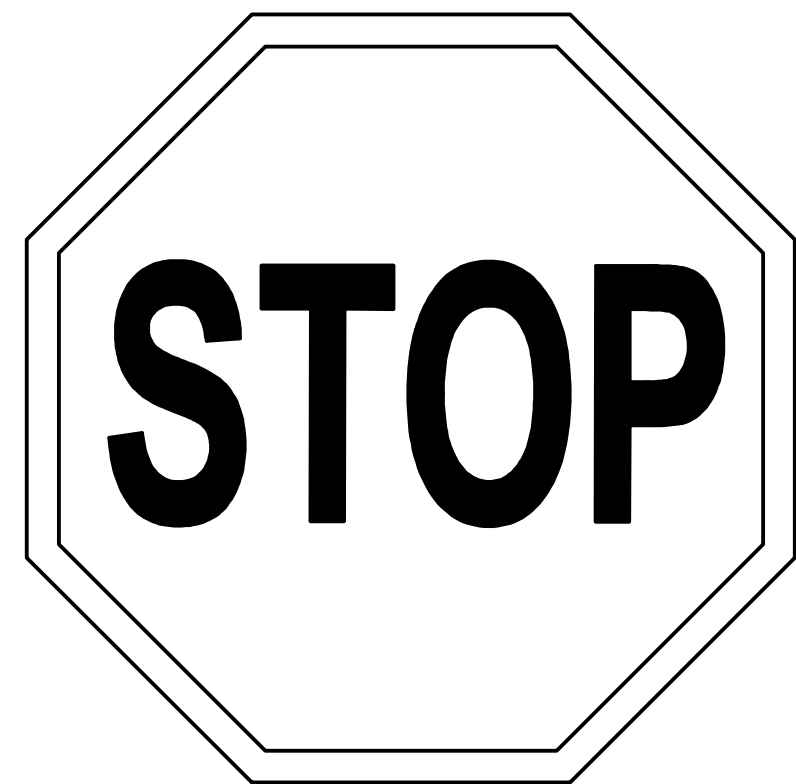

mobilane