


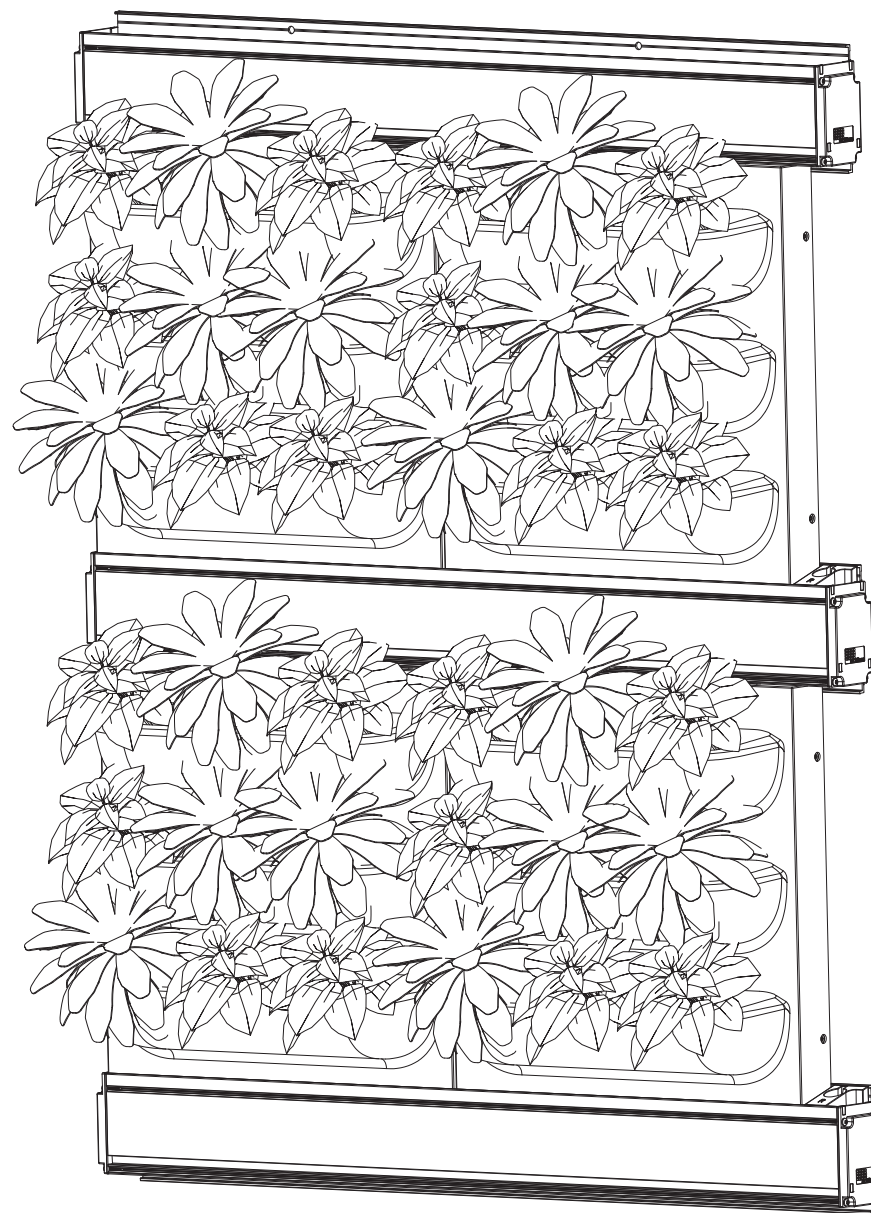
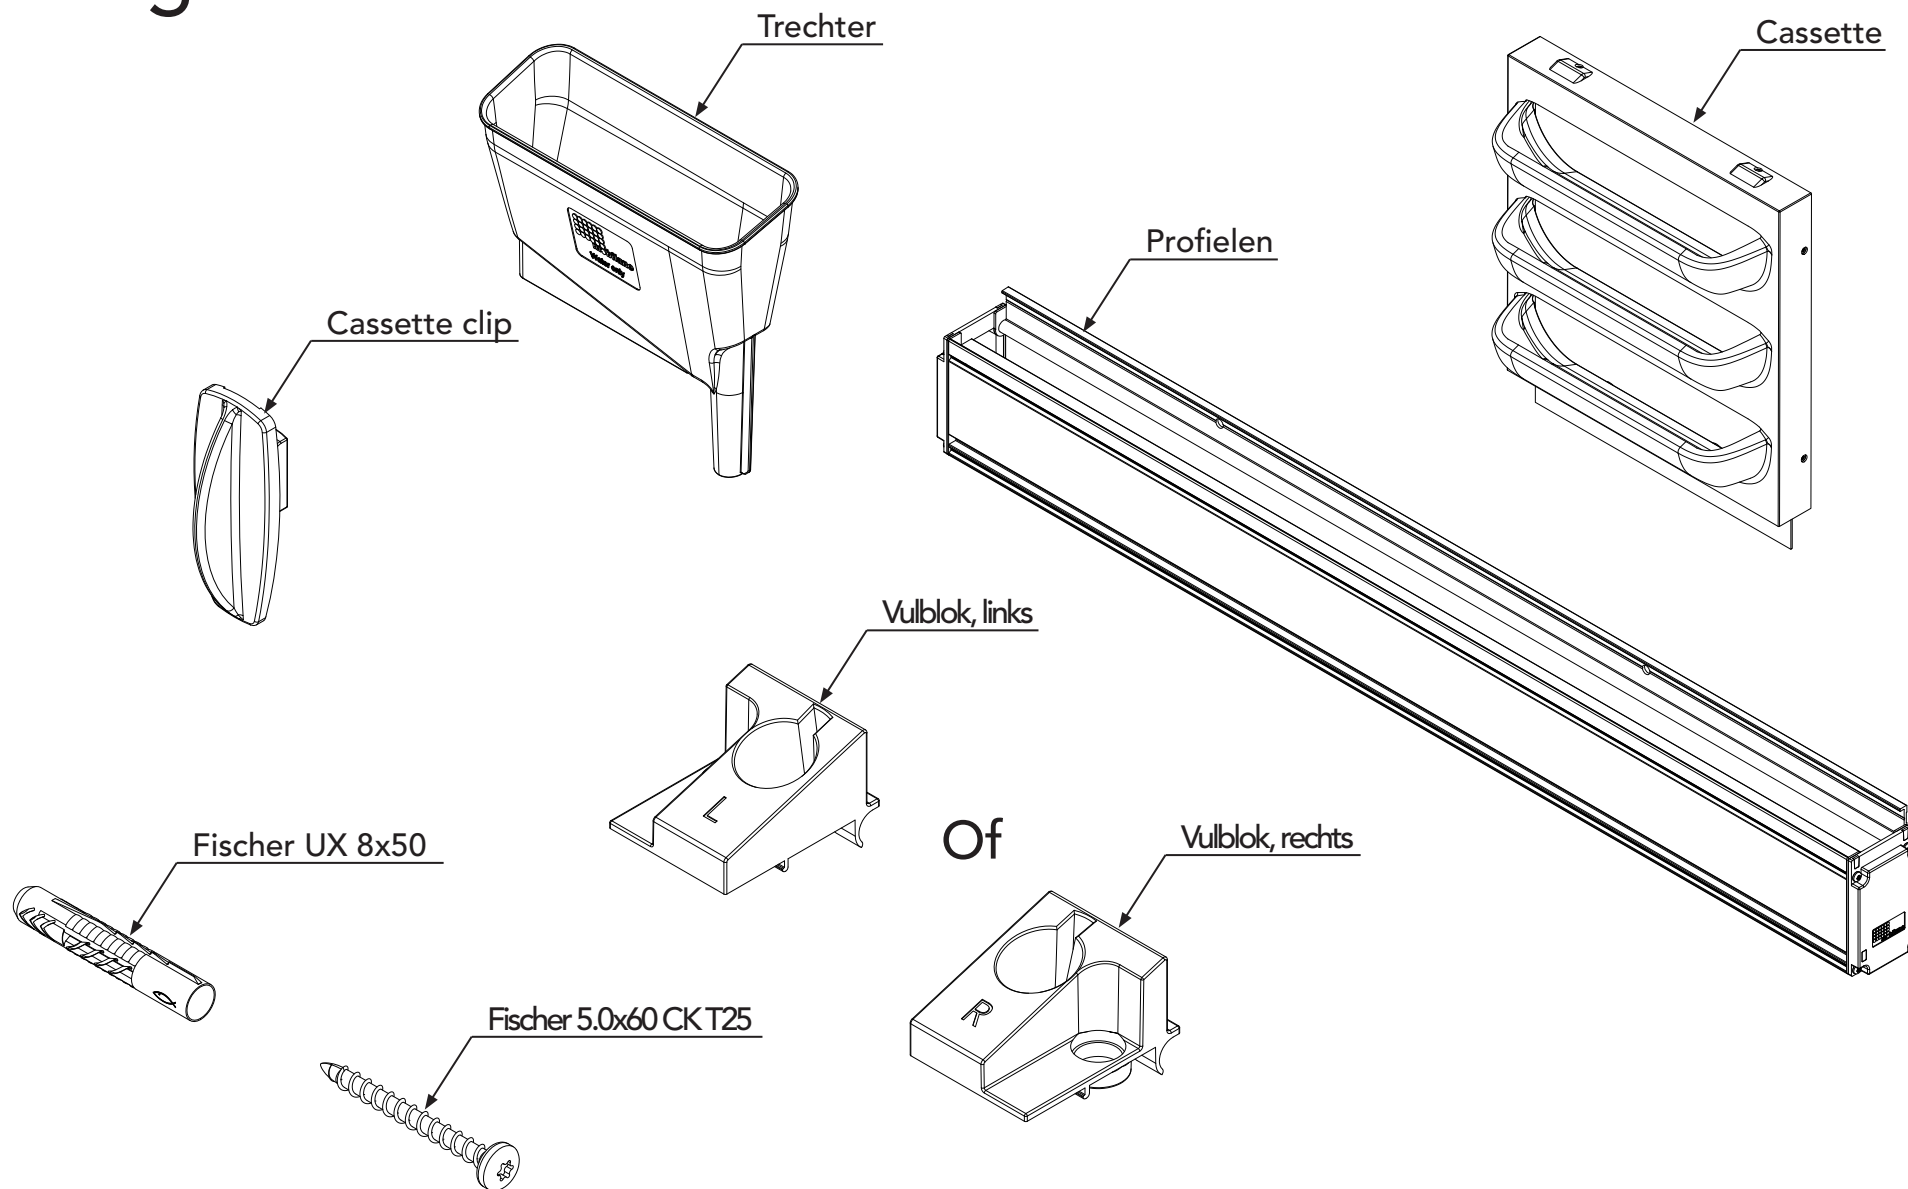
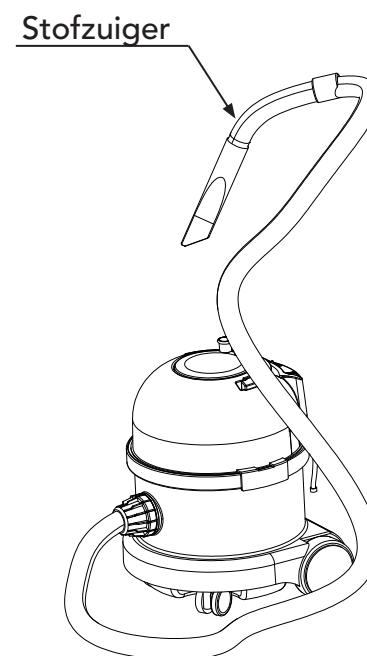
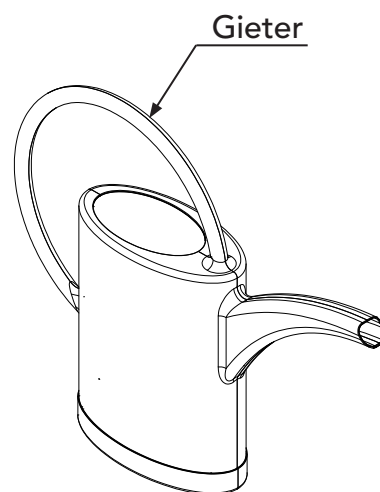
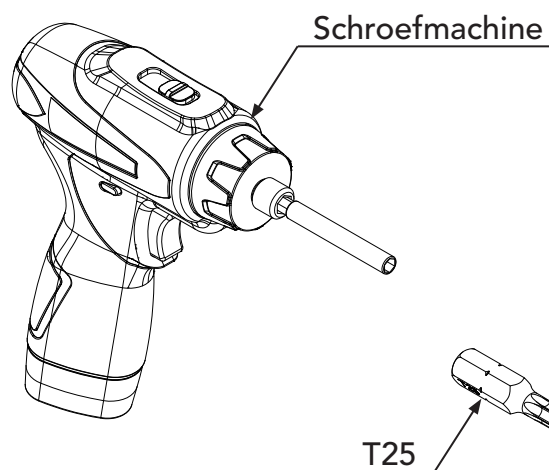


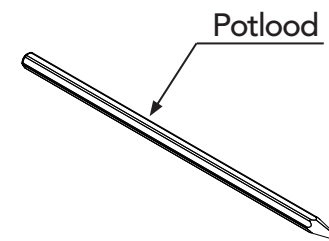


Meegeleverd

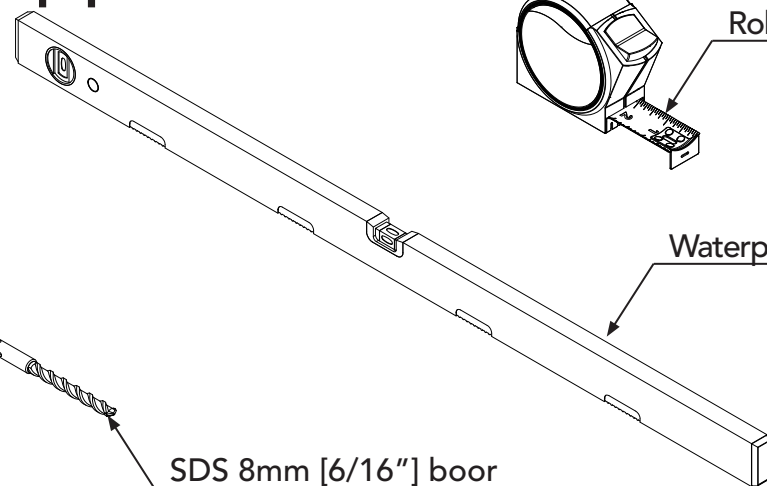

Benodigde gereedschappen

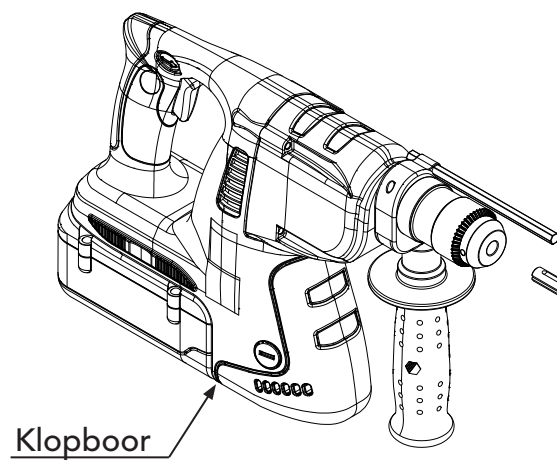

1

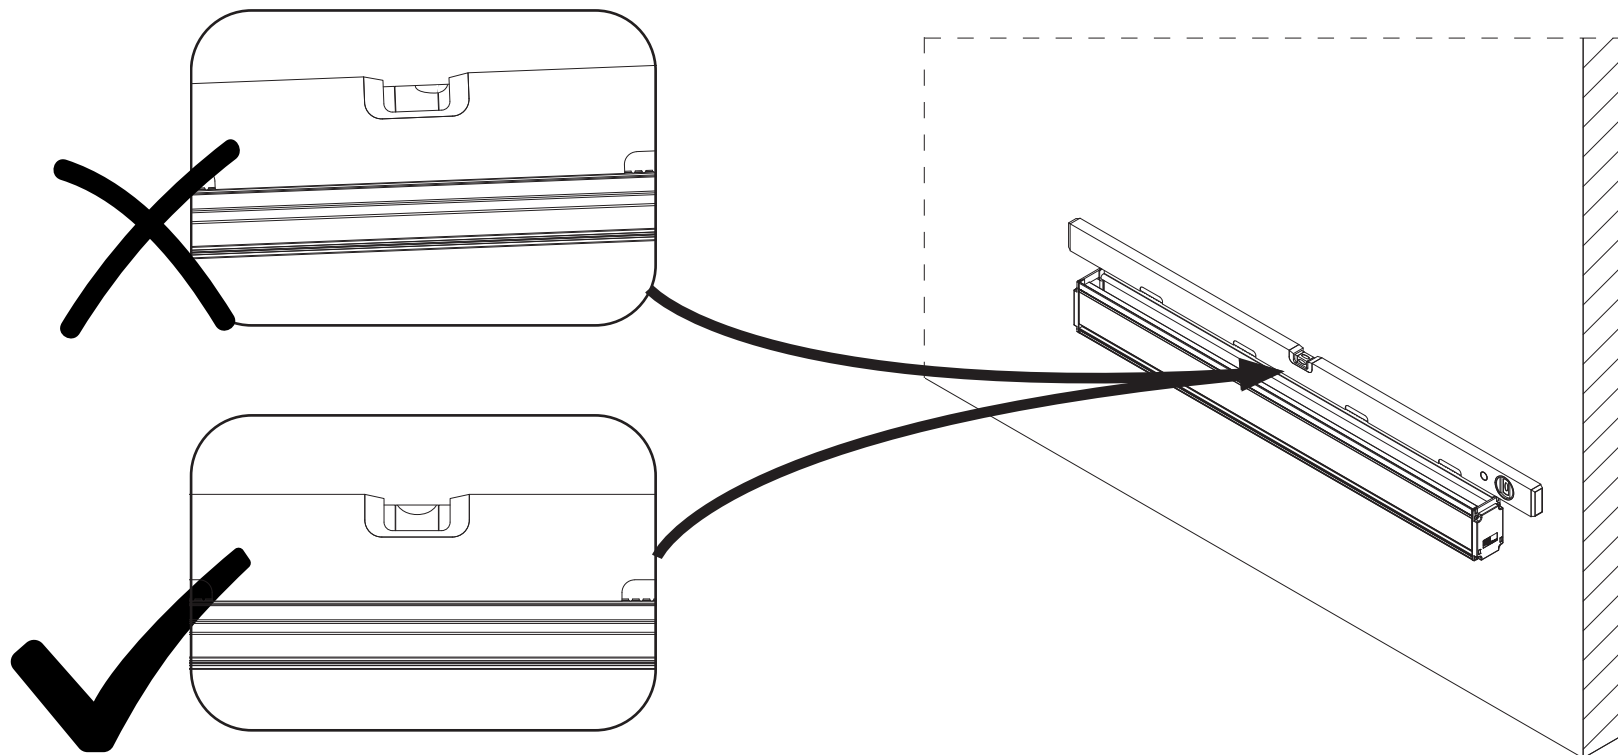

5,0x60 CK T25 RVS A2

Fischer UX 8x50

SDS 8mm [5/16"]





4Nm

2,5Nm (Gips)
>18mm


T25 Bit

60mm [2,36"]

2


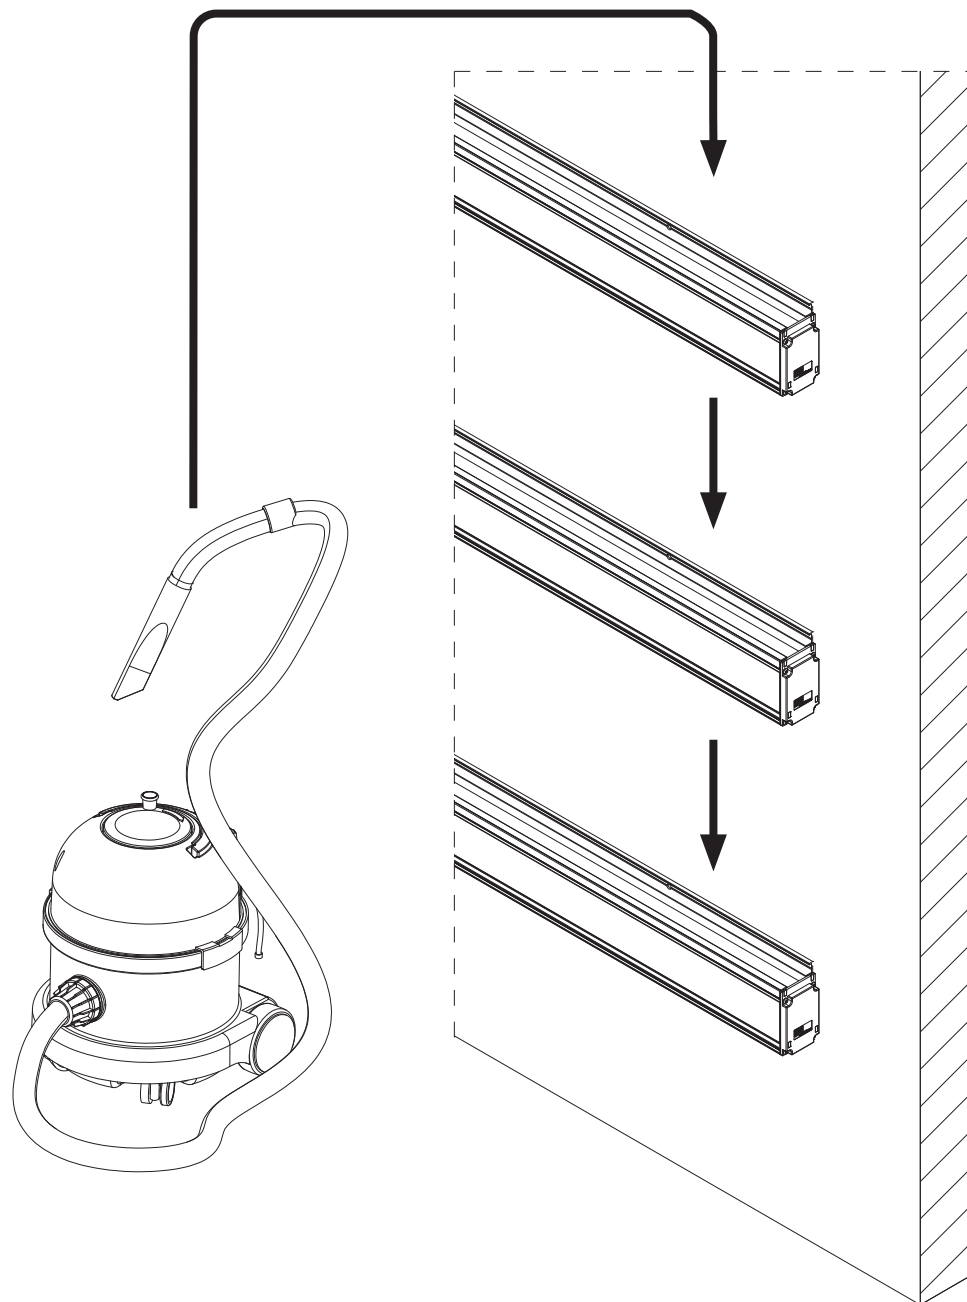
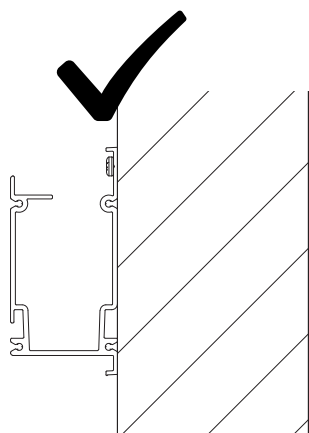
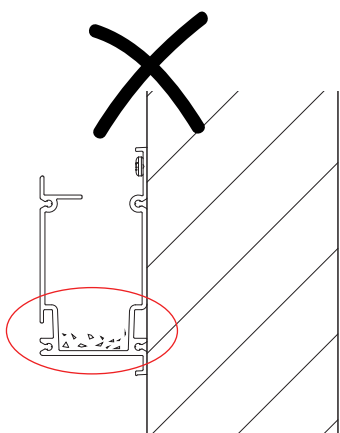
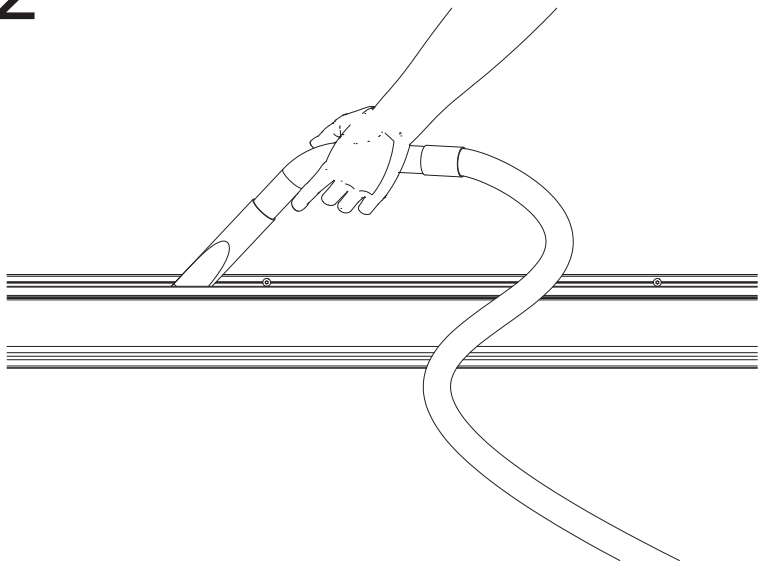


3

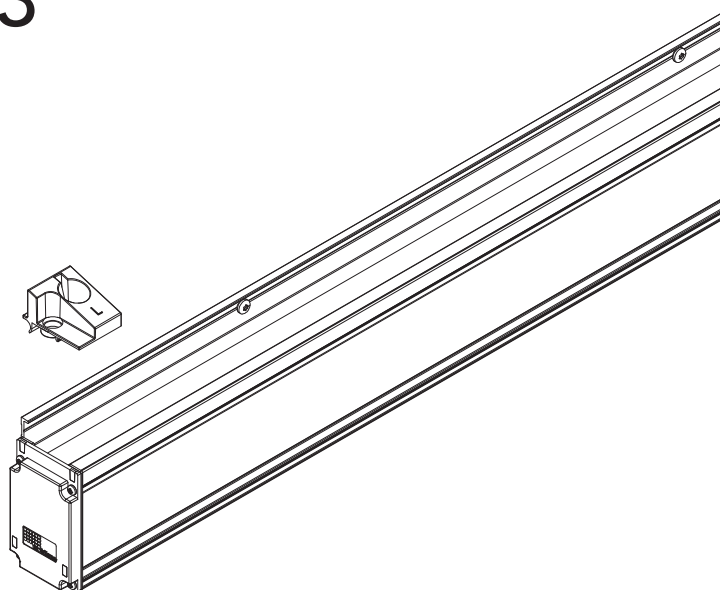

INSTALLEER
MEEGELEVERDE
VULBLOK

← OF →

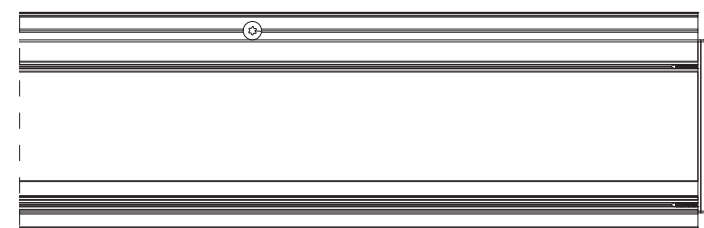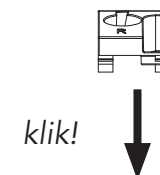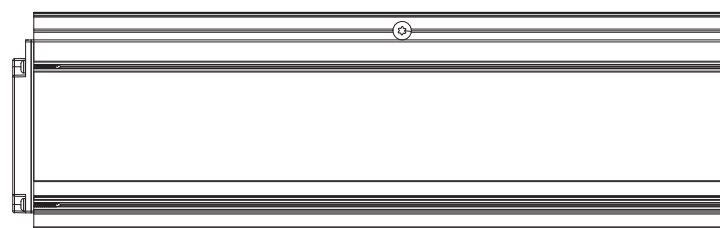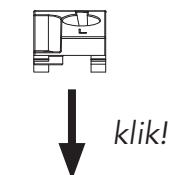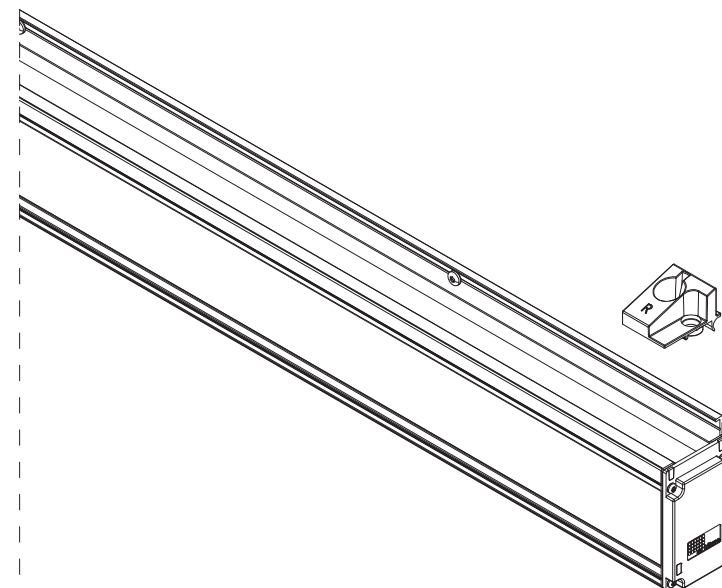



>P11
4,25"



P9
3,50"



P8,5
3,25"




P7
2,75"




P6
2,25"




4A

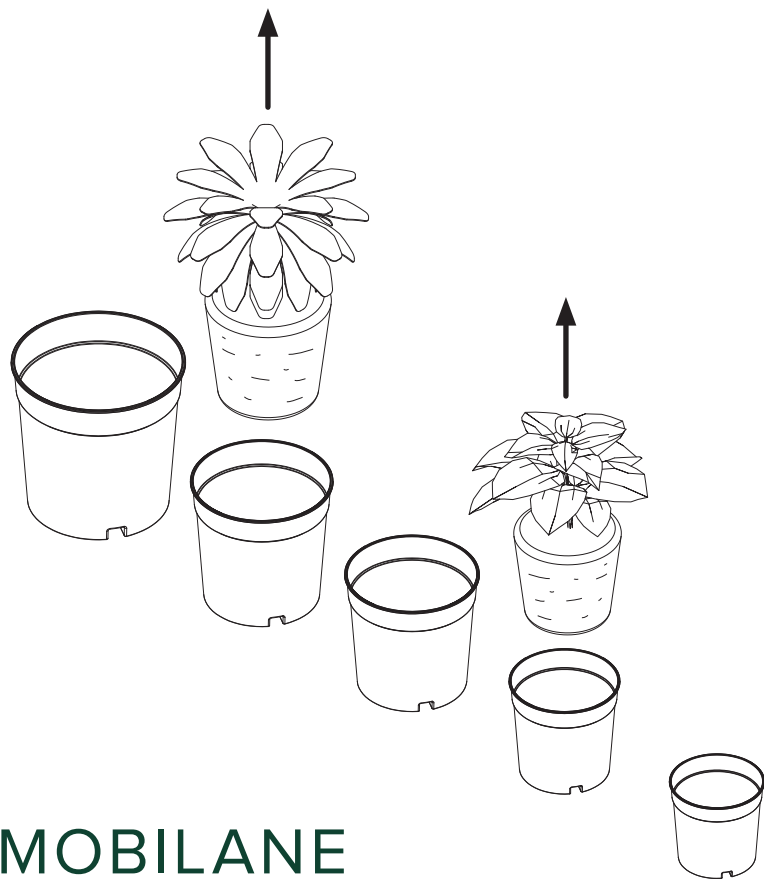


4B

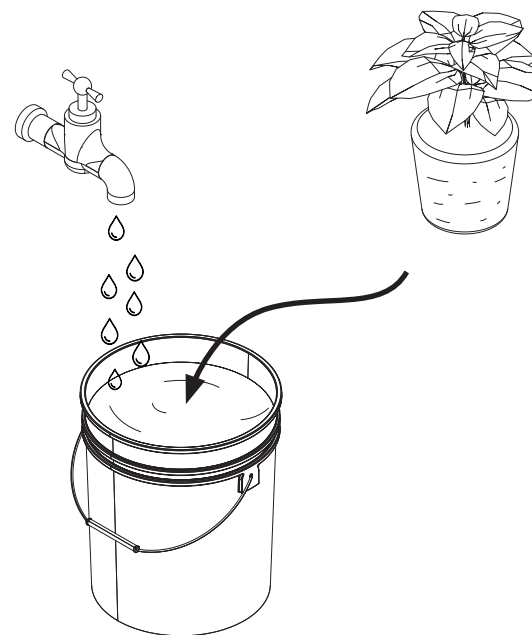



4C

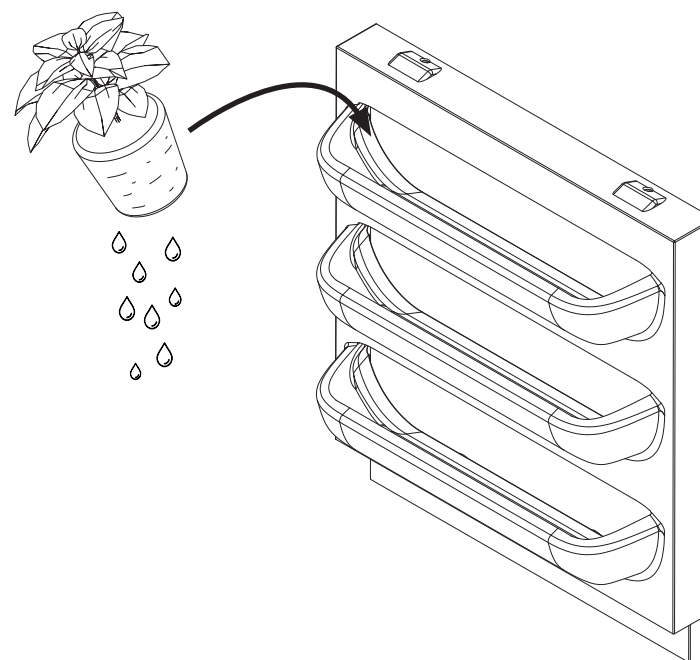



4D

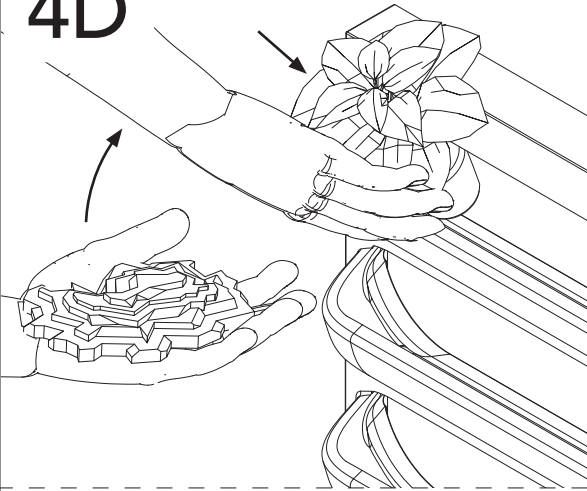


4E

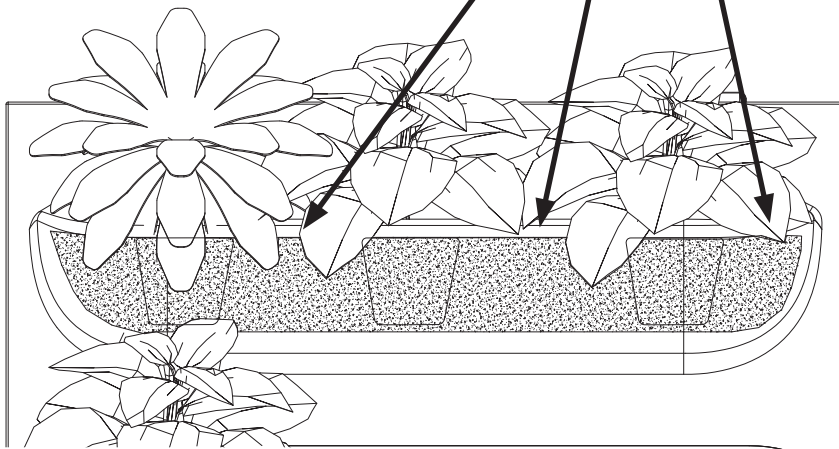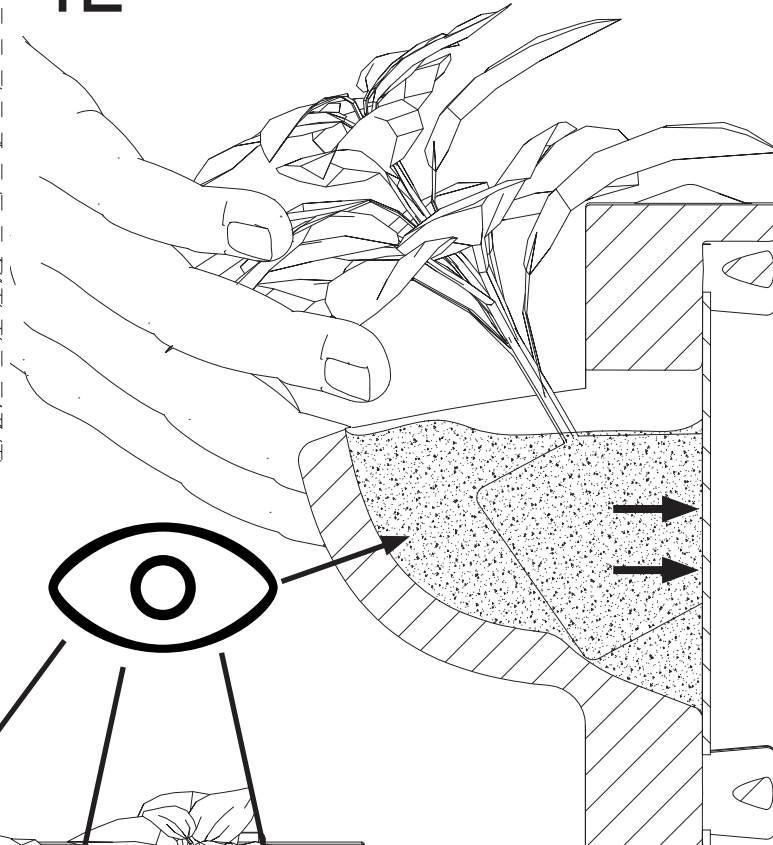


4F

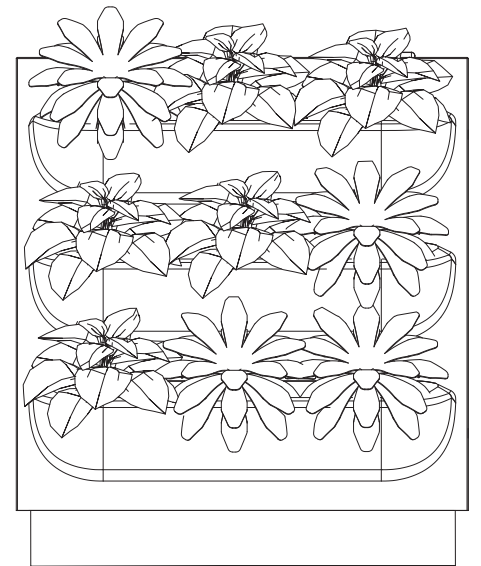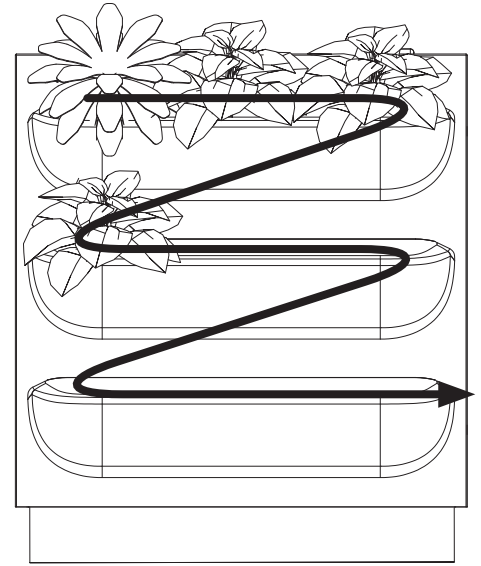





5A

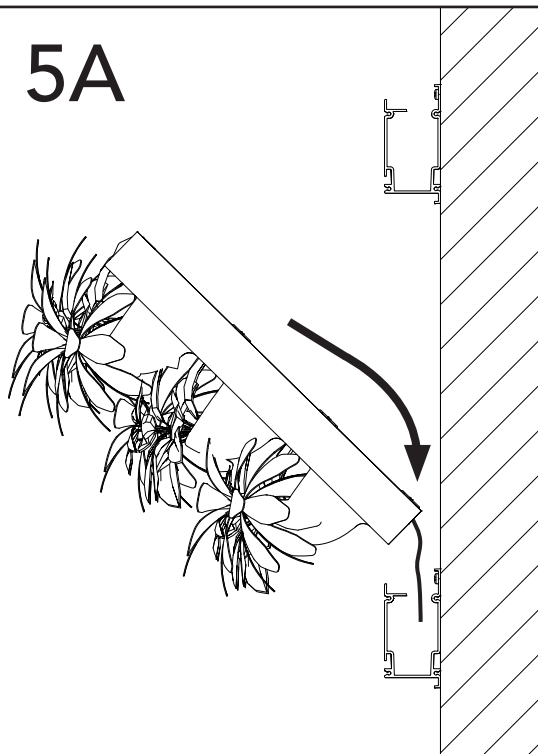



5B

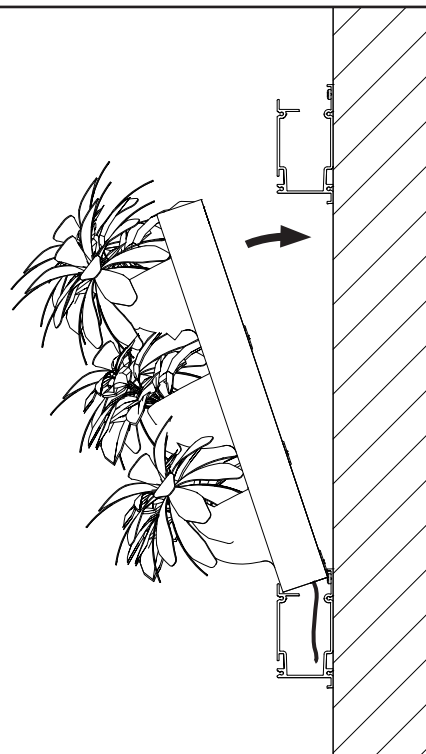

5C

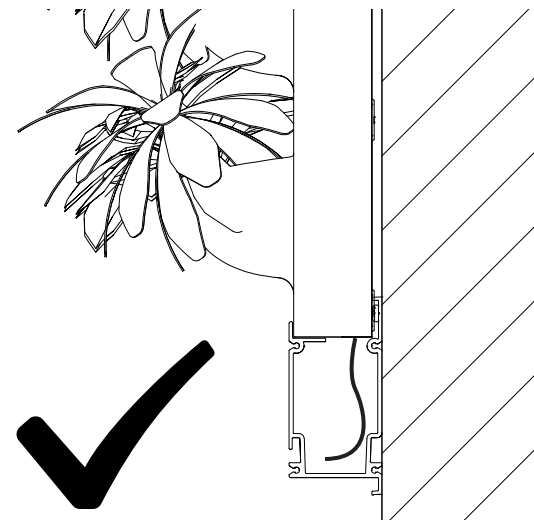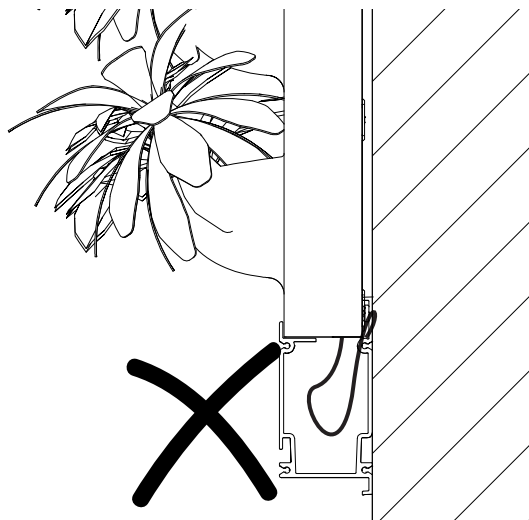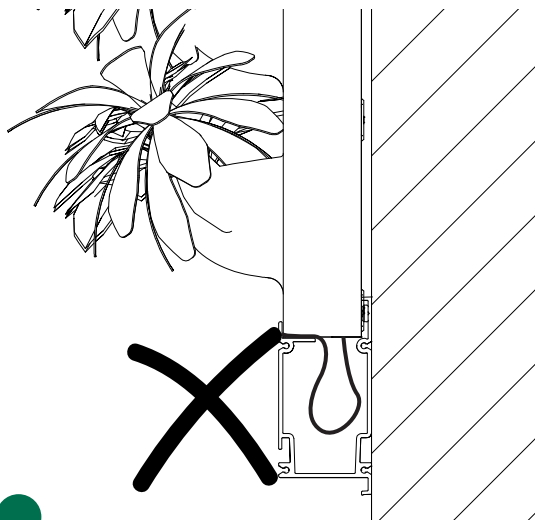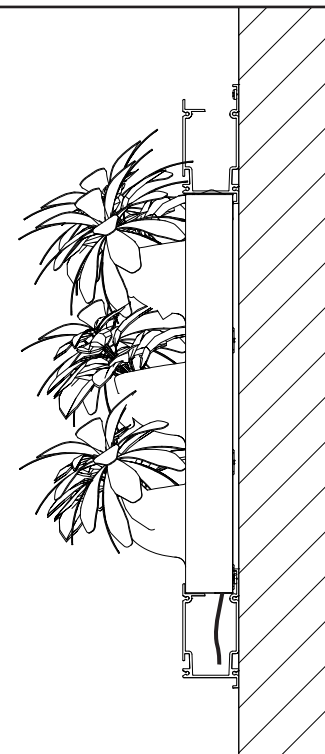

6

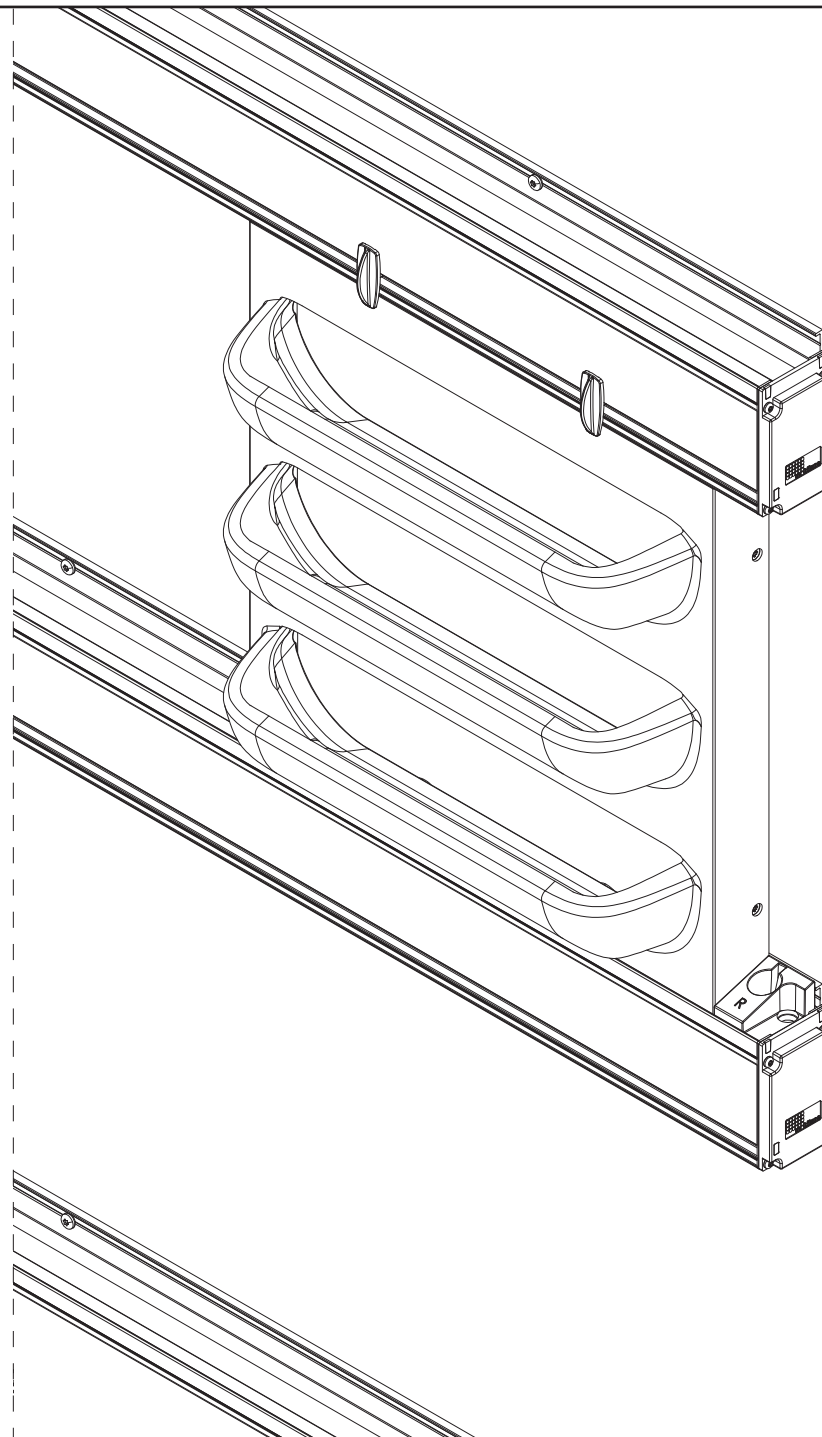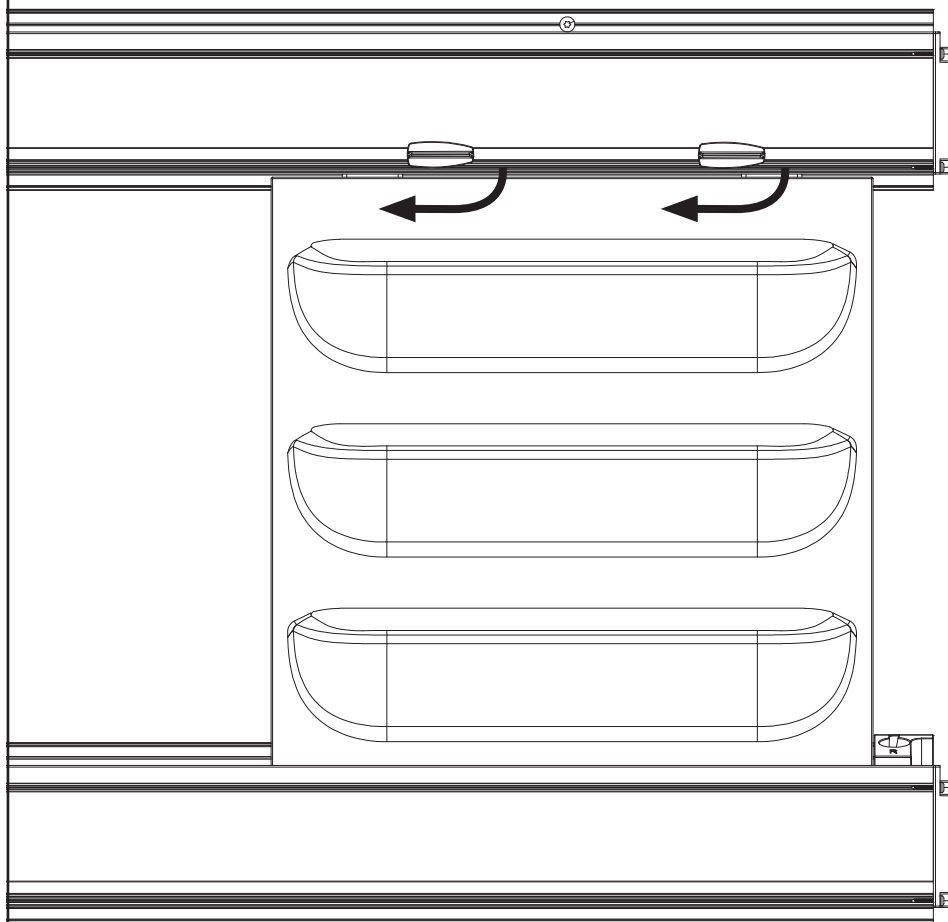

7

